


# **LABELMATE C6500 Unwinder Alignment Plate Instruction Manual**

[Home](#) » [LABELMATE](#) » LABELMATE C6500 Unwinder Alignment Plate Instruction Manual 

## **LABELMATE C6500 Unwinder Alignment Plate Instruction Manual**

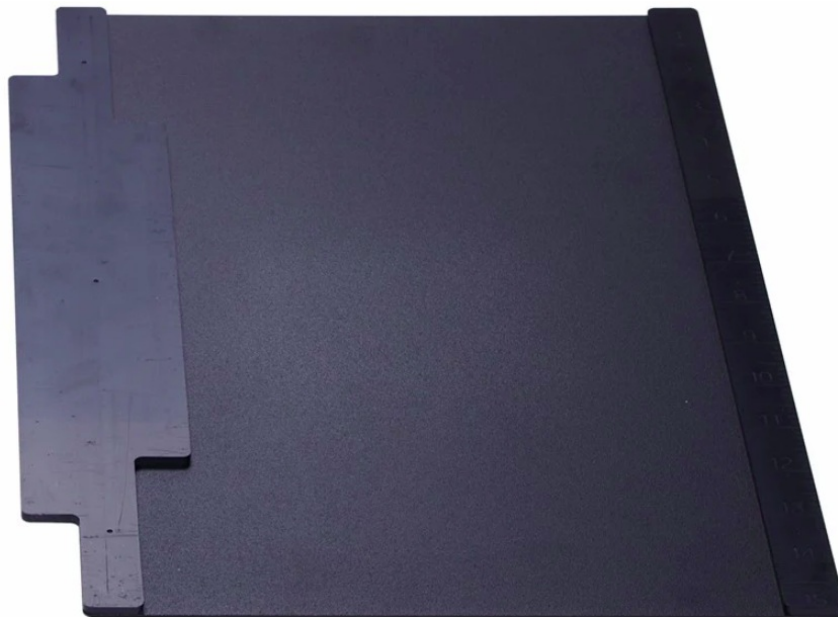

### **Contents**

[1 Arrange Alignment Plates](#)

[2 Documents / Resources](#)

[2.1 References](#)

[3 Related Posts](#)


## **Arrange Alignment Plates**

1. Position the Alignment Plates adjacent to each other with the shaped sides facing inward.




### Position Printer

2. Set the printer between the Alignment Plates, aligning its feet with the notches in the Plates.
3. Slide the Alignment Plates inward beneath the printer until they press against the printer feet.


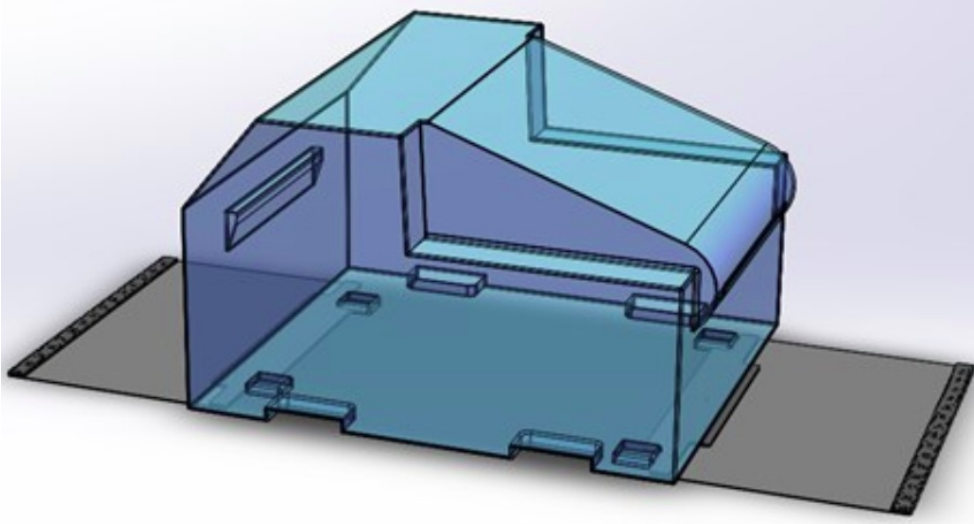


### Position Winders

4. Place Winders firmly in position next to the outer bars of the Alignment Plates.

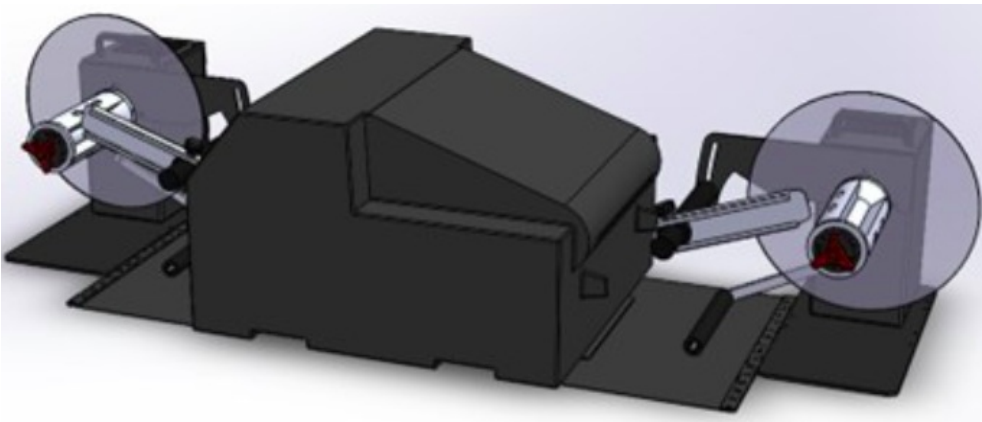

5. Align the Winders with the printer by sliding them forward/backward as necessary until the front base of the Winders is positioned at the 10.5" mark of the Alignment Plates.

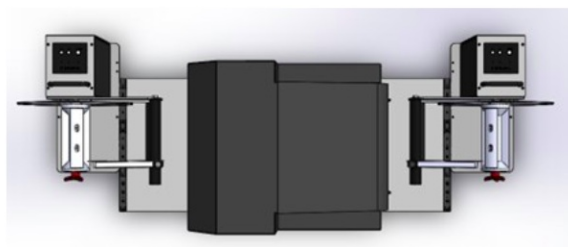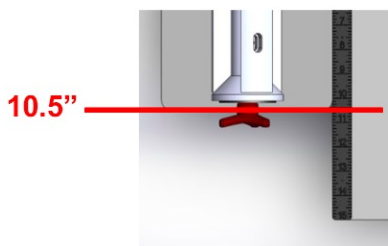

---

## Documents / Resources

	<p><a href="#">LABELMATE C6500 Unwinder Alignment Plate</a> [pdf] Instruction Manual</p> <p>C6500 Unwinder Alignment Plate, C6500, Unwinder Alignment Plate, Alignment Plate, Plate</p>
---	---

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.