

Contents [[hide](#)]

- [1 Lacidoll SC-07 Built-In Dehumidifier](#)
- [2 Precautions](#)
- [3 Product Components](#)
- [4 Maintenance](#)
- [5 Product Specifications](#)
- [6 Trouble Shooting](#)
- [7 Frequently Asked Questions](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

Lacidoll

Lacidoll SC-07 Built-In Dehumidifier







Thank you for purchasing this product. Please read the instruction manual carefully and use the product correctly and safely. Please keep it in a safe place so that you can refer to it at any time. If you have any questions or problems, please contact us using the email below. After-service Support Center Kinfo@lacidoll.com (US) / infoeuro@lacidoll.com (EU)


Precautions

Thank you for purchasing our dehumidifier LCD-CS-07. Please read this manual carefully before using. All pictures shown are for illustration purposes only. Actual products may vary due to product enhancement. For more information, please visit the official website link or scan the QR code: <https://lacidoll.com/pages/user-manual>.














Safety Warning

- Please follow these instructions carefully to prevent harm to yourself or others and avoid damage to property :
-  Warning: This symbol indicates actions that may lead to death or severe injury if mishandled.
-  Caution This symbol indicates actions that may lead to injury or physical damage if mishandled.
-  Prohibition: Indicates actions that are not allowed. Specific details are provided within the symbol or text.
-  Mandatory: Indicates actions that must be performed. Specific details are provided within the symbol or text.









-  Caution: Indicates actions that require caution. Specific details are provided within the symbol or text.








Warning

-  Do not disassemble, repair, or modify. This may cause fires or electric shock. For repairs, please consult the retailer where you made your purchase.
-  Do not immerse or splash water onto the main unit. This may cause a short circuit or electric shock.
- **Handle the power plug and cord correctly.**
-  Do not use if the power cord or plug is damaged, or if the plug loosely fits into the socket. This may cause electric shock, short-circuiting or fire
-  Do not bend, tear, pull, twist, bundle, place heavy objects on, or damage the power cord. Damaging the power cord may cause fires or electric shock.
-  Do not splash water or dirt into the socket. This may cause electric shock or short-circuiting.
-  Use the power supply with AC 100~240V only, and do not exceed the rated capacity of the outlet or wiring equipment. Damaging the power cord may cause fires or electric shock.
-  Do not insert or remove the power plug with wet hands. This may cause electric shock or injury.
-  Ensure that the power plug (socket) is securely inserted all the way to the base. This may cause electric shock, short-circuiting, or fires.
-  When unplugging the power plug (socket), always hold the plug (socket) and pull it out, without holding the cord. This may cause electric shock, short-circuiting, or fires.

-  When dust accumulates on the blades of the power plug, wipe it off with a dry cloth. This may cause fires.
-  When not in use or during maintenance, unplug the power plug from the outlet. This prevents the warm-keeping function from continuing and avoids electric shock, injury, or burns.

Warning

-  Use this product in accordance with the instructions in this manual. Any other use not recommended by the manufacturer that could result in fire, electric shock, or personal injury is prohibited.
-  To avoid the risk of electric shock, fire, or personal injury, always turn off the product before handling, cleaning, or servicing it. Unplug the power cord and empty the water tank.
-  Persons with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, including children, should not use this device unless under supervision or instruction.
-  Do not cover or block the air inlet and outlet of this product during use. There must be at least 50 cm (19.7 inches) of clearance around it.
-  Dispose of the water collected from the dehumidifier properly; this water cannot be drunk. Always place the product upright on a flat, stable surface. Operating this product in any other location may create hazards and cause water leakage.
-  Do not allow water or other liquids to enter the product as this may create a fire or electrical hazard.
-  Do not use abrasive cleaners or solvents as they will damage the device.
-  This product is suitable for indoor use in households and similar environments. Do not use it outdoors.

-  When using this device, do not remove the water tank, as it may cause water leakage.
-  This product can only be used with the supplied adapter.
-  Do not pull on the power cord, and do not move, carry, or hang the product by the power cord.
-  Avoid placing the power cord where it could cause a tripping hazard. Do not place the power cord under a rug or cover it with a similar material.
-  Do not twist or wrap the power cord and plugs around the product as this will weaken or damage the insulation, especially at the attachment points.
-  If the power cord is damaged, it must be replaced by the manufacturer, service agent, or a similarly qualified person to avoid a hazard.
-  Do not attempt to repair or adjust any electrical or mechanical components of the machine as doing so may be unsafe and will void your warranty.

Product Components



1. Handle
2. Control Panel
3. Dry Air Outlet
4. Air Inlet
5. Power Socket
6. Water Inlet
7. Water Tank
8. Drain Hose Interface
9. Drain Hose





How to Use

1. Place the dehumidifier on a stable table and connect the power adapter to an electrical outlet. After the machine is connected to the power supply, the buzzer will beep once. The humidifier goes into standby state and the panel lights up slightly.



 
Note:

- In the timer mode, the digital light can change with the remaining time. For example, if the timing is 24 hours, when the remaining time reaches 16 hours, the 24H light goes out and the 16H light comes on. When the remaining time is 0, the machine stops running and enters the standby state.
- In the standby state, if the water tank is not put in or not installed properly, or the water tank is full, a flashing red icon will appear on the display ☹, and the panel cannot be operated. After the water tank is installed correctly, the icon disappears.


 Power Button	Press to turn the dehumidifier on. The machine will operate in turbo mode, with the 7-color gradient light (changing colors every 10 seconds) turned on by default. Touch the button again to stop operation and return to standby mode.
 Sleep Mode Button	Press to turn sleep mode on. The fan speed will decrease, and the screen will turn off. Any touch on the screen will light it up, and pressing this button again to turn off sleep mode.
 Timer Button	Press to switch timer options between 8/16/24 hours. To stop this function, press repeatedly until the hour indicator light turns off.
 Night Light Button	After turning the machine on, the 7-color gradient light (changing colors every 10 seconds) will turn on by default. Press to fix your preferred color, and press it again to turn off the light.

Maintenance

Two Drainage Methods for Pouring out water Drain the Tank without Drain Hose

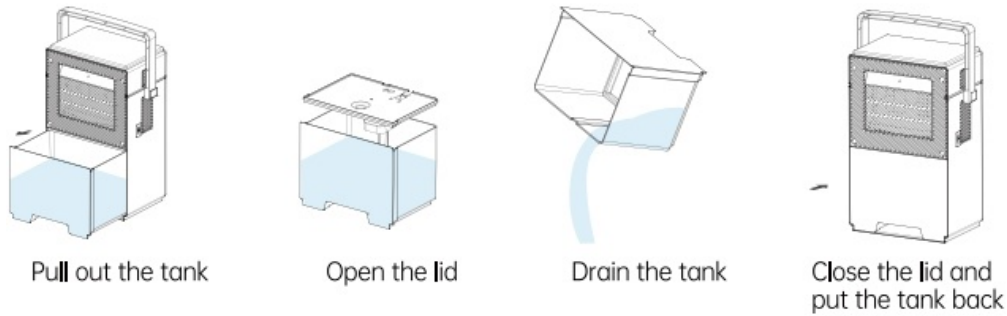

Drain the Tank with Drain Hose

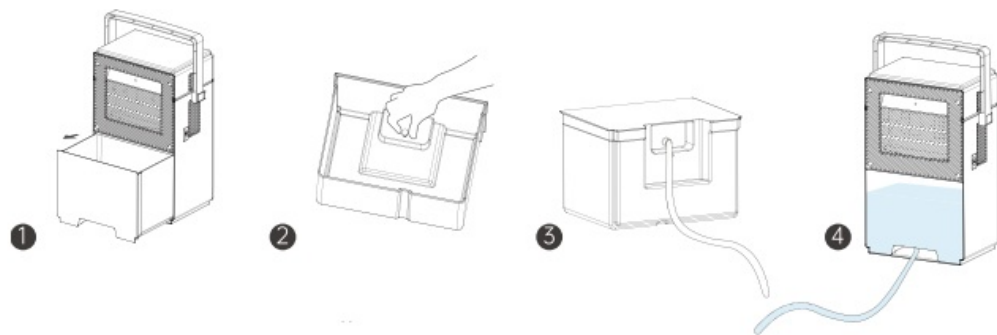 


1. Pull out the tank and remove the cover
2. Remove the plug from the water tank bottom and save
3. Insert the hose into the water tank's bottom drainage hole
4. Put the tank back and place the hose end into floor drain or sink

Cleaning the Water Tank


- Warning: When not using this product, do not leave water in the water tank. The accumulated water may breed microorganisms.
- The water tank should be emptied and cleaned regularly; tank should be cleaned at least weekly, or before storage, to prevent mold and bacteria growth.



 Cleaning the water tank with detergent.

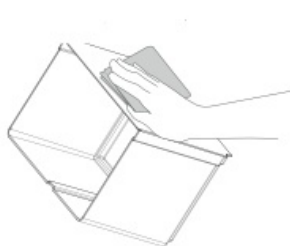

 Wiping off water droplets on the surface of the tank

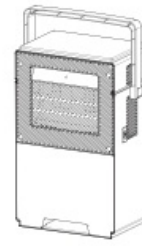

Reinstalling the tank

1. Clean the tank with mild detergent and tap water.
2. Remove any scale or deposits that have formed in the tank.
3. Wipe and clean the surface of the water tank before putting it back into the device.

Cleaning and Storage

Warning:

 
- Always turn off the device and unplug the power cord before handling or cleaning the product.

Note:

- Do not use any abrasive cleaners or solvents as this will damage the device;
- Do not allow water or other liquids to flow inside the device as this may create a fire or electrical hazard.

Exterior Cleaning

- To clean the exterior of the product, wipe with a soft, dry cloth to remove dust or light

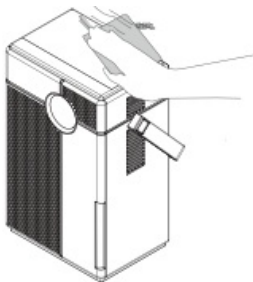


residue.


Storage

1. Before storage, ensure that the equipment and water tank are clean and dry.

 2. If you store your products by season, we recommend using the original packaging or a box of similar size.
3. Do not wrap the power cord and plug around the product, as this may damage or tear the insulation, especially where it is connected to the product.
4. Store the device in a safe, clean, dry place when not in use.

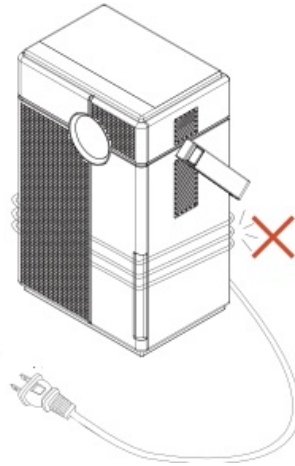

Product Specifications

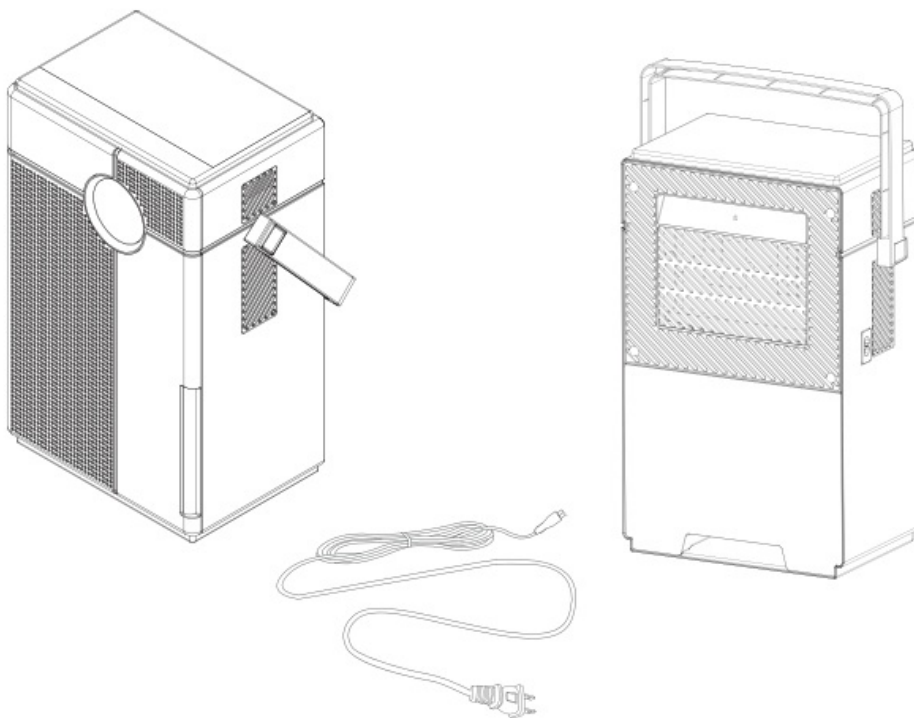 

Product Name	Dehumidifier
Model Number	LCD-CS-07
Dimensions	8.27*5.83*13.98 inches
Rated Voltage	AC100-240V~
Rated Frequency	50/60Hz
Rated Power	85W
Water Tank Capacity	118 OZ
Working Environment	59°F-104°F, > 45%RH

Trouble Shooting

Questions	Reasons	Solutions
Device is not running.	Power outage or disconnection.	Check the power.
	The power plug is not inserted correctly.	Insert the power plug.
	Timer mode has run out of time.	Press the timer to exist the timer mode or restart the device.
Low moisture removal capacity.	Air inlet or outlet blockage.	Remove obstructions from the air inlet or outlet.
	Indoor humidity is too low.	It is recommended to use a dehumidifier when the indoor humidity is above 60%.
	Running more than two dehumidifiers in the room at the same time.	Please reduce the number of dehumidifiers.
Long time operation still can not achieve the purpose of moisture removal.	Are the doors and windows closed?	Please close the doors and windows.
	Whether there is a heat / moisture source in the room.	Please adjust / close.
	Too much space/area inside.	Use in a suitable room.
The device is leaking.	Tank is full of water.	Empty the water tank.
	The device is tilted.	Place the device smoothly.
	The water tank is not installed properly/not positioned correctly.	Place the water tank correctly in the device.
	The water tank is broken.	Contact supplier to replace water tank.
	Water tank float dropped /out of position.	Re-installation of the floater.
Note: If the above analysis still cannot eliminate the fault, please contact our after-sales service.		

Warranty

Warranty Period

- Our company provides a one-year warranty starting from the date of purchase.
- If you need to return the product, please make sure that it is intact and that the packaging boxes and accessories are complete.

Non-Warranty Policy

- The following conditions are not covered by the warranty:
- Damage that occurs after the warranty period has expired.
- Damage caused by natural disasters or other force majeure events.
- Any damage caused by use that does not follow the requirements outlined in the

User Manual.

- Failure or damage caused by the forced use of the product.
- The user disassembles or repairs the product without authorization.
 - **Warranty Requirements**
- In order to receive warranty service, please follow these steps: Provide the warranty card and the order number.
- Describe the problems you are experiencing in detail and provide pictures or videos if possible.
- Send an email to info@lacidoll.com (US) / infoeuro@lacidoll.com (EU)
- Please note that we cannot provide warranty service if you are unable to provide the above information.
- Thank you for choosing our product, and we hope you enjoy using it. If you have any questions or concerns, please don't hesitate to contact us.

Frequently Asked Questions

Q: Can this product be used to heat liquids other than water?

A: No, this product is designed specifically for heating water and should not be used with other liquids.


Q: Is it safe to leave the product unattended while in use?

A: It is not recommended to leave the product unattended while in operation for safety reasons. Always supervise the product during use.

Q: How often should the product be descaled?

A: Descaling frequency depends on usage. It is recommended to descale the product every 1-2 months to prevent mineral buildup.

Documents / Resources

	Lacidoll SC-07 Built In Dehumidifier [pdf] User Manual SC-07 Built In Dehumidifier, SC-07, Built In Dehumidifier, Dehumidifier
---	---

References

- [User Manual](#)

📁 Built-In Dehumidifier, Dehumidifier, Lacidoll, SC-07, SC-07 Built In

📁 Lacidoll Dehumidifier

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.