


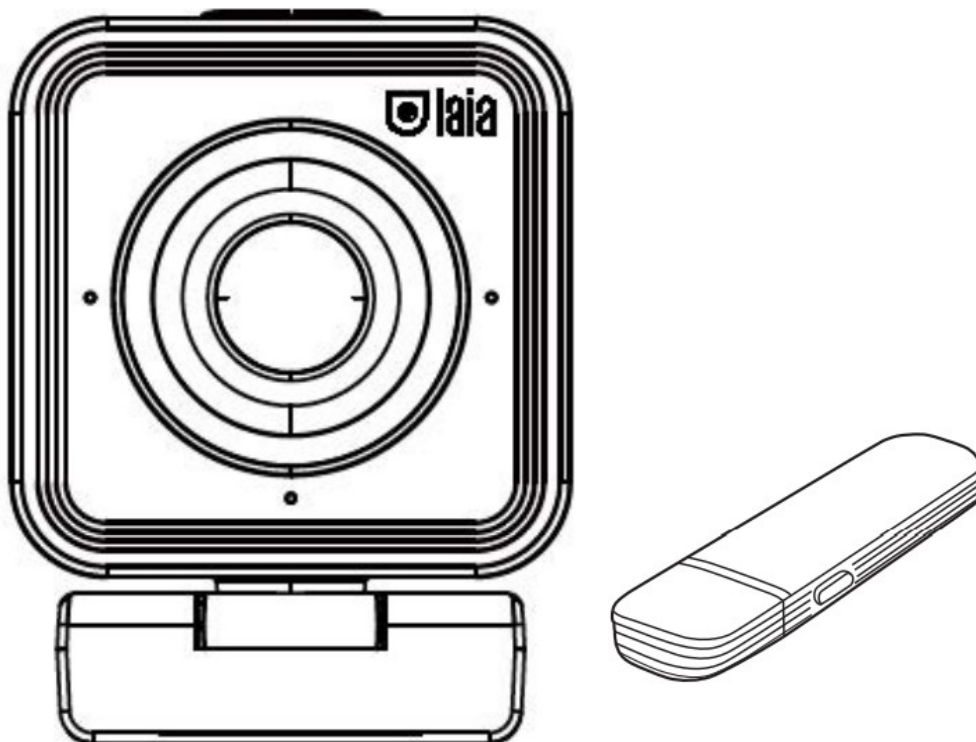


## Laiatech BHC-110WF Web Camera User Manual

[Home](#) » [Laiatech](#) » Laiatech BHC-110WF Web Camera User Manual 



THE AI & IoT CAMERA COMPANY  
THE AI B&H PC PRO WIFI






P/N: BHC-110WF

### Contents

- [1 Know your product](#)
- [2 What's in the box](#)
- [3 Product features](#)
- [4 Safety precautions](#)
- [5 Camera led indications](#)
- [6 Setting up](#)
- [7 Maintenance tips](#)
- [8 Troubleshooting](#)
- [9 Tips for Microsoft Teams](#)
- [10 Product specifications](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)


## Know your product

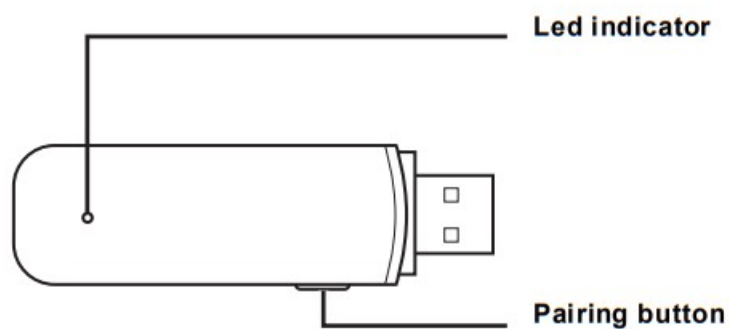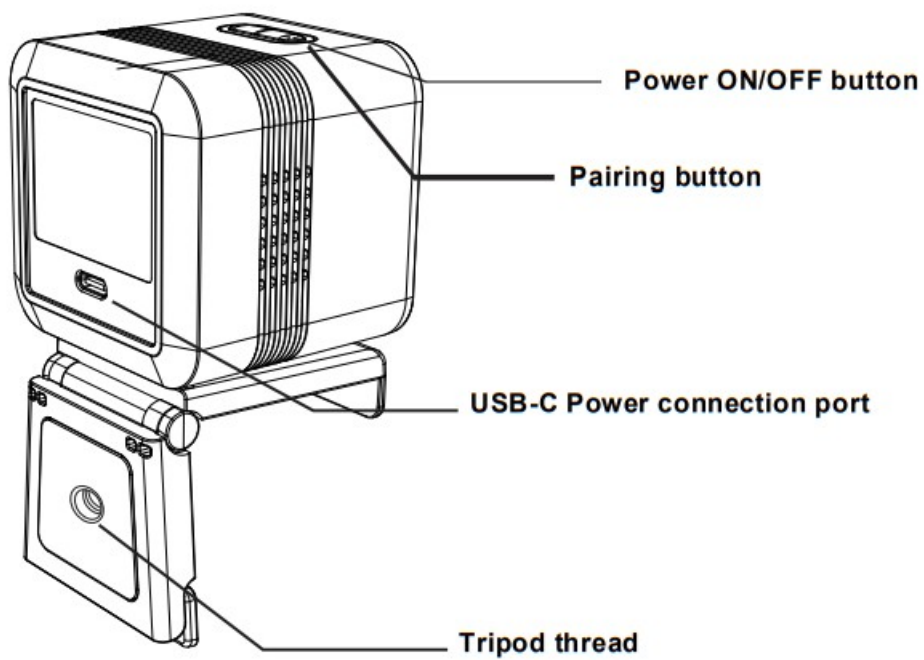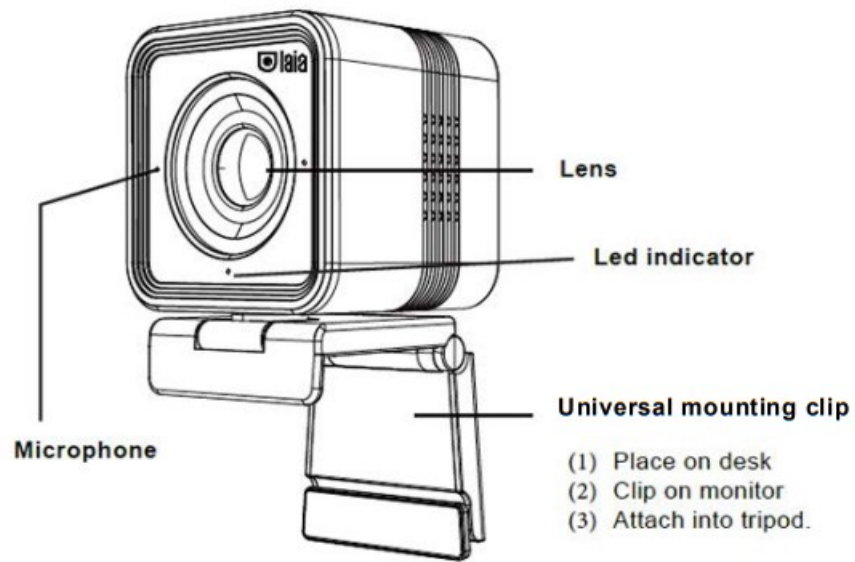

**What's in the box**



x1 USB A - USB C 116cm cable

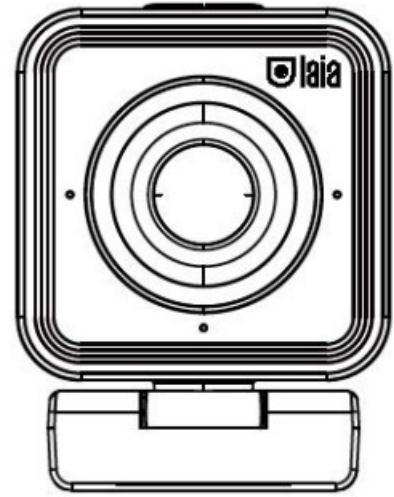

x1 Wireless cam



x1 USB-A dongle receiver



x1 User manual

## Product features

Laila PC Pro WiFi is a wireless 2.4 GHz camera that does not require a cable connection. Powered by its built-in lithium battery, it offers you more than 3 hours of use with a single charge, but it is also possible to use it while charging through USB-C cable. In addition, its built-in universal mounting clip offers 360° rotation and 110° inclination for quick and easy camera placement and adjustments.

PC Pro WiFi can be used at a maximum distance of about 20 meters in a straight line without obstacles in a proper RF environment. The range of use varies greatly depending on the environment. It supports UVC and UAC (2.0 and downward compatible) protocol, so it is not necessary to install any extra drivers. Simply plug in the included USB receiver and it will work automatically.

It is also compatible with the main video conferencing services on the market such as Microsoft Teams, Zoom and Skype. Supporting 1080P Full HD can provide image encoding output of 1080@30fps thanks to its USB 2.0 interface. The field of view offers up to 65.5° degrees horizontally and 73° degrees diagonally, along with the built-in microphone that offers room sound pickup at a 180° angle.

## Safety precautions

### Product handle

Do not handle any element or touch the product itself with wet hands, and do not allow substances such as liquids and metals to get inside the product as this could cause a short circuit.

Before cleaning the product, it must be completely disconnected from the power supply. To connect and disconnect the cable from the product, hold the connector firmly, without applying excessive force.

As it is an electrical product, if you notice smoke or a strange smell coming from the product, immediately turn off the device and disconnect its power supply.

## Transportation and installation

The transportation and installation process must be done carefully to avoid vibrations and impacts that may damage the product or affect its correct operation.  
Do not step on or deform the charging cable or place it near a heat source, as it may cause malfunction and risk of short circuit.

### Do not disassemble

This product has no user-serviceable parts. Damage caused by the user is not covered under warranty.


\* If you use a router or firewall to connect to the Internet, you may not be able to use Internet-based functions such as video chat.

### Camera led indications


	Camera USB receiver		
	Red	Green	Green
Lighting	Charging	Connected	Connected
Slow flash	Low battery	Disconnected	Disconnected
Fast flash		Pairing	Pairing

### Setting up


1. Charge Webcam battery: Use an standard USB charger (not supplied) or connect to a USB port of a computer to charge the battery using the supplied USB cable.

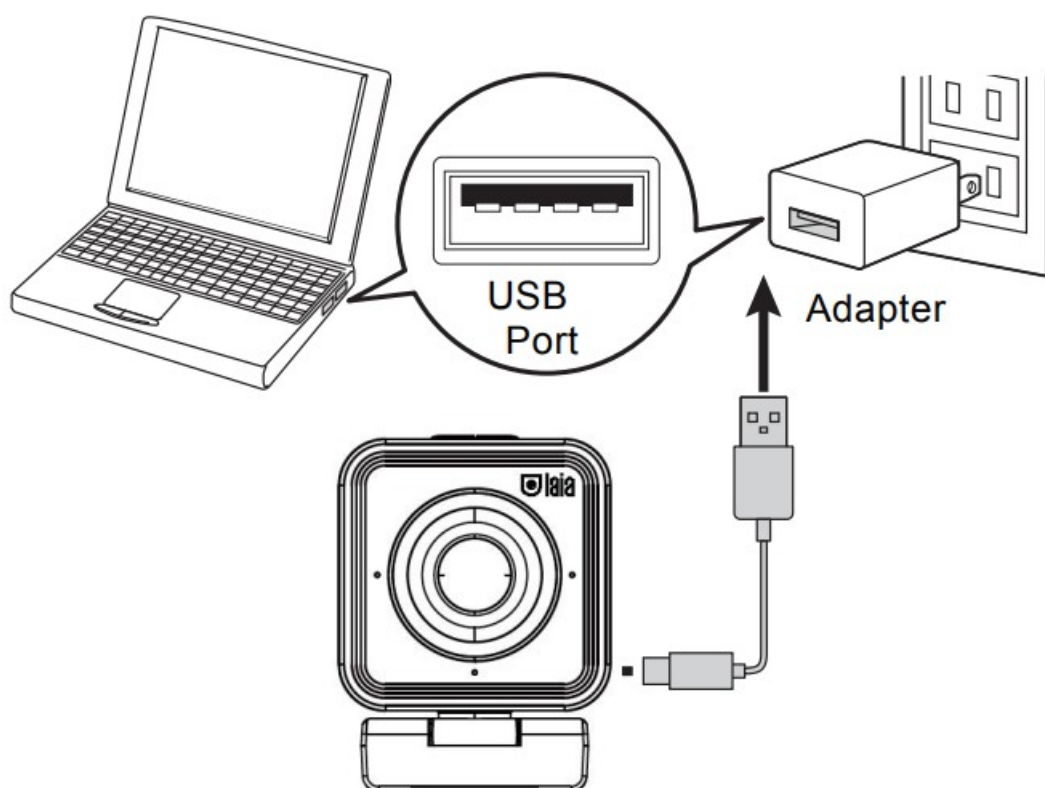

2. Placement:-For placement on a monitor: Place the webcam on a computer, laptop or monitor at a position or angle desired. Adjust the webcam to make sure the foot on the universal mounting clip is flush with the back of your device. Manually adjust the webcam left/right & up/down to the best position to frame yourself.  
– For placement on a tripod: Locate the 1/4 inch tripod thread on the bottom of the universal mounting clip. Secure the webcam on your tripod by twisting it into the 1/4 inch thread. Place the webcam with the tripod anywhere you desire to the best position to frame yourself.

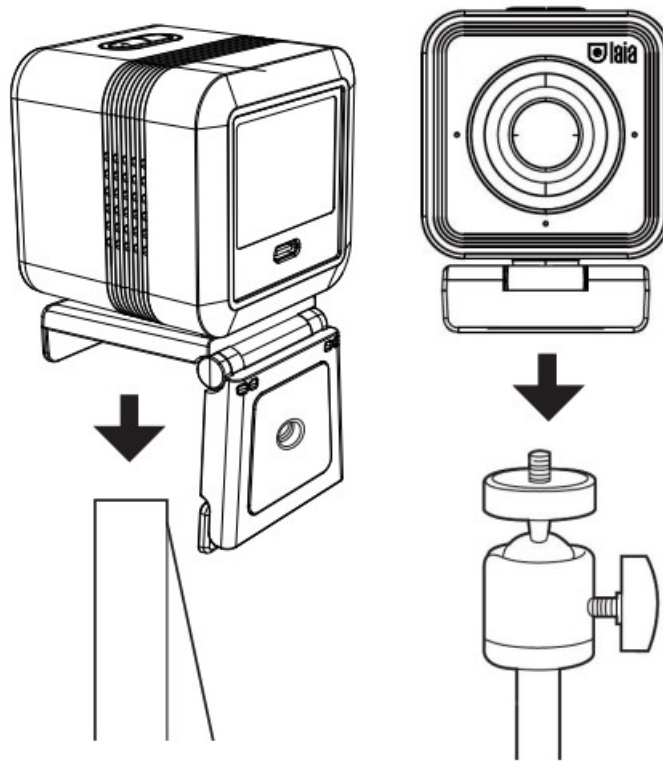

3. Connection and use: Connect USB receiver to your computer and it will start flashing. Then press the On/Off button to turn on the camera and the green led will light up. The device is ready for use.

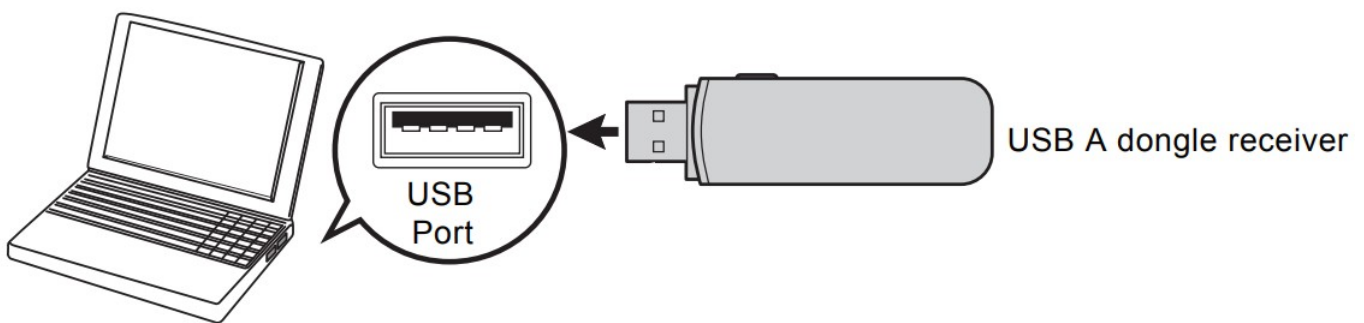

Camera automatic power off function: If you turn off your computer while the camera is on, the camera will automatically turn off.

#### **Cautions:**

- Do not stack this product on top of each other or place heavy objects on top of this product as it may cause malfunction.
- Do not install or store the product in a place with high humidity, direct sunlight, high temperature, or dirt and liquid.
- Do not use close to high-power RF devices, such as radio transmitters.

#### **Maintenance tips**


##### **Maintenance of camera**

- If the camera is not used for a long time, please turn off the power switch after use.
- Use a soft cloth or cotton paper to remove dust from the camera case.

- When cleaning the camera lens, please use a dry soft cloth to clean it and if the dirt is heavy, please use a neutral cleaner gently. Do not use strong or corrosive detergents, to prevent the lens from being scratched and affecting the correct operation and image quality.

## Troubleshooting


### How to re-connect?

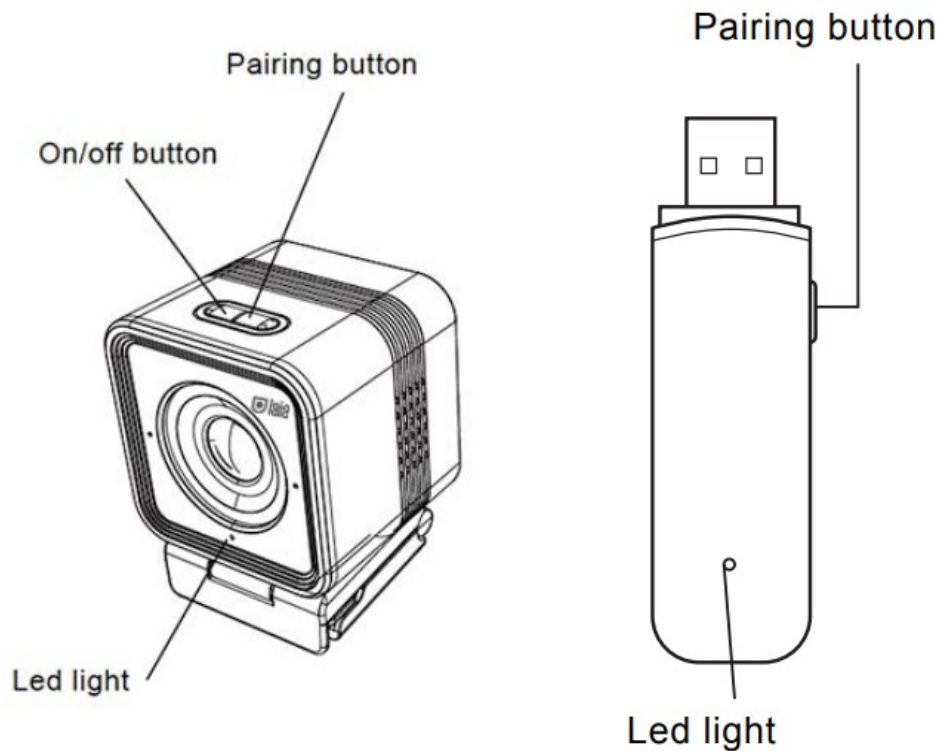

1. Turn on the camera and the green led will start blinking slowly.
2. Press the pairing button on the camera and connect the USB receiver to the computer.
3. After the receiver flashes, press the pairing button.
4. When both LEDs turn solid green, the connection is complete.


### How to check if camera is working correctly?

## WINDOWS 11

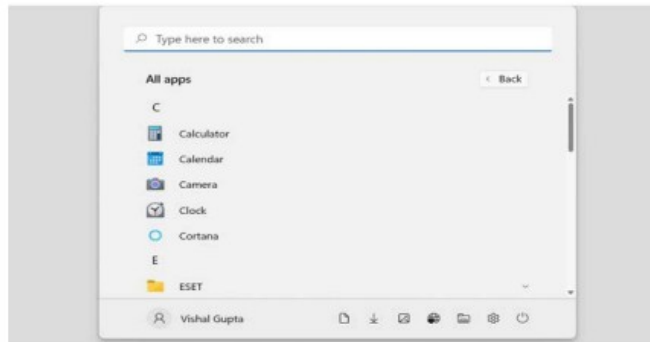

Open App menu  
and select camera


## WINDOWS 10

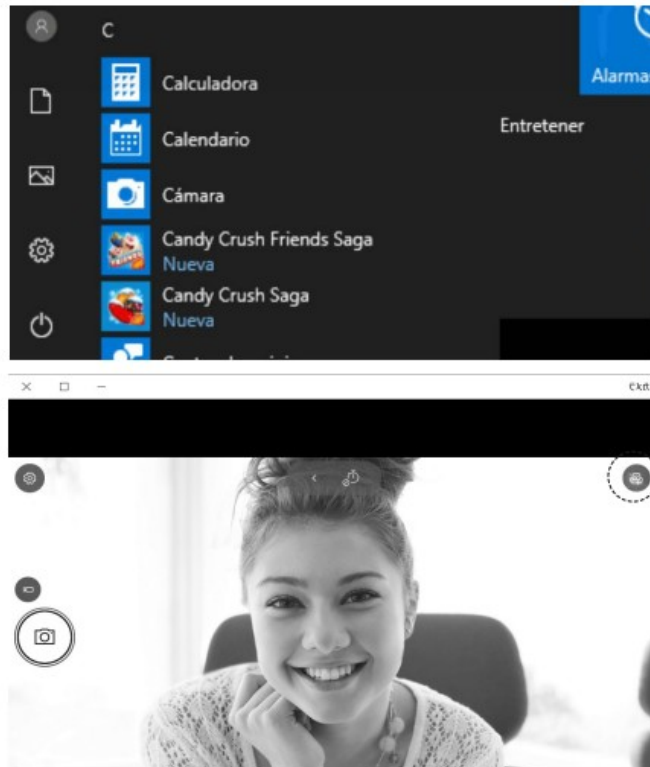

Open App menu  
and select camera

When multiple  
webcams connected,  
click "switch camera"

## MAC OS

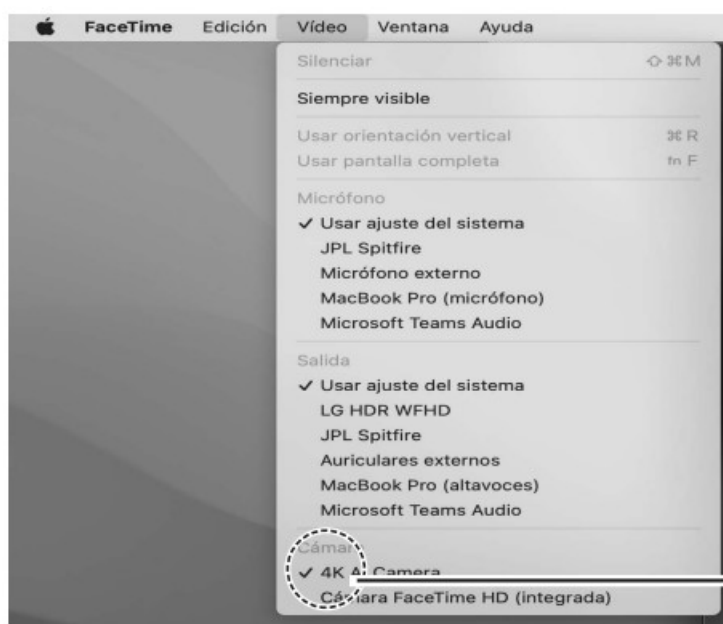


Open Face Time, select video  
settings and click on camera  
name

## Tips for Microsoft Teams

Fine-tuning of Laila PC-Pro WiFi with Microsoft Teams.

You have easy access to webcam controls to adjust the basic and advanced settings of your webcam from the Microsoft Teams settings menu.

Click on the dropdown “More actions” near your profile picture at the top of the app, then select Settings

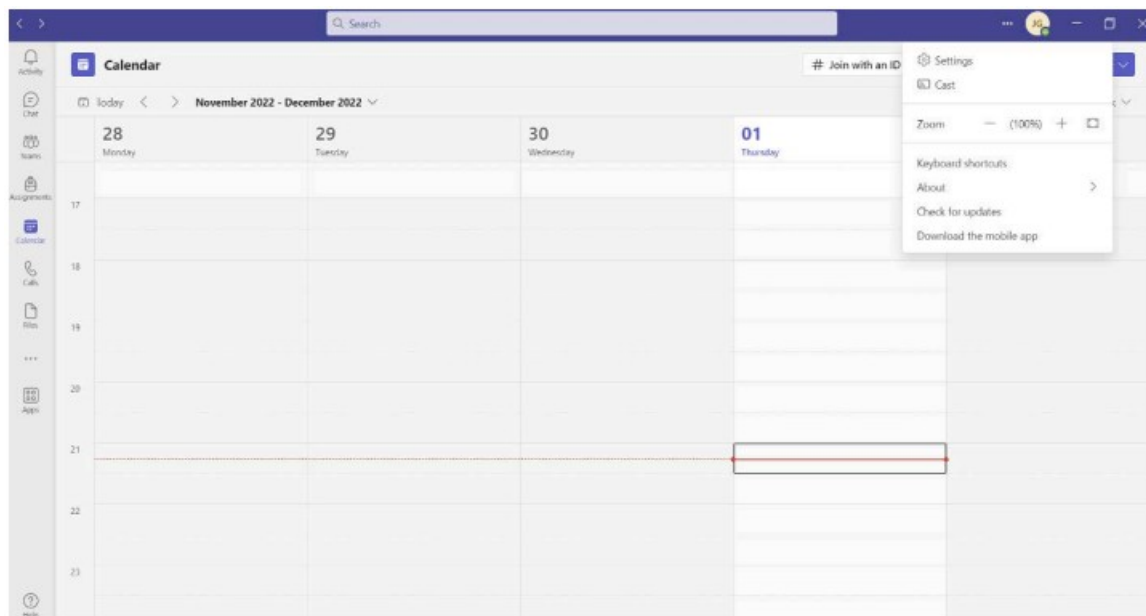

Select Devices and scroll down to the “Camera section” Uncheck “Automatically adjust camera controls” box and click “Open camera settings”

## Settings

- General
- Accounts
- Privacy
- Notifications
- Devices
- App permissions
- Captions and transcripts
- Files
- Calls

Auto (Default)



### High fidelity music mode



Show the option in meetings to deliver high fidelity sound. [Learn more.](#)

### Secondary ringer

None




### Camera

☐ Automatically adjust camera controls

[Open camera settings](#) ⓘ

Laia PC WiFi

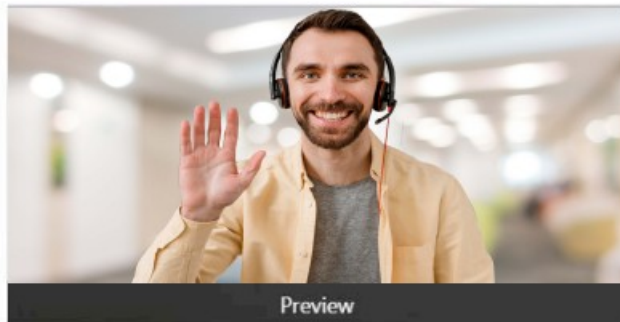


Adjust brightness ⓘ




Properties window will appear.

If you need to correct the image due to poor lighting environments, click the “Video Proc Amp” tab

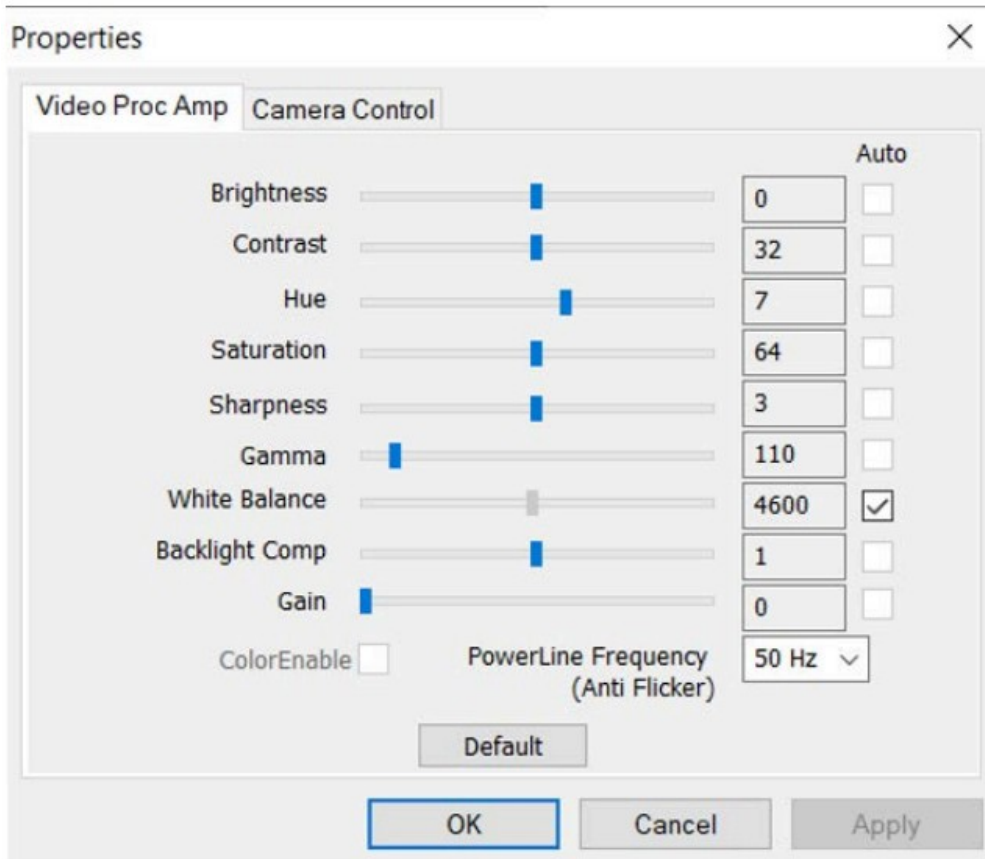

Adjust the advanced settings of your camera accordingly to get a better image quality, then click the “Apply” button to confirm your selection and finally click the “OK” Button to save and close “Properties” window.

#### Click on Camera control

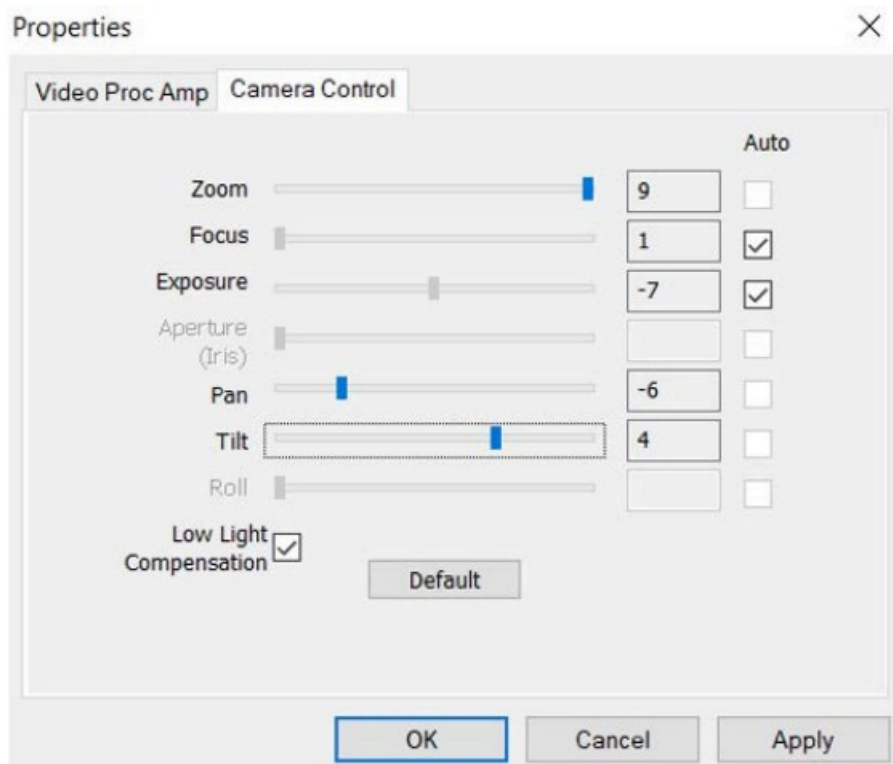

- Adjust Zoom in or out to include/exclude your surroundings.
- Use Pan and Tilt to find the best angled.
- Click the “Apply” button to confirm your selection.

– Click the “OK” Button to save and close “Properties” window.

## Product specifications

### Camera

Sensor	1/2.9" CMOS
Resolution	1920 x 1080 Pixels
Total pixels	2.07 M
Min. illumination	0.5 Lux
Output Image Format	MJPEG/YUY2/H.264
Frame rate (max)	1080p@30fps
SNR	58dB
Focus type	Fixed focus
Minimum object distance	0,3 m
Field of view	Diagonal: 73°±5%, Horizontal: 65,5° ±5%
Color bit depth	24 bits
UVC / UAC	2.0 and downward compatible
USB Protocol	USB 2.0 (Up to 1080p@30fps capable)
Others	Auto Exposure (AE) / Auto White Balance (AWB)

### Microphone

Number	1
Type	Electret
Pickup distance/coverage	Max 3m with 180° (horizontal)
SNR	58dB
Sensibility	-34dB
Frequency response	100Hz- 8KHz
Audio processing	No

### General

OS Support	Windows 8/8.1/10/11,mac OS Monterey, Bogus, macOS 10.12 to 10.15 and Chrome OS* (*Some apps may not support external cameras)
System requirements	CPU: Intel(R) Core(TM) i3 1.2GHz or better RAM: 2GB or higher Minimum free hard disk space: 1 GB USB: At least 1 free USB port
Compatible software	Zoom, Microsoft Teams, Google Meet, Cisco WebEx Meetings, Skype, Go Facing.
Camera connector	USB-C female. Only power
WiFi dongle connector	USB-A male
Tripod Mounting Option	Yes. Standard, ¼ inch thread
Package dimensions/	126 x 120 x 69mm
Package weight	270g
Camera dimensions(folded)	60 x 57 x 79 mm
Camera weight	160g
Dongle dimensions	74 x 22 x 9mm
Dongle weight	10g
Operating temperature	0°C to +45°C
Operating humidity	20% to 80%
Storage temperature	-10°C to +60°C
Storage humidity	20% to 95%
Supplied accessories	116cm USB-A USB-C cable
WiFi band	2.4GHz/Channels 1-13 with dynamic allocation
Camera input voltage	DC 5V (USB C)
Camera consumption	450mA – 800mA
Battery Type	Li-Polymer
Battery Capacity	3.7V/1500mAh
Battery Life	300 cycles
Battery autonomy	Up to 3h
Battery charging time	Up to 3h
Low battery warning	25' ± 5'
WiFi Dongle input voltage	DC 5V (USB A)
WiFi Dongle consumption	Less than 300mA/5V

Sharpness: Not available

White Balance: Always in automatic, unchecking the box “auto” still remains in auto.

Gain: Not available

Properties ✕

Video Proc Amp Camera Control

Parameter	Slider	Value	Auto
Brightness		0	<input type="checkbox"/>
Contrast		32	<input type="checkbox"/>
Hue		7	<input type="checkbox"/>
Saturation		64	<input type="checkbox"/>
Sharpness		3	<input type="checkbox"/>
Gamma		110	<input type="checkbox"/>
White Balance		4600	<input checked="" type="checkbox"/>
Backlight Comp		1	<input type="checkbox"/>
Gain		0	<input type="checkbox"/>
ColorEnable	<input type="checkbox"/>		
PowerLine Frequency (Anti Flicker)		50 Hz	

Default

OK Cancel Apply

Focus: Does not apply in this case Exposure: Always in automatic, unchecking the box "auto" still remains in auto  
 Zoom: Up to 2X in 9 steps Backlight compensation: Not available

Properties ✕

Video Proc Amp Camera Control

Parameter	Slider	Value	Auto
Zoom		9	<input type="checkbox"/>
Focus		1	<input checked="" type="checkbox"/>
Exposure		-7	<input checked="" type="checkbox"/>
Aperture (Iris)			<input type="checkbox"/>
Pan		-6	<input type="checkbox"/>
Tilt		4	<input type="checkbox"/>
Roll			<input type="checkbox"/>
Low Light Compensation	<input checked="" type="checkbox"/>		


Default

OK Cancel Apply



Concepted & designed in EU | Copyright  
© 2017 All rights reserved  
[www.laiatech.com](http://www.laiatech.com)

## Documents / Resources

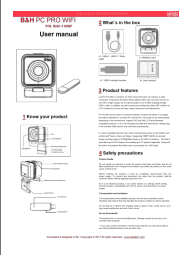	<p><a href="#">Laiatech BHC-110WF Web Camera</a> [pdf] User Manual BHC-110WF Web Camera, BHC-110WF, Web Camera, Camera</p>
---	--

## References

- [Home - Laia](#)

Manuals+.