

LAMAX
CyberWave1
Wireless Portable
Party Speaker



LAMAX CyberWave1 Wireless Portable Party Speaker User Manual

[Home](#) » [LAMAX](#) » LAMAX CyberWave1 Wireless Portable Party Speaker User Manual 

Contents

- [1 LAMAX CyberWave1 Wireless Portable Party Speaker](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 BOX CONTENTS](#)
- [5 DESCRIPTION AND CONTROLS](#)
- [6 SPEAKER CONTROLS](#)
- [7 FAQ](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

LAMAX

LAMAX CyberWave1 Wireless Portable Party Speaker



Specifications

- **Maximum power output:** TBD
- **Wireless technology:** Bluetooth
- **Number of bands:** 2
- **Maximum pairing distance:** TBD
- **Supported formats:** Bluetooth, Micro SD, USB flash drive, 3.5 mm audio cable
- **Supported codecs:** TBD
- **Inputs:** USB-A port, Micro SD card slot, AUX port, USB-C charging port
- **Battery capacity:** TBD
- **Playback time (50% volume):** TBD
- **Charging time:** TBD
- **Sensitivity:** TBD
- **Frequency range:** TBD
- **Function:** Speaker with power bank capability
- **Dimensions:** TBD
- **Weight:** TBD

Product Usage Instructions

Charging the Speaker

Fully charge the speaker battery before first use. Use only the original power cable included to charge the speaker.

Turning the Speaker On/Off

To turn the speaker on or off, press and hold the POWER button.

Pairing via Bluetooth

1. Turn on the speaker by holding the POWER button to enter pairing mode automatically.
2. Activate Bluetooth on your phone or other device and select "LAMAX StarCube1" from the available devices list.

True Wireless Stereo (TWS) Mode

1. To pair two speakers in TWS mode, ensure they are not paired with any device.
2. Press the PAIRING button on the main speaker; the LED will flash white.
3. If pairing is successful, the LED will turn white.
4. Pair the main speaker with your device as per the Bluetooth pairing instructions above.
5. The main speaker will act as the left channel, and call functions can only be controlled through it.
6. To unpair the speakers, press the PAIRING button on the master speaker.


Using as a Power Bank

The speaker can be used as a power bank. Connect an external device via the USB-A port to start charging automatically. Maximum charging time is 30 minutes per connection.

BOX CONTENTS

- 1× LAMAX StarCube1
- 1× USB-C power cable
- 1× 3.5 mm AUX cable
- 1× User Manual
- 1× Safety Instructions

DESCRIPTION AND CONTROLS

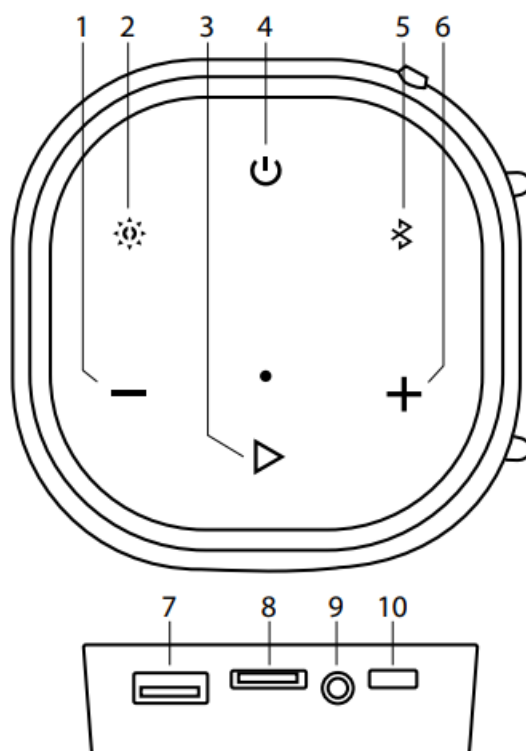

1. Volume down (press)

Previous track (hold for 2 seconds)

2. LIGHTING

Change light modes (press) Change music sources – Bluetooth, micro SD card, USB drive, and AUX (hold for 2 seconds)

3. **Play / Pause**

- Play / Pause (press)
- Answer / End call (press)
- Reject call (hold for 2 seconds)
- Turn voice assistant on / off (double press)

4. **POWER**

- Power on / off (hold for 2 seconds)
- Switch equalizer modes (press)
- Reset (hold for 8 seconds)

5. **BLUETOOTH TWS**

- Pair (press)
- Turn TWS mode on / off (hold for 2 seconds)

6. **+**

- **Volume up (press)**
- Next track (hold for 2 seconds)

Others

7. USB-A port

8. Micro SD card slot

9. AUX port

10. USB-C charging port

SPEAKER CONTROLS

• **Charging:**

- Fully charge the speaker battery before first use.
- Only charge the speaker using the original power cable included.

• **On / Off:**

- Press and hold the POWER button to turn the speaker on or off.

Pairing:

1. Turn on the speaker by holding the POWER button. It will enter pairing mode automatically.
2. Activate Bluetooth on your phone or other device. Select „LAMAX StarCube1“ from the list of available devices.

TWS (True Wireless Stereo):

1. Turn on both speakers ensuring they are not paired with any device.
2. Press the PAIRING button on the main speaker; the LED will flash white.
3. If pairing is successful, the LED will turn white.
4. Pair the main speaker with your device as per the Pairing instructions above.
5. The main speaker will act as the left channel; call functions can only be controlled through it.
6. Press the PAIRING button on the master speaker to unpair the speakers.

Switching Music Sources:

Hold the LIGHTING button for 2 seconds to switch between sources:

- Bluetooth
- Micro SD card
- USB flash disk
- AUX

Note: The speaker will automatically switch to the appropriate mode when a micro SD card, USB flash drive, or 3.5 mm audio cable is connected.

Charging an External Device (Power Bank):

The speaker can be used as a power bank. Connect an external device via the USB-A port to start charging automatically. Maximum charging time is 30 minutes per connection.

FAQ


Q: Can I use the speaker while it's charging another device?

A: Yes, you can use the speaker while it's charging another device via the USB-A port.

Q: How do I reset the speaker?

A: To reset the speaker, press and hold the POWER button for 8 seconds.

Documents / Resources

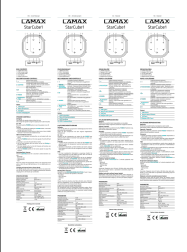	<p>LAMAX CyberWave1 Wireless Portable Party Speaker [pdf] User Manual CyberWave1 Wireless Portable Party Speaker, CyberWave1, Wireless Portable Party Speaker, Portable Party Speaker, Party Speaker</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.