



LAMAX X9.2 Action Camera 4K User Guide

[Home](#) » [LAMAX](#) » LAMAX X9.2 Action Camera 4K User Guide 

LAMAX

 
X9.2 Action Camera 4K User
Guide

Contents



- [1 X9.2 Action Camera 4K](#)
- [2 BOX CONTENTS](#)
- [3 GETTING TO KNOW THE CAMERA](#)
- [4 USING THE CAMERA FOR THE FIRST TIME](#)
- [5 WIFI APP](#)
- [6 FOR MORE INFORMATION](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

X9.2 Action Camera 4K


1

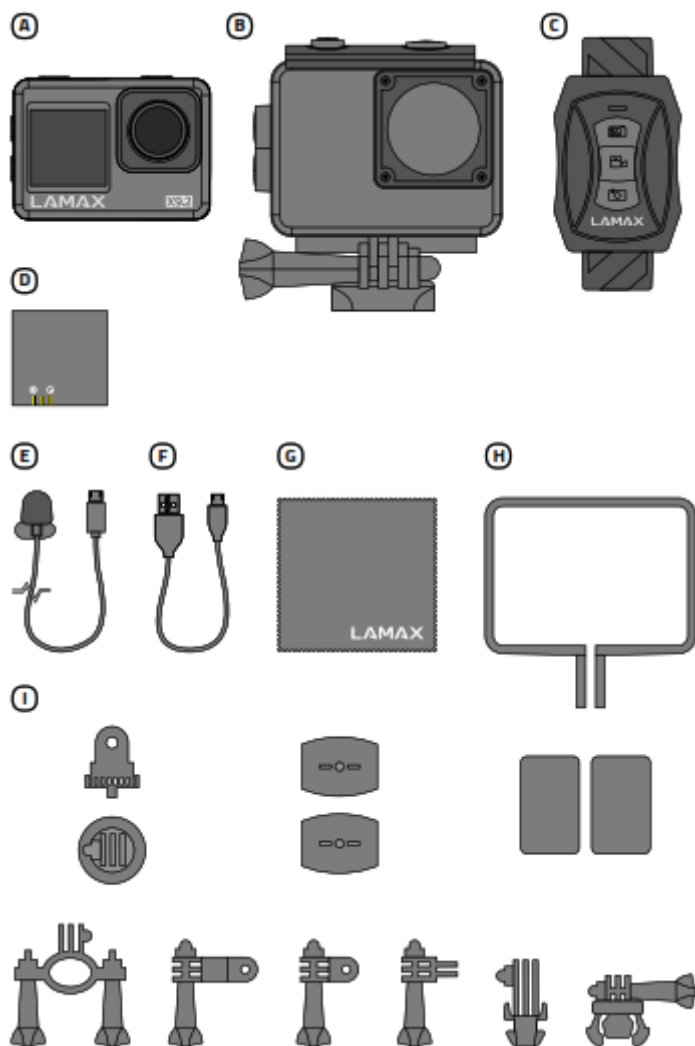


2

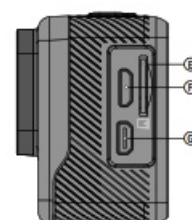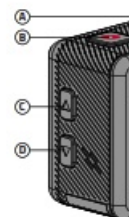  

3

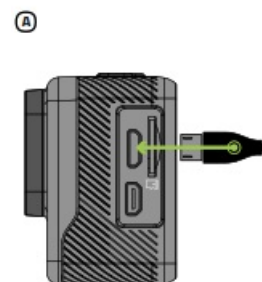 

4

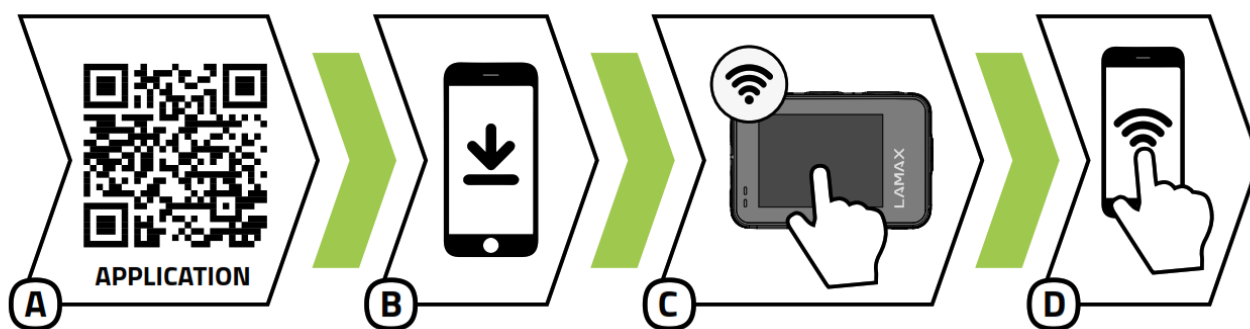 

<https://www.lamax-electronics.com/x92/app>



<https://www.lamax-electronics.com/x92/downloads>

BOX CONTENTS

A	LAMAX X9.2 action camera
B	Case, waterproof up to 40 m
C	Remote control
D	Li-ion battery
E	External microphone
F	Micro USB cable for charging / file transfer
G	Microfibre cloth
H	Frame
I	Attachments

GETTING TO KNOW THE CAMERA

A POWER / MODE button

B REC / OK button

C UP button

D DOWN button

E Memory card slot

F Micro USB port

G Video out

H Battery compartment door

Camera controls

Start / stop recording	Press the REC / OK button
Quick menu	Hold the REC / OK button
Switch modes	Press the POWER / MODE button
Power on / off	Hold down the POWER / MODE button
Audio recording on / off	Press the UP button
Switch between displays	Hold down the DOWN button
Switch WiFi on / off	Press the DOWN button

USING THE CAMERA FOR THE FIRST TIME

A Connect the camera to the power supply

- Charge the camera either by connecting it to a computer or by using the optional AC adapter.
- Fully charge the battery before first use.
- It takes approximately 4 hours to charge the battery from 0 to 100 %.
- After fully charging, the charging indicator goes out.
- **Note:** It takes 2.5 hours to charge the battery from 0 to 80 %.

B Insert the microSD card into the camera as shown (connectors towards the lens)

- Insert the card only when the camera is turned off and not connected to the computer.
- Format the card directly in the camera the first time you use it.
- Use branded cards of U3 class and above with a capacity of up to 128 GB.

WIFI APP

A Scan the QR code or enter the URL lamax.cz/x92/app

B Install the app on your smart device.

C Turn on WiFi in the camera by pressing the DOWN button.

D On your smart device, connect to the WiFi network with the camera name. The WiFi password is shown on the camera display (factory default 1234567890).

FOR MORE INFORMATION

For complete instructions and firmware updates, scan the QR code or go to the URL lamax.cz/x92/downloads

LAMAX

Documents / Resources



[LAMAX X9.2 Action Camera 4K](#) [pdf] User Guide
X9.2 Action Camera 4K, X9.2, Action Camera 4K, Camera 4K

References

- [iSmart DV2 â€“ Aplikace na Google Play](#)
- [LAMAX X9.2 | LAMAX Electronics | EN](#)