



LANCOM GS-4554X Stackable Full Layer 3 Multi-Gigabit Access Switch User Guide

[Home](#) » [LANCOM](#) » LANCOM GS-4554X Stackable Full Layer 3 Multi-Gigabit Access Switch User Guide 

Contents

- [1 LANCOM GS-4554X Stackable Full Layer 3 Multi-Gigabit Access Switch](#)
- [2 Product Overview](#)
- [3 Specification](#)
- [4 Hardware](#)
- [5 Interfaces](#)
- [6 Declaration of Conformity](#)
- [7 Package Content](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)


LANCOM

Systems

LANCOM GS-4554X Stackable Full Layer 3 Multi-Gigabit Access Switch



Product Overview

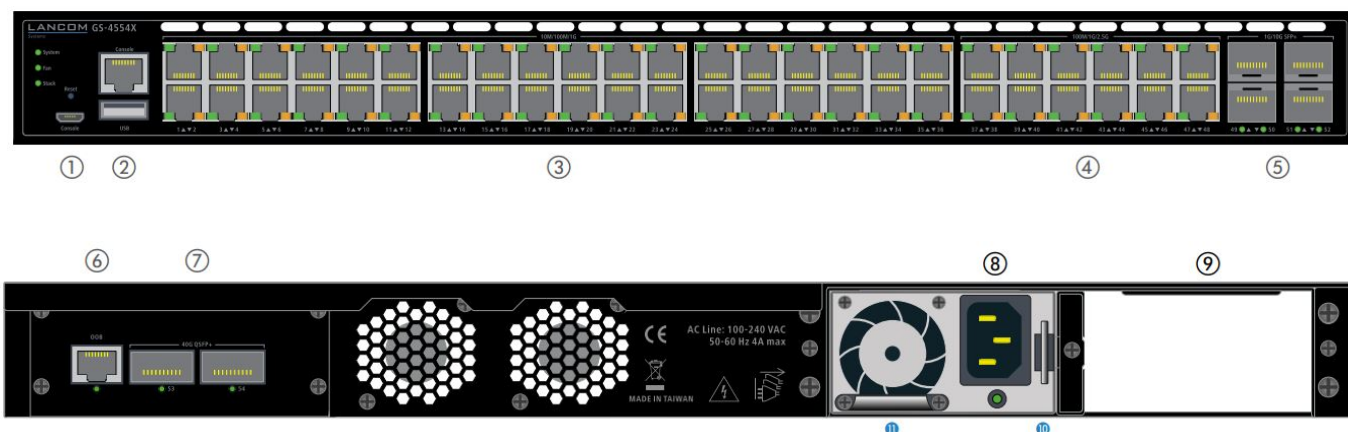

1. Configuration interfaces RJ-45 & micro USB (Console)

Connect the configuration interface via the included micro USB cable to the USB interface of the device you want to use for configuring/monitoring the switch. Alternatively, use the RJ-45 interface with the provided serial configuration cable.



2. USB interface

Connect a USB stick to the USB interface to store general configuration scripts or debug data. You can also use this interface to upload new firmware.



3. TP Ethernet interfaces 10M / 100M / 1G

Connect the interfaces 1 to 36 via Ethernet cable to your PC or a LAN switch.



4. TP Ethernet interfaces 100M / 1G / 2.5G

Connect the interfaces 37 to 48 via Ethernet cable with at least CAT5e / S/FTP standard to your PC or a LAN switch.



5. SFP+ interfaces 1G / 10G

Insert suitable LANCOM SFP modules into the SFP+ interfaces 49 to 52. Choose cables that are compatible with the SFP modules and connect them as described in the SFP modules mounting instructions:

www.lancom-systems.com/SFP-module-MI.



6. OOB interface (rear panel)

Use an Ethernet cable to connect this out-of-band service port for an IP interface independent of the switching

plane for management tasks or connection to a monitoring server.

7. QSFP+ interfaces 40G (rear panel)

Plug suitable LANCOM QSFP+ modules into the QSFP+ interfaces 53 and 54. Select cables suitable for the QSFP+ modules and connect them as described in the SFP modules mounting instructions:

www.lancom-systems.com/SFP-module-MI.

8. Power connector (rear panel)

Supply power to the device via the power connector. Please use the IEC power cable supplied or a country-specific LANCOM Power Cord.

9. An additional slot for power supply module with mains connection socket (rear panel)

To install an additional power supply module, remove the appropriate module slot cover by loosening both associated screws and inserting the power supply module. Supply the device with voltage via the power supply module mains connector. Use the supplied power cord (not for WW devices) or a country-specific LANCOM Power Cord. To remove a power supply module, disconnect the device from the power supply and pull the power plug out of the module. Then push the release lever 10 to the left. Now you can pull the module out of the device by the handle 11.

Note:

Please observe the following when setting up the device

- The main plug of the device must be freely accessible.
- For devices to be operated on the desktop, please attach the adhesive rubber footpads.
- Do not rest any objects on top of the device and do not stack multiple devices.


Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide! Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.

- Keep the ventilation slots on the side of the device clear of obstruction.
- Mount the device into a 19" unit in a server cabinet using the provided screws and mounting brackets. Both slide-in rails are attached as shown in the accompanying installation instructions

www.lancom-systems.com/slide-in-MI.

- Please note that support for third-party accessories (SFP and DAC) is not provided.


Specification

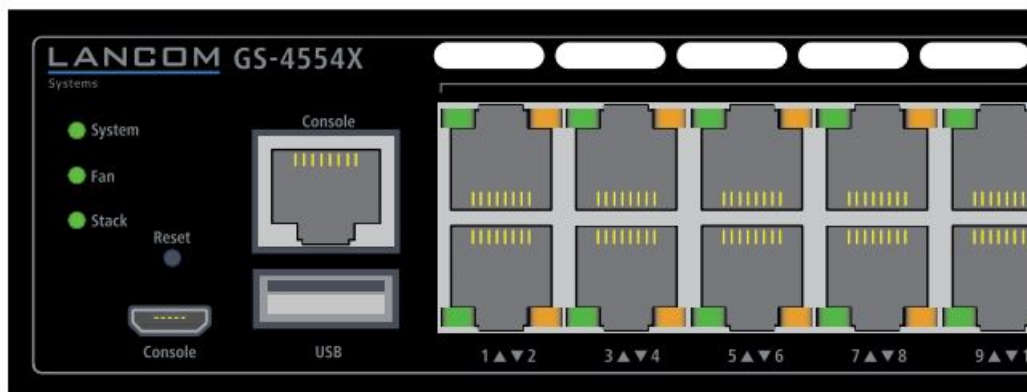

①

②

③

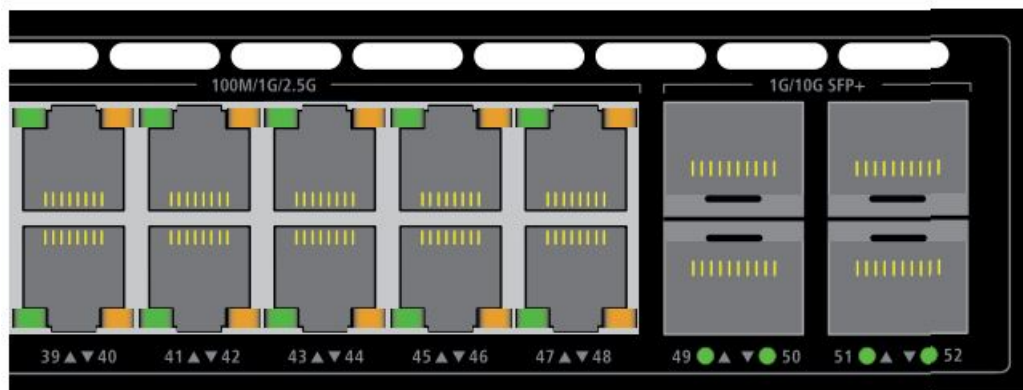


④

⑤

⑥

⑦

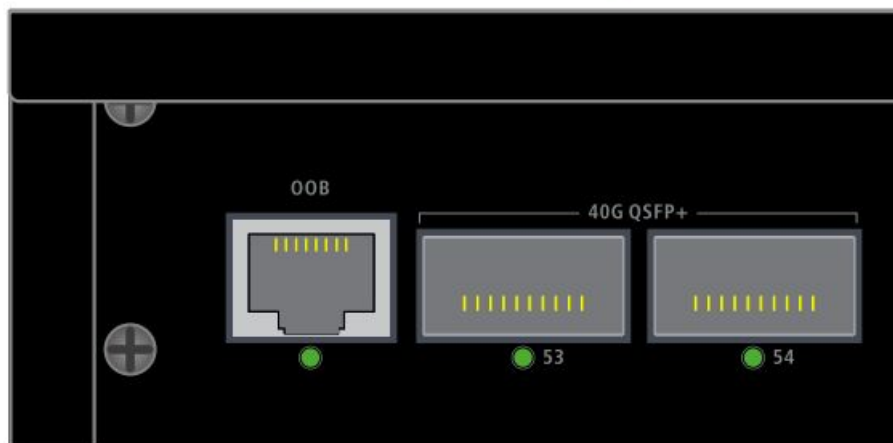

1. System / Fan / Stack

- **System: green** Device operational
- **System: red** Hardware error
- **Fan: red** Fan error
- **Stack: green** As a manager: port activated and connected with standby manager connected
- **Stack: orange** As standby manager: port activated and connected to the connected manager

2. Reset button

- **~5 sec. pressed** Device restart
- **7~12 sec. pressed** Configuration reset and device restart

3. TP Ethernet ports 10M / 100M / 1G

- **Off** Port inactive or disabled
- **Green** Link 1000 Mbps
- **Green, blinking** Data transfer, link 1000 Mbps
- **Orange** Link < 1000 Mbps
- **Orange, blinking** Data transfer, link < 1000 Mbps

4. TP Ethernet ports 100M / 1G / 2.5G

- **Off** Port inactive or disabled
- **Green** Link 2500 – 1000 Mbps
- **Green, blinking** Data transfer, link 2500 – 1000 Mbps
- **Orange** Link < 1000 Mbps
- **Orange, blinking** Data transfer, link < 1000 Mbps

5. SFP+ ports 1G / 10 G

- **Off** Port inactive or disabled
- **Green** Link 10 Gbps
- **Green, blinking** Data transfer, link 10 Gbps
- **Orange** Link 1 Gbps
- **Orange, blinking** Data transfer, link 1 Gbps

6. OOB port

- **Off** OOB port inactive
- **Green** Link 1000 Mbps

7. QSFP+ ports 40 G

- **Off** Port inactive or disabled
- **Green** Link 40 Gbps
- **Green, blinking** Data transfer, link 40 Gbps

Hardware

- **Power supply:** Exchangeable power supply (110-230 V, 50-60 Hz)
- **Power consumption:** Max. 82 W
- **Environment:** Temperature range 0–40° C; short-term temperature range 0-50° C; humidity 10–90 %, non-condensing
- **Housing:** Robust metal housing, 1 HU with removable mounting brackets and slide-in rails, network connections at front and rear, dimensions 442 x 44 x 440 mm (W x H x D)
- **Number of fans:** 2

Interfaces

- **QSFP+:** 2 * QSFP+ 40 Gbps uplink ports for connection to superordinate core switches or content servers, can also be configured as stacking ports via software
- **TP Ethernet:** 36 TP Ethernet ports 10 / 100 / 1000 Mbps 12 TP Ethernet ports 100 / 1000 / 2500 Mbps
- **SFP+ 4:** * SFP+ 1 / 10 Gbps, uplink ports for connection to superordinate core switches or content servers, can also be configured as stacking ports via software

- **Console 1:** * RJ-45 / 1 * Micro USB
- **USB 1:** * USB host
- **OOB 1:** * OOB

Declaration of Conformity


Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuerselen, declares that this device is in compliance with Directives 2014/30/EU, 2014/35/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following

Internet address: www.lancom-systems.com/doc

Package Content

- **Manual:** Quick Reference Guide (DE/EN), Installation Guide (DE/EN)
- **Mounting brackets:** Two 19" mounting brackets, two slide-in rails for rear stabilization in 19" racks
- **Power supply:** 1x exchangeable power supply LANCOM SPSU-250, expandable to 2 LANCOM SPSU-250 power supplies (hot swappable, for redundancy operation)
- **Cables:** 1 IEC power cord, 1 serial configuration cable, 1 micro USB configuration cable

Documents / Resources

	LANCOM GS-4554X Stackable Full Layer 3 Multi-Gigabit Access Switch [pdf] User Guide GS-4554X, Stackable Full Layer 3 Multi-Gigabit Access Switch, GS-4554X Stackable Full Layer 3 Multi-Gigabit Access Switch
---	--

References

- [L DoC - LANCOM Systems GmbH](#)
- [L lancom-systems.com/SFP-module-MI](http://lancom-systems.com/SFP-module-MI)
- [L lancom-systems.com/slide-in-MI](http://lancom-systems.com/slide-in-MI)