



# LANCOM LX-6200E WiFi-6 Access Point User Guide

[Home](#) » [LANCOM](#) » LANCOM LX-6200E WiFi-6 Access Point User Guide 

## Contents


- 1 LANCOM LX-6200E WiFi-6 Access Point
- 2 Mounting & connecting
- 3 Please observe the following when setting up the device
- 4 TECHNICAL DETAILS LED description & technical details
- 5 Power
- 6 WLAN link
- 7 Hardware
- 8 Wi-Fi
- 9 Interfaces
- 10 Package content
- 11 Documents / Resources
  - 11.1 References
- 12 Related Posts

**LANCOM**

## LANCOM LX-6200E WiFi-6 Access Point



### Mounting & connecting

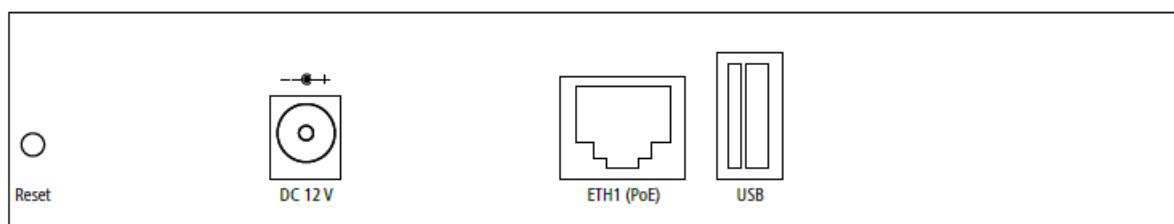

①

②

③

④

#### 1. Reset button


**Pressed up to 5 seconds:** device restart  
**Pressed until first flashing up of all LEDs:** configuration reset and device restart

RESET



#### 2. Power supply socket

After connecting the cable to the device, turn the connector 90° clockwise to prevent it from accidentally unplugging. Use only the supplied power adapter.

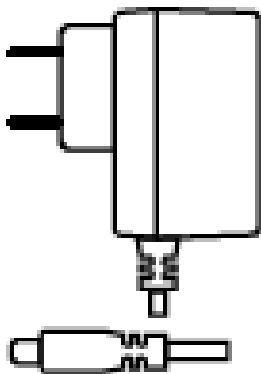


### 3. Ethernet interface

Use the cable with the Ethernet connectors to connect interface ETH1 (PoE) to your PC or a LAN switch.



### 4. USB interface

 Connect compatible USB devices either directly to the USB interface, or use a suitable USB cable.




Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide! Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.

### Please observe the following when setting up the device

- The power plug of the device must be freely accessible.
- For devices to be operated on the desktop, please attach the adhesive rubber footpads
- Do not rest any objects on top of the device
- Keep all ventilation slots on the side of the device clear of obstruction
- Lockable wall and ceiling mounting with the LANCOM Wall Mount (LN) (available as an accessory)
- Please note that support service for third-party accessories is excluded.

### TECHNICAL DETAILS LED description & technical details

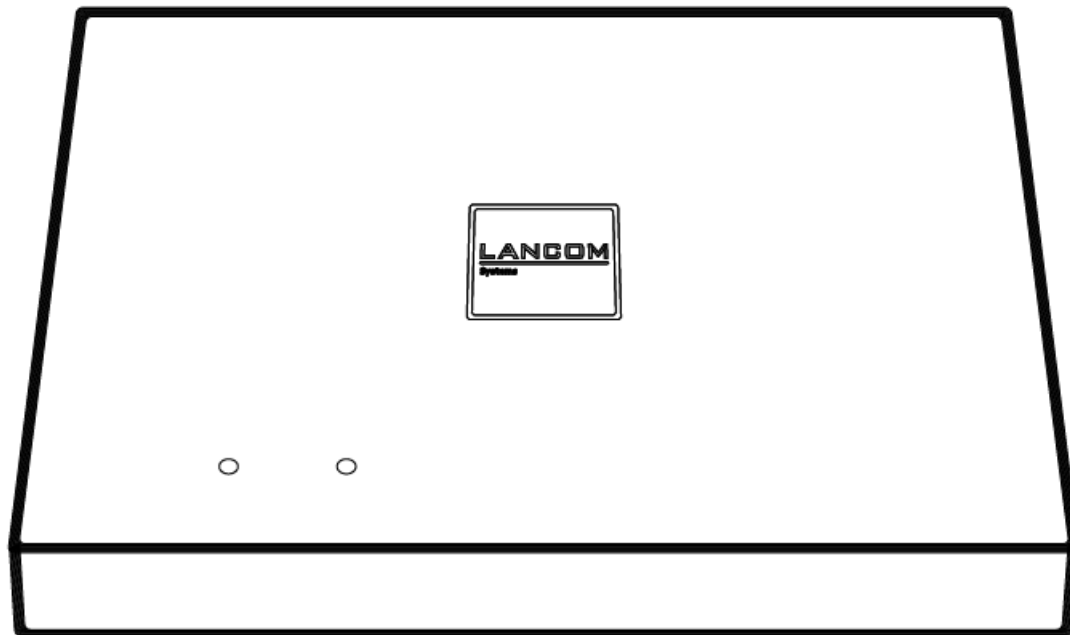

①

②

## Power

- Off
  - Device switched off
- Green, permanently
  - Device operational, resp. the device paired/claimed and LANCOM Management Cloud (LMC) accessible.
- Orange/green, blinking alternately with the WLAN link LED
  - The access point is in managed mode and has not found a WLAN controller yet. The corresponding Wi-Fi model (s) is/are switched off until a WLAN controller has been found to supply a configuration, or until being switched manually into another operating mode.
- 1x green inverse blinking\*
  - Connection to the LMC active, pairing OK, claiming error.
- 2x green inverse blinking\*
  - Pairing error, resp. LMC activation code / PSK not available.
- 3x green inverse blinking\*
  - LMC not accessible, resp. communication error.

## WLAN link

- Off
  - No Wi-Fi network was defined nor Wi-Fi module was deactivated. The Wi-Fi module is not transmitting beacons.
- Green, permanently

- At least one Wi-Fi network is defined and the Wi-Fi module is activated. The Wi-Fi module is transmitting beacons.
- Green, inverse flashing
  - **Number of flashes** = number of connected Wi-Fi stations, followed by a pause.
- Green, blinking
  - DFS scanning or other scan procedure

## Hardware

- Power supply
  - 12 V DC, external power adapter (110 V or 230 V) with bayonet connector to secure against disconnection or PoE based on 802.3at via ETH1
- Power consumption max.
  - 17.3 W
- Environment
  - Temperature range 0–40 °C for wall mount with LANCOM Wall Mount (LN). Access point overheating is avoided by automatic throttling of the Wi-Fi modules. Humidity 0-95 %, non-condensing
- Housing
  - Robust housing made of polycarbonate and aluminum, rear connectors, ready for wall and ceiling mounting; dimensions 205 x 42 x 205mm (W x H x D)
- Number of fans
  - None; fanless design, no rotating parts, high MTBF

## Wi-Fi

- Frequency range
  - 2400–2483.5 MHz (ISM) or 5180–5700 MHz (country-specific restrictions possible)
- Radio channels 2.4 GHz
  - Up to 13 channels, max. 3 non-overlapping (2.4 GHz band)
- Radio channels 5 GHz
  - Up to 19 non-overlapping channels (available channels depending on country-specific regulation and connected with automatic, dynamic DFS channel selection.)

## Interfaces

- ETH1 (PoE)
  - 10 / 100 / 1000 Base-TX, PoE adapter compliant to IEEE 802.3at required
- USB
  - USB 2.0 Hi-Speed Host-Port
- BLE
  - The device is equipped with a BLE module and thus can transmit a configurable iBeacon.
- Wireless Paper Displays
  - The device is equipped with a radio module for controlling LANCOM Wireless ePaper Displays in the 2.4 GHz frequency band.

## Package content

- Cable
  - Ethernet cable, 3 m
- Power adapter
  - External power adapter, 12 V / 2.5 A DC/S, barrel connector 2.1 / 5.5 mm bayonet, LANCOM item no. 111884 (EU, 230 V) (not for WW devices)

The additional power LED statuses are displayed in a 5-seconds rotation if the device is configured to be managed by the LANCOM Management Cloud. This product contains separate open-source software components which are subject to their own licenses, in particular the General Public License (GPL). The license information for the device firmware (LCOS) is available on the device's WEBconfig interface under "Extras > License information". If the respective license demands, the source files for the corresponding software components will be made available on a download server upon request.

Hereby, LANCOM Systems GmbH  
Adenauerstrasse 20/B2


D-52146 Wuerselen declares that this device is in compliance with Directives 2014/30/EU, 2014/53/EU, 2014/35/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006.

**The full text of the EU Declaration of Conformity is available at the following Internet address:**

[www.lancom-systems.com/doc](http://www.lancom-systems.com/doc)

LANCOM, LANCOM Systems, LCOS, LAN community, and Hyper Integration are registered trademarks. All other names or descriptions used may be trademarks or registered trademarks of their owners. This document contains statements relating to future products and their attributes. LANCOM Systems reserves the right to change these without notice. No liability for technical errors and/or omissions. 112124/0822

## Documents / Resources

	<a href="#">LANCOM LX-6200E WiFi-6 Access Point</a> [pdf] User Guide LX-6200E WiFi-6 Access Point, LX-6200E, WiFi-6 Access Point, Access Point, Point
---	--

## References

- [L DoC - LANCOM Systems GmbH](#)