



**LX-7300 Wi-Fi 7  
Access Points**



# LANCOM LX-7300 Wi-Fi 7 Access Points Installation Guide

[Home](#) » [LANCOM](#) » LANCOM LX-7300 Wi-Fi 7 Access Points Installation Guide 

## Contents

- [1 LANCOM LX-7300 Wi-Fi 7 Access Points](#)
- [2 Product Usage Instructions](#)
- [3 FAQ](#)
- [4 Interface overview](#)
- [5 Initial start-up](#)
- [6 General safety instructions](#)
- [7 Service & Support](#)
- [8 Technical data](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)



**LANCOM**  
SYSTEMS

**LANCOM LX-7300 Wi-Fi 7 Access Points**



## Specifications

- Hardware Power supply: PoE 802.3bt or 802.3at for ETH1
- Housing: Robust housing made of aluminum and plastic, protection class IP50, UL 2043
- Dimensions: 270 x 270 x 65 mm (W x D x H)
- Mounting Kit: Included for wall and ceiling mounting

## Product Usage Instructions

### Initial Setup:

Establish the required connections for device configuration:

1. Connect a network cable to the Ethernet port marked PoE on the device and a free PoE-active network socket on your local network.
2. Connect the PoE injector to the power supply.
3. Use suitable cables to connect other required device interfaces to other components.

### Configuration via Local Network:

Note that an active DHCP server is required in the network connected to the device. Connect the computer intended for configuration directly via Ethernet cable to one of the ETH or LAN interfaces of the device or to a switch in the same network.

### Options for Initial Start-Up of Unconfigured Device:

**Option 1:** Via the LANCOM Management Cloud\ (LMC)

The LANCOM Management Cloud allows LANCOM partners to automate the commissioning, centralized management, and monitoring of LANCOM devices. For further information on commissioning and configuration via the LMC, visit: [www.lancom-systems.com/lmc-access](http://www.lancom-systems.com/lmc-access)

## FAQ


### Where can I find detailed documentation for my LANCOM device?

Detailed documentation for your device can be found in the download portal of the LANCOM website:  
[www.lancom-systems.com/downloads](http://www.lancom-systems.com/downloads)

### How can I submit further questions or requests for support?

You can submit your request via the Service & Support portal: [www.lancom-systems.com/service-support](http://www.lancom-systems.com/service-support)

### Interface overview

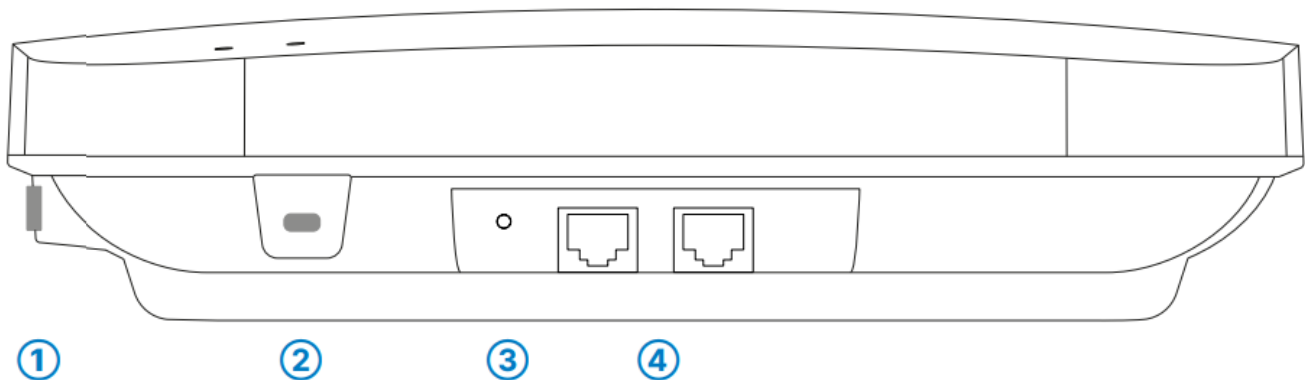

1. USB 2.0 interface
2. Kensington Lock holder
3. Reset button
4. TP-Ethernet interfaces ETH1 / ETH2

### Initial start-up

Establishing the required connections for device configuration

→ Always observe the adjacent safety instructions and notes. Select the description a) or b), applicable to your present constellation for the power supply of the device

- a) PoE power supply via PoE network device
- b) PoE power supply via separate PoE injector

Connect a network cable to the Ethernet port marked PoE on the device and a free PoEactive network socket on your local network (e. g. on a PoE-capable switch). Connect a network cable to the Ethernet port marked PoE on the device and the output of the PoE injector. Then connect another network cable to the input of the PoE injector and a free NON-PoE-active network outlet of your local network. Connect the PoE injector to the power supply.

### Always observe the documentation of the PoE injector or PoE switch!

Use suitable cables to connect other required device interfaces to other components and, in the case of devices with Wi-Fi interfaces, connect any antennas supplied.

### Configuration via the local network

Note that an active DHCP server is required in the network connected to the device. Connect the computer intended for configuration (e.g. notebook) either directly via Ethernet cable to one of the ETH or LAN interfaces of the device, or to a switch in the same network. The possibly existing interface CONFIG or COM is not suitable for configuration via the network! Options for initial start-up of the unconfigured device

### **Option 1: via the LANCOM Management Cloud (LMC)**

The LANCOM Management Cloud allows LANCOM partners to automate the commissioning, centralized management, and monitoring of LANCOM devices. Further information on commissioning and configuration via the LMC can be found at [www.lancom-systems.com/lmc-access](http://www.lancom-systems.com/lmc-access)

### **Option 2: via web browser (WEBconfig)**

Configuration via web browser is an easy and fast variant, since no additional software is required on the computer used for configuration.

Note: If a certificate warning appears in your browser when trying to connect to your device, there is a button or link on the displayed browser page to connect to the device anyway (depending on the browser, usually under Advanced). In this procedure, the DNS server used in your network must be able to resolve the host name reported by the device via DHCP. When using a LANCOM device as a DHCP and DNS server, this is the default case. At <https://lancom-XXYYZZ> you can access your device.. Replace XXYYZZ with the last six digits of the MAC address of your device, which you can find on the enclosed document LANCOM Management Cloud or on the nameplate of the device. If necessary, append the domain name of your local network (e. g. internet). Alternatively, for configuration via TCP/IP you need the IP address of the device in the local network (LAN) so that you can enter it in any web browser. If necessary, determine the IP address at the DHCP server or router.

- When connecting the computer to an unconfigured LANCOM device, WEBconfig automatically calls up the start page \for device configuration. Here you select whether you want to configure the device via the LANCOM Management Cloud (-> Option 3, see below) or via Stand-alone configuration.
- If you select Stand-alone configuration, you will be redirected to the dashboard after setting the access data.
- On the dashboard, under Wi-Fi configuration->Add new SSID, configure an SSID and an associated password (PSK). After saving the configuration, check the accessibility of the new SSID e. g. by smartphone via the displayed QR code.

**The initial commissioning of the device is now complete.**

### **Option 3: via the Windows software LANconfig ( [www.lancom-systems.com/downloads](http://www.lancom-systems.com/downloads) )**

- Please wait until the booting process of the device is completed before starting LANconfig.
- LANCOM access points start in managed mode and are only found automatically in the local area network (LAN) with\ the option Extend search to managed APs.
- Open the device configuration by double-clicking on the unconfigured device in the device list. \Confirm the security notice and first configure a device password under Management -> Admin -> Device configuration.
- Under Wireless-LAN -> WLAN-Networks -> General/Network -> Add, configure an SSID an associated password (PSK). The initial commissioning of the device is now complete.

### **General safety instructions**

- Under no circumstances should the device housing be opened and the device repaired without authorization. Any device with a case that has been opened is excluded from the warranty.
- If antennas are available, they may only be installed or replaced when the device is switched off. Mounting or

demounting antennas while the device is powered on may cause the destruction of the radio module.

- Mounting, installation, and commissioning of the device may only be carried out by qualified personnel.

## **Safety instructions and intended use**

In order to avoid harming yourself, third parties or your equipment when installing your LANCOM device, please observe the following safety instructions. Operate the device only as described in the corresponding documentation. Pay particular attention to all warnings and safety instructions. Use only those third-party devices and components that are recommended or approved by LANCOM Systems. Before commissioning the device, be sure to study the corresponding Hardware Quick Reference which can be downloaded from the LANCOM website [www.lancom-systems.com/downloads](http://www.lancom-systems.com/downloads). Any warranty and liability claims against LANCOM Systems are excluded in the event of any use other than the intended use described below!

Warning: This unit must be installed indoors. The PoE cables must not be distributed outside the building.

## **Environment**

**LANCOM devices should only be operated when the following environmental requirements are met:**

- Ensure that you comply with the temperature and humidity ranges specified in the Quick Reference Guide for the LANCOM device.
- Do not expose the device to direct sunlight.
- Ensure that there is adequate air circulation and do not obstruct the ventilation slots.
- Do not cover devices or stack them on top of one another
- The device must be mounted so that it is freely accessible (for example, it should be accessible without the use of technical aids such as elevating platforms); a permanent installation (e. g. under plaster) is not permitted.

## **Power supply**

Before start-up, the following points must be observed, as improper use can lead to personal injury and damage to property, as well as voiding the warranty:

- Some devices support power supply via an Ethernet cable (Power over Ethernet – PoE). Please refer to the corresponding notes in the hardware quick reference of the device.
- Never operate damaged components.
- Only switch on the device when the housing is closed.
- The device must not be installed during thunderstorms and should be disconnected from the power supply during thunderstorms.
- In case of emergency (e. g. damage, ingress of liquids or objects, for example through the ventilation slots), disconnect the power supply immediately.

## **Applications**

- The devices may only be used in accordance with the relevant national regulations and under consideration of the legal situation applicable there.
- The devices must not be used for the actuation, control, and data transmission of machinery that, in case of malfunction or failure, may present a danger to life and limb, nor for the operation of critical infrastructures.

- The devices with their respective software are not designed, intended or certified for use in: the operation of weapons, weapons systems, nuclear facilities, mass transportation, autonomous vehicles, aircraft, life support computers or equipment (including resuscitators and surgical implants), pollution control, hazardous materials management, or other hazardous applications where failure of the device or software could lead to a situation in which personal injury or death could result. The customer is aware that the use of the devices or software in such applications is entirely at the customer's risk.
- Please note that only wall or ceiling mounting is permitted.
- Please note that the Ethernet ports of the device are facing upwards when mounted on the wall.

## Regulatory Notice

Regulatory compliance for devices with radio or Wi-Fi interfaces This LANCOM device is subject to governmental regulation. The user is responsible for ensuring that this device operates in accordance with local regulatory guidelines, specifically for compliance with potential channel restrictions. Channel restrictions in Wi-Fi operation for devices with Wi-Fi interfaces

**The device is restricted to indoor use only when operating in the 5,150 to 5,350 MHz frequency range.**

- For EU: The device is restricted to indoor use only when operating in the 5,945 to 6,425MHz frequency range.
- For UK: The device is restricted to indoor use only when operating in the 5,925 to 6,425MHz frequency range.

This equipment complies with radiation exposure limits set forth for an uncontrolled environment This equipment should be installed and operated with a minimum distance of 20 cm between the radiator & your body

Technology	Frequency range (MHz)	Max. output power (dBm EIRP)
Wi-Fi	2,400 – 2,483.5	20
	5,150 – 5,350	23
	5,470 – 5,725	30
	5,945 – 6,425	23
BLE	2,400 – 2,483.5	10


## Declarations of Conformity

You will find all the Declarations of Conformity concerning our product portfolio under [www.lancom-systems.com/doc](http://www.lancom-systems.com/doc). These documents contain all the tested standards and required guidelines in the area of EMC – SAFETY – RF, as well as the proof of the guidelines concerning RoHS & REACH. Hereby, LANCOM Systems GmbH declares that the radio equipment type LANCOM LX-7300 is in compliance with Radio Equipment Regulations 2017. The full text of the UK declaration of conformity is available at the following internet address [www.lancom-systems.com/doc](http://www.lancom-systems.com/doc)

## Simplified Declaration of Conformity

Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuerselen, declares that this device is in compliance with Directives 2014/35/EU, 2014/53/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: [www.lancom-systems.com/doc](http://www.lancom-systems.com/doc)

Service & Support

Documentation / Firmware	Service & Support	All information on your device
<p>Basically, current versions of the LCOS LX firmware, drivers, tools and documentation for all LANCOM and AirLancer products are available for download free of charge from our website.</p> <p>Detailed documentation for your device can be found in the download portal of the LANCOM website: <a href="http://www.lancom-systems.com/downloads">www.lancom-systems.com/downloads</a></p> <p>You will also find explanations of all the functions of your LANCOM device in the LCOS LX Reference Manual: <a href="http://www.lancom-systems.de/docs/LCOS-LX/Refmanual/EN">www.lancom-systems.de/docs/LCOS-LX/Refmanual/EN</a></p>	<p>The LANCOM Knowledge Base — with over 2,500 articles — is available to you at any time via the LANCOM website: <a href="http://www.lancom-systems.com/knowledgebase">www.lancom-systems.com/knowledgebase</a></p> <p>If you have any further questions, please submit your request via our Service &amp; Support portal: <a href="http://www.lancom-systems.com/service-support">www.lancom-systems.com/service-support</a></p> <p>Information on the lifecycle, in particular on End of Sale / End of Life and on the supply of LANCOM devices with security updates can be found at: <a href="http://www.lancom-systems.com/lifecycle">www.lancom-systems.com/lifecycle</a></p>	

- [www.lancom-systems.com/downloads](http://www.lancom-systems.com/downloads)
- [www.lancom-systems.de/docs/LCOS-LX/Refmanual/EN](http://www.lancom-systems.de/docs/LCOS-LX/Refmanual/EN)
- [www.lancom-systems.com/lifecycle](http://www.lancom-systems.com/lifecycle)
- [www.lancom-systems.com/knowledgebase](http://www.lancom-systems.com/knowledgebase)
- [www.lancom-systems.com/service-support](http://www.lancom-systems.com/service-support)


Technical data

Technical data (excerpt)

Hardware	
Power supply	PoE 802.3bt or 802.3at for ETH1 Full range of functions with 802.3bt
Housing	Robust housing made of aluminum and plastic, protection class IP50, UL 2043; dimensions 270 × 270 × 65 mm (W x D x H), Kensington lock
Package contents	
Mounting kit	Mounting kit for wall and ceiling mounting

LANCOM, LANCOM Systems, LCOS, LANcommunity and Hyper Integration are registered trademarks. All other names or descriptions used may be trademarks or registered trademarks of their owners. This document contains statements relating to future products and their attributes. LANCOM Systems reserves the right to change these without notice. No liability for technical errors and / or omissions.

Documents / Resources

	<a href="#">LANCOM LX-7300 Wi-Fi 7 Access Points</a> [pdf] Installation Guide LX-7300 Wi-Fi 7 Access Points, LX-7300, Wi-Fi 7 Access Points, Access Points, Points
---	---

References

- [L Business network solutions "engineered in Germany": LANCOM Systems GmbH](#)
- [L DoC - LANCOM Systems GmbH](#)
- [L Confluence Mobile - LANCOM Wissensdatenbank](#)
- [L User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.