

LASER SPK-B70-132 Party Boombox with LED Instruction Manual


[Home](#) » [Laser](#) » LASER SPK-B70-132 Party Boombox with LED Instruction Manual 

Contents

- [1 LASER SPK-B70-132 Party Boombox with LED WHAT'S IN THE BOX](#)
- [2 SPECIFICATIONS](#)
- [3 FEATURES](#)
- [4 CONTROLSBLUETOOTH PAIRING](#)
- [5 FM RADIO](#)
- [6 TROUBLESHOOTING](#)
 - [6.1 No Power:](#)
- [7 WARRANTY AGAINST DEFECTS](#)
 - [7.1 How to make a product warranty claim:](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

LASER

LASER SPK-B70-132 Party Boombox with LED

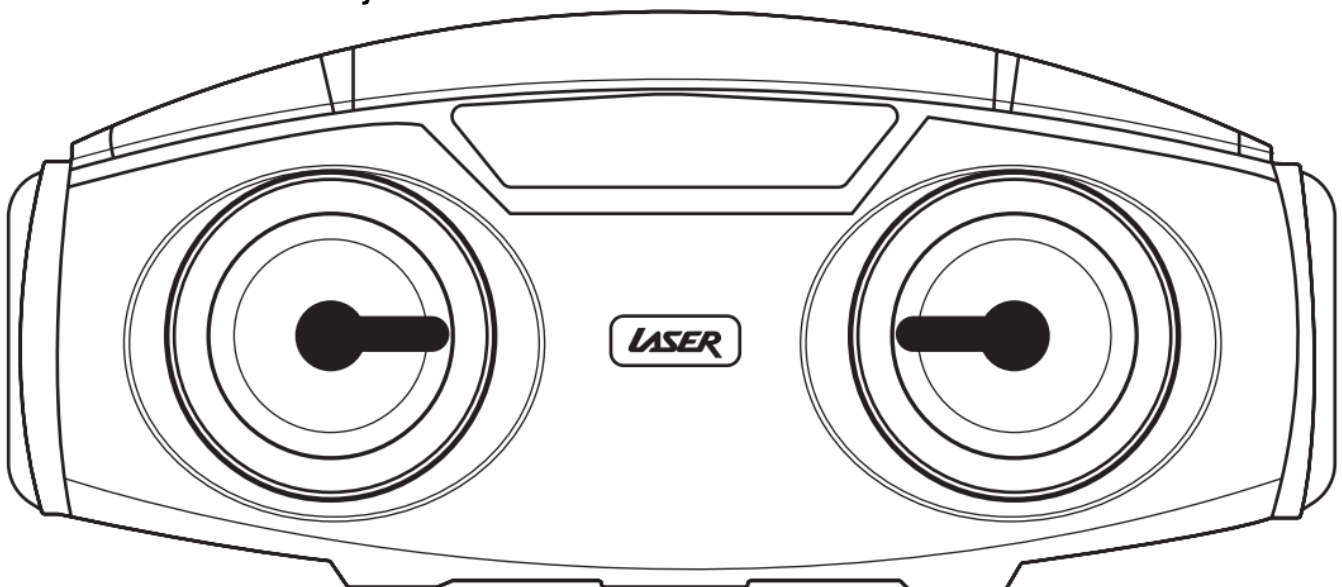

WHAT'S IN THE BOX

- spK-B70-132 Speaker
- Charge Cable
- User Manual


SPECIFICATIONS





Bluetooth Version:	5.0
Bluetooth Range:	10 meters
Bluetooth Name:	SPK-B70-132
Signal to Noise Ratio:	≥ 80dB
Frequency Response:	100Hz – 18kHz
Product Dimensions:	386.5 x 148 x 172mm
Net Weight:	1.35kg
Speaker Power:	2 x 10W
Battery:	3.7V 3000mAh
Charging:	5V / 1 Amp
Charging Time:	6 hours
Battery Runtime:	4 hours (at 60% volume)



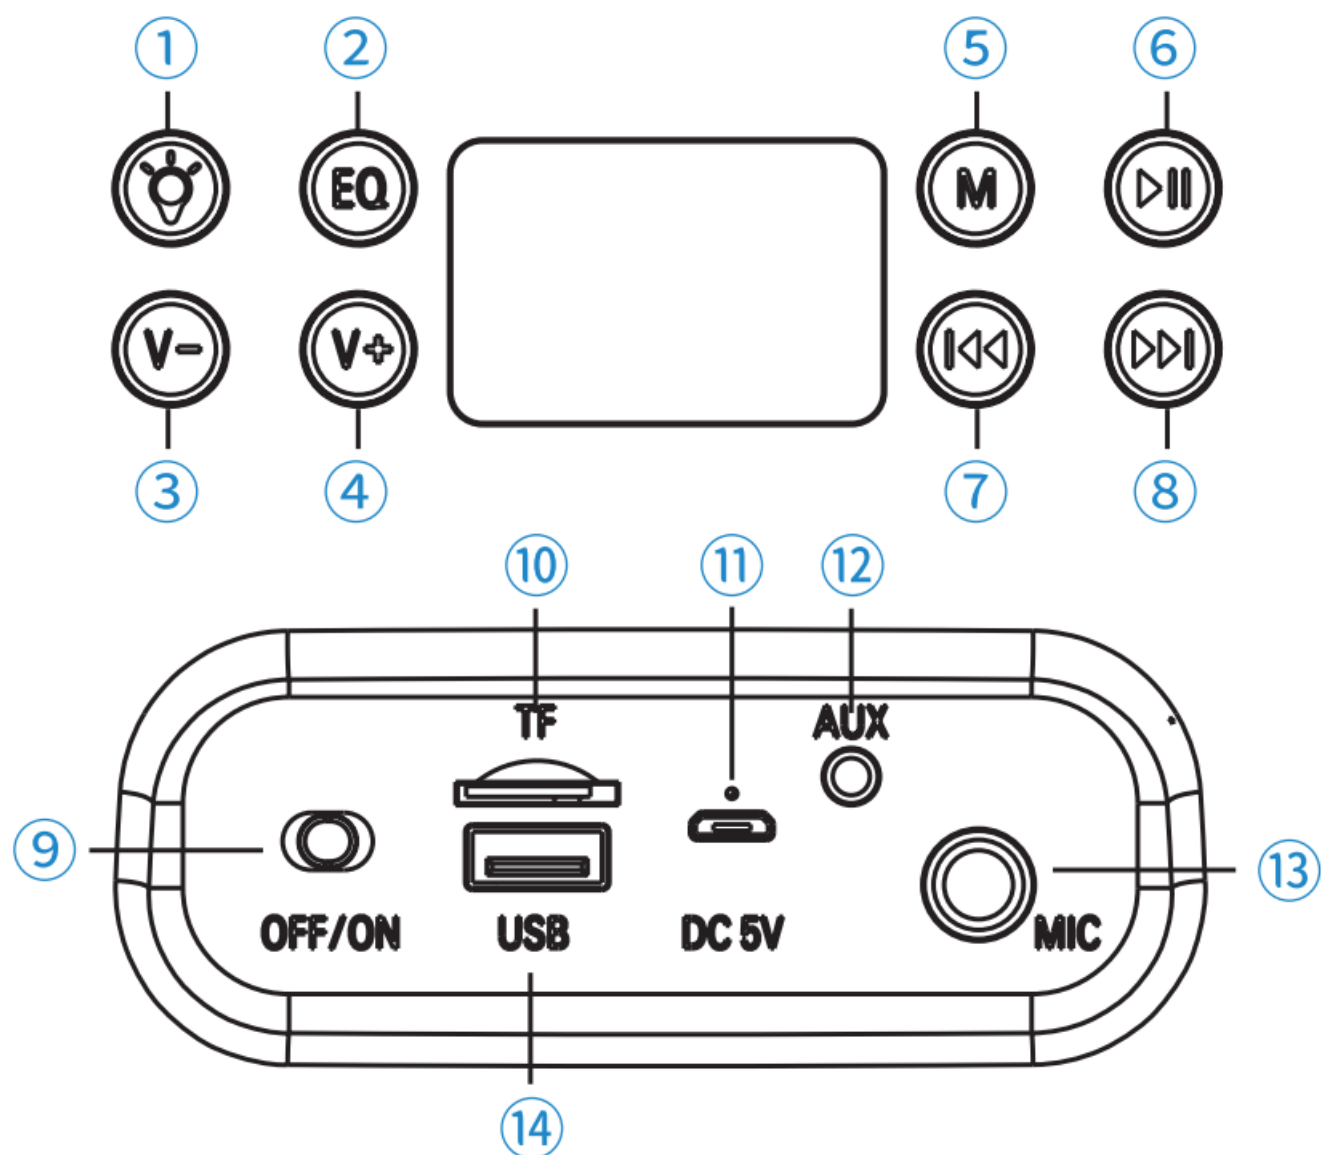

FEATURES

- Bluetooth Wireless Connectivity
- Support for USB playback
- Support for Micro SD Card playback
- FM Radio
- Microphone Input (microphone not included)
- Built-in rechargeable battery

CONTROLS



1. 	- Tap to cycle between lighting modes or turn LED lights off.
2. 	- While playing music tap to select between 2 EQ sound effects: Indoor or Outdoor.
3. 	- Tapping or holding the button will decrease volume.
4. 	- Tapping or holding the button will increase volume.

<p>5.</p> 	<p>- Tap to swap between Bluetooth, Micro SD Card, USB, Aux and FM modes.</p>
<p>6.</p> 	<p>- Tap and hold for a couple of seconds in FM mode to start auto-tuning stations.</p> <p>- Tap to play or pause current track.</p> <p>- Tap and hold for a couple of seconds in FM mode to start auto-tuning stations.</p>
<p>7.</p> 	<p>- Tap to skip previous track or station.</p> <p>- Long press to rewind current track.</p>
<p>8.</p> 	<p>- Tap to skip forward track or station.</p> <p>- Long press to fast forward current track.</p>

9. ON/ OFF	- Turn speaker power ON or OFF.
10. Micro SD Card Slot	- Insert Micro SD card for file playback. - Up to 32gb cards using FAT32 or exFAT file system only.
11. DC 5V	- Wired power or recharging speaker battery. - Please use with a compatible cable and USB wall adapter to power or recharge the speaker.
12. AUX	- Connect 3.5mm audio cable to stream music from a compatible device.
13. MIC	- Connect a microphone (not included) to sing along with the music.
14. USB Slot	- Insert USB stick for file playback. - Up to 32gb sticks using FAT32 or exFAT file system only.

BLUETOOTH PAIRING

- With the speaker on tap the button until you reach Bluetooth mode.
- Search for “SPK-B70-132” under the Bluetooth settings of device you are connecting to e.g. smartphone or tablet.

TIP: If a password is requested enter “0000”

FM RADIO

- With the speaker on tap the button until you reach FM Radio mode
- Tap the button to start the AUTO SEARCH function for FM stations.
- This operation will scan all available FM stations and record them to memory.
- The scan procedure will take 1 -2 minutes to complete and should not be interrupted.
- Once complete you can tap the or buttons to skip between the saved stations.

TROUBLESHOOTING

No Power:

- Check battery level and charge if required.
- Try turning on the speaker while connected to a power source.

- Try charging the speaker with a USB Wall Adapter (like a smartphone charger) instead of a laptop or computer.

Problems Connecting to Bluetooth:

- Place the speaker next to the smart device you are pairing to e.g., Smartphone.
- If the Bluetooth name "SPK-B70-132" does not appear on the list of available devices, then try refreshing the list or searching again.
- Make sure the speaker is in Bluetooth mode (default mode when turning on speaker) before searching on your smart device.
- If the speaker is already connected to another smart device, it will need to be unpaired from that device first or it will need to be out of the Bluetooth connection range of that device before it can be connected to another.

Radio not clear:

- Change speaker location.
- Isolate the speaker from other devices as unclear reception may be caused by interference.

USB or Micro SD Card not recognized or files not playing:

- Make sure the USB or Micro SD Card is 32GB or less.
- Check the USB or Micro SD Card has been formatted to the FAT32 or exFAT file system. If the USB/Micro SD Card is new out of the box, we recommend you format it on a Windows-based computer first before copying music to it, then using it with the speaker.
- Make sure to only use MP3 music files copied to the USB or Micro SD Card.

WARRANTY AGAINST DEFECTS

Laser warrants your new product to be free from defects in materials and workmanship for 12 months, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. The benefit of this warranty is in addition to your rights under the Australian Consumer Law and to other rights and remedies of the consumer under a law in relation to the goods or services to which the warranty relates.

Through a network of retailers and resellers, Laser will provide you with your choice of a refund, repair, or exchange (where possible) for this product if it becomes defective within the warranty period. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, normal wear and tear, neglect, or improper storage. Please retain your receipt as proof of purchase


How to make a product warranty claim:

1. Find your receipt with date of purchase. If this is not available, Laser will make an assessment based on the date of manufacture, condition of the product and type of defect.
2. Please contact your original place of purchase. They will assess the nature of the fault and refund or replace the product as per their store refund or warranty policy.
3. If your original place of purchase cannot be contacted, please contact Laser with a description of the fault. To assist our team in providing you with a quick resolution, please include any photos and/or a short video demonstrating the fault with your product.
 - Phone: (02) 9870 3355
 - Email: support@laserco.com.au

- Online: www.laserco.net/support/warranty and follow the website instructions
 - Business Address: U1 6-8 Byfield Street, Macquarie Park, 2113, NSW, Australia
4. Laser will review your claim and in the first instance, attempt to troubleshoot and resolve the issue for you without the need to return the product.
 5. If it is determined via troubleshooting that your product may be faulty, our team will provide instructions to have the product returned for assessment. If the product does need to be returned within the warranty period, Laser will arrange return shipping at no cost to you.
 6. Once we receive the product, our experienced technicians will assess it and determine how best to resolve the issue.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Documents / Resources

 <p>Laser Party Boombox with LED SPK-B70-132</p>	<p>LASER SPK-B70-132 Party Boombox with LED [pdf] Instruction Manual SPK-B70-132 Party Boombox with LED, SPK-B70-132, Party Boombox with LED</p>
---	--

References

- [Laser: The Ultimate Tech Hub for Home Entertainment, Audio, Smart Home & More](#)
- [Warranty](#)