



# SPK-F222 Laser 12" Party Speaker with Trolley User Manual

[Home](#) » [Laser](#) » SPK-F222 Laser 12" Party Speaker with Trolley User Manual

## Contents [ [hide](#) ]

### 1 Manual LASER 12" Party Speaker with Trolley

#### 1.1 SPK-F222

#### 1.2 | SPECIFICATION

#### 1.3 | FEATURES

#### 1.4 | WHAT'S IN THE BOX

#### 1.5 | BLUETOOTH

#### 1.6 | FM RADIO

#### 1.7 | TRUE WIRELESS STEREO – TWS (2 speakers required)

#### 1.8 | CONTROL PANEL

#### 1.9 | REMOTE

#### 1.10 TROUBLESHOOTING

### 2 Documents / Resources

#### 2.1 References

### 3 Related Posts

## Manual LASER 12" Party Speaker with Trolley

SPK-F222



## | SPECIFICATION

|                                      |                       |
|--------------------------------------|-----------------------|
| Output power                         | 30W+5W tweeter        |
| Driver unit size                     | 12 inch               |
| S/N ratio                            | ≥80dB                 |
| Separation                           | ≥45dB                 |
| Frequency response                   | 100Hz-20KHz           |
| Bluetooth version                    | V5.0                  |
| Bluetooth range                      | 10 meters             |
| Bluetooth pairing name               | SPK-F222              |
| USB & Micro SD Card memory supported | 32 GB                 |
| FM radio                             | 87.5-108.0MHz         |
| Battery capacity                     | Built-in 7.4V 1800mAh |
| Battery type                         | Li-ion                |
| Approx Playback time                 | 100mins at max volume |
| Charging indicator                   | Yes                   |
| Charge voltage                       | DC 5V                 |

## | FEATURES

- True Wireless Stereo Function
- Bluetooth Wireless Connectivity
- USB (FAT32 or exFAT file system only)
- Micro SD Card (FAT32 or exFAT file system only)

- FM Radio
- AUX IN
- Microphone Function
- Rechargeable Lithium Battery

#### | **WHAT'S IN THE BOX**

- 1 x SPK-F222 Speaker
- 1 x Micro USB Charging cable
- 1 x 3.5mm Aux Cable
- 1 x User Manual
- 1 x Remote

#### | **BLUETOOTH**

- Turn on Speaker and tap "MODE" until "BLUE" is displayed.
- Search for "SPK-F222" under the Bluetooth settings of device being connected.

#### **TIP**

If password is requested enter "0000"

#### | **FM RADIO**

- Tap **FM** to start the AUTO SEARCH function for FM stations.
- This operation will scan all FM stations and record them to memory.
- The scan procedure will take 1 – 2 minutes to complete and should not be interrupted.
- Once complete you can tap **◀** or **▶** to skip between the saved stations.

#### **TIP**

Connect the 3.5mm AUX cable in the the AUX port to improve FM reception


#### | **TRUE WIRELESS STEREO – TWS (2 speakers required)**

- Turn ON both speakers and switch them into Bluetooth mode.
- Press and hold MODE button on one of the speakers.
- A beep will be heard which indicates the unit is waiting for TWS pairing.
- Keep the button held for 5-10 seconds and another beep will be heard when TWS is connected successfully.

#### **TIP**




The TWS function does not work with Microphone
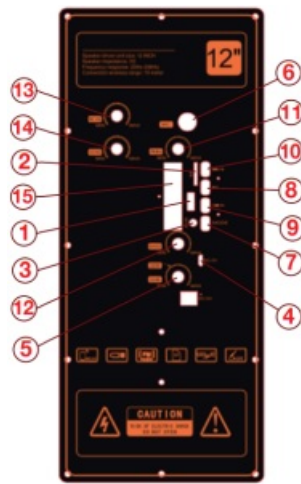
#### | **CONTROL PANEL**




1. USB
2. Micro SD Card
3. AUX
4. Micro USB DC 5V
5. Power ON/OFF & Volume
6. MIC
7. MODE
8. 
9. 
10. 
11. TREBLE
12. BASS
13. MICROPHONE VOLUME
14. ECHO
15. DISPLAY

|                  |  |
|------------------|--|
| 1. USB           | <ul style="list-style-type: none"> <li>• Only MP3 files on FAT32 or exFAT file system are supported</li> <li>• Please try formatting to suggested file system if not detected</li> </ul> |
| 2. Micro SD Card | <ul style="list-style-type: none"> <li>• Only MP3 files on FAT32 or exFAT file system are supported</li> <li>• Please try formatting to suggested file system if not detected</li> </ul> |
| 3. AUX           | <ul style="list-style-type: none"> <li>• Use supplied 3.5mm AUX cable</li> </ul>   |

|   |  |
|---|--|
| 4. Micro USB DC 5V  | <ul style="list-style-type: none"> <li>• Insert one end of cable into the DC 5V input and the other end into a USB wall adapter (not included)</li> <li>• A RED LED light will indicate charging</li> <li>• Approx 8-12 hours for a full charge</li> </ul> |
| 5. Power ON/OFF & Volume  | <ul style="list-style-type: none"> <li>• Turn Speaker ON/OFF</li> <li>• Adjust Volume</li> </ul>   |
| 6. MIC  | <ul style="list-style-type: none"> <li>• Microphone Input</li> </ul>   |
| 7. MODE   | <ul style="list-style-type: none"> <li>• Tap to switch between Bluetooth, FM, AUX, USB and Micro SD Card modes</li> </ul>  |
| 8.    | <ul style="list-style-type: none"> <li>• Tap to PLAY/PAUSE when using USB, Micro SD Card or Bluetooth mode</li> <li>• Tap to start AUTO SEARCH function when using FM Radio</li> <li>• Press and HOLD to turn front speaker LED ON/OFF</li> </ul>          |
| 9.   | <ul style="list-style-type: none"> <li>• Tap to SKIP to PREVIOUS track when using USB, Micro SD Card or Bluetooth modes</li> <li>• Press and HOLD to decrease volume</li> </ul>  |
| 10.  | <ul style="list-style-type: none"> <li>• Tap to SKIP to NEXT track when using USB, Micro SD Card or Bluetooth modes</li> <li>• Press and HOLD to increase volume</li> </ul>  |
| 11. TREBLE  | <ul style="list-style-type: none"> <li>• Adjust TREBLE</li> </ul>  |
| 12. BASS  | <ul style="list-style-type: none"> <li>• Adjust BASS</li> </ul>  |
| 13. MIC. VOL  | <ul style="list-style-type: none"> <li>• Adjust MICROPHONE VOLUME</li> </ul>   |

|             |   |
|-------------|---|
| 14. ECHO    | • Adjust ECHO   |
| 15. DISPLAY | • When using MODE button the selected function will be displayed here |

## | REMOTE

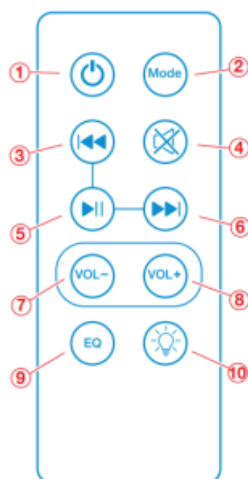

1. Turn Speaker ON/OFF
2. Switch between Bluetooth, FM, AUX, USB and Micro SD Card modes
3. SKIP to PREVIOUS track when using USB, Micro SD Card or Bluetooth modes
4. Mute
5. PLAY/PAUSE when using USB, Micro SD Card or Bluetooth mode
6. SKIP to NEXT track when using USB, Micro SD Card or Bluetooth modes
7. Decrease Volume
8. Increase Volume
9. Equalizer
10. Front speaker LED ON/OFF

## TROUBLESHOOTING

### No Power:

1. Check battery level and charge if required
2. Try turning on speaker while connected to power cable
3. Try charging with USB Wall Adapter

### Radio not clear:

1. Change speaker location
2. Plug the 3.5mm AUX cable into AUX input on back as this doubles as an aerial

3. Isolate speaker from other devices as this may be caused by interference

### USB or Micro SD Card not recognised or files not playing:

1. Check USB or Micro SD Card has been formatted to the FAT32 or exFAT file system. If not please format on a Windows based computer
2. Make sure only use MP3 music files copied to the USB or Micro SD Card



For more helpful guides visit us at

LASER


[www.youtube.com/LasercoAu](http://www.youtube.com/LasercoAu)

### WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

[www.laserco.com.au](http://www.laserco.com.au)

### Documents / Resources

|  |  |
|--|--|
| <br><b>Manual</b><br>LASER 12" Party Speaker with Trolley<br>SPK-F222 | <p><a href="#">LASER SPK-F222 Laser 12" Party Speaker with Trolley</a> [pdf] User Manual<br/>SPK-F222, Laser 12 Party Speaker with Trolley</p> |
|--|--|

### References

- [Laser: The Ultimate Tech Hub for Home Entertainment, Audio, Smart Home & More](#)