




laserco SPK-BTRCT Laser Bar Speaker User Manual

[Home](#) » [LASERCO](#) » laserco SPK-BTRCT Laser Bar Speaker User Manual 

LASER

Manual
Laser Bar Speaker
SPK-BTRCT

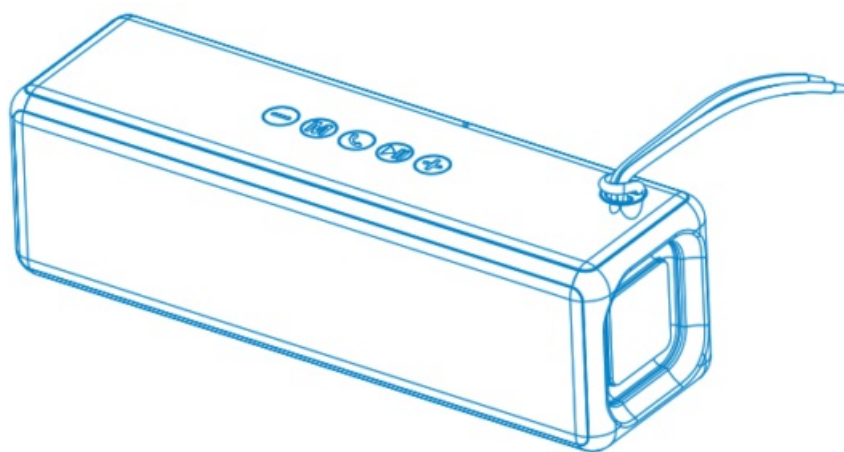

Contents

[1 WHAT`S IN THE BOX](#)

[2 SPECIFICATIONS:](#)

[3 CONTROLS:](#)

[4 FEATURES:](#)

[5 BLUETOOTH](#)

[6 FM RADIO:](#)

[7 TRUE WIRELESS STEREO – TWS \(2 SPEAKERS REQUIRED\)](#)

[8 TROUBLESHOOTING](#)

[9 Documents / Resources](#)

[9.1 References](#)

[10 Related Posts](#)


WHAT`S IN THE BOX

- 1 x SPK-BTRCT Speaker
- 1 x Micro USB cable
- 1 x 3.5mm AUX cable
- 1 x User Manual

SPECIFICATIONS:

Bluetooth Version:	5.0
Bluetooth Range:	10 meters
Bluetooth Name:	SPK-BTRCT
Built-in Microphone:	For hands-free calls
Battery:	3.7V 2400mAh
Battery Runtime:	Approx 5 hours (at medium volume)
Speaker Driver Size:	2 x 0 45mm
Speaker Power:	2 x 5W / 40
Frequency Response:	120Hz – 20KHz
Product Dimensions:	204 x 71 x 62mm
Weight:	558g
Charging:	5V / 1A
Charging Time:	Approx 3 – 4 hours.

CONTROLS:

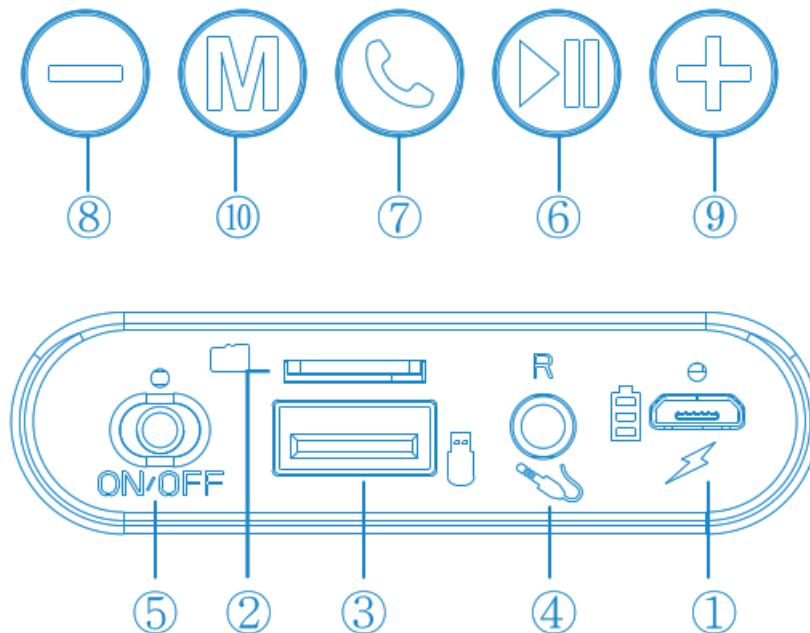

1.	Micro USB	<ul style="list-style-type: none"> · Insert one end of the Micro USB cable into the Micro USB Port and the other end into a USB wall adapter (not included) to start charging. · A solid red light signals the device is charging. · Approx. 3 – 4 hours for a full charge.
2.	Micro SD Card	<ul style="list-style-type: none"> · Only MP3 files on FAT32 or exFAT file system are supported · Please try formatting storage to the suggested file system if not detected.
3.	USB	<ul style="list-style-type: none"> · Only MP3 files on FAT32 or exFAT file system are supported. · Please try formatting storage to the suggested file system if not detected.
4.	AUX	<ul style="list-style-type: none"> · Connect a source device via the supplied 3.5mm AUX cable. · The AUX cable also provides better FM reception.
5.	Power	<ul style="list-style-type: none"> · Turn device ON/OFF. · A fast blinking blue light signals the device is in BT pairing mode. · A slow blinking blue light signals the device is ON.
6.	Play/Pause	<ul style="list-style-type: none"> · Tap to PLAY/PAUSE when using USB, AUX, Micro SD Card or Bluetooth mode. · Tap to start AUTO SEARCH function when using FM Radio.
7.	Call	<ul style="list-style-type: none"> · Tap to answer an incoming call. · Tap to hang up the current call.
8.	–	<ul style="list-style-type: none"> · Hold to decrease volume. · Tap to SKIP backward between stations or tracks.
9.	+	<ul style="list-style-type: none"> · Hold to increase volume. · Tap to SKIP forwards between stations or tracks.
10.	Mode	<ul style="list-style-type: none"> · Tap to change between Bluetooth, AUX, FM, Micro SD, or USB. · Tap to SKIP between stations in FM Mode. · Tap and hold during Bluetooth mode to pair TWS.

FEATURES:

- Bluetooth Wireless Connectivity (can be used for phone calls)
- TWS – True Wireless Stereo

- FM Radio
- AUX IN
- Rechargeable Battery

BLUETOOTH

- Turn on the speaker and tap “M” until “BLUETOOTH MODE” is heard (by default the device should turn ON in BT mode).
- Search for “SPK-BTRCT” under the Bluetooth settings of the device being connected.

TIP: If a password is requested enter “0000”

FM RADIO:

- Tap Play/Pause to start the AUTO SEARCH function for FM stations.
- This operation will scan all FM stations and record them to memory.
- The scan procedure will take 1 -2 minutes to complete and should not be interrupted.
- Once complete you can tap + or – skip between the saved stations.

TIP: Connect a 3.5mm cable into the AUX port to improve FM reception.

TRUE WIRELESS STEREO – TWS (2 SPEAKERS REQUIRED)

- Turn ON both speakers and switch them into Bluetooth mode.
- Press and hold M button on one of the speakers.
- A sound will be heard which indicates the speakers are now connected to TWS.
- You can now connect one of the speakers to a Bluetooth source device and when music/sound is played it will come through on both speakers.
- To turn off TWS, power down one of the speakers (there is no other way to disconnect TWS)

TROUBLESHOOTING

No Power:

1. Check battery level and charge if required.
2. Try turning on the speaker while connected to a power source.
3. Try charging with USB Wall Adapter instead of a laptop/computer.

Radio not clear:

1. Change speaker location.
2. Connect a 3.5mm AUX cable into the AUX port to improve FM reception as this also doubles as an aerial.
3. Isolate the speaker from other devices as this may be caused by interference.

USB or Micro SD Card not recognized or files not playing:

1. Make sure the USB or Micro SD Card is 32GB or less.
2. Check USB or Micro SD Card has been formatted to the FAT32 or exFAT
3. Micro SD Card.



For more helpful guides visit us at

LASER


www.youtube.com/LasercoAu

WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

www.laserco.com.au

Documents / Resources

	<p>laserco SPK-BTRCT Laser Bar Speaker [pdf] User Manual SPK-BTRCT Laser Bar Speaker, SPK-BTRCT, Laser Bar Speaker</p>
---	--

References

- [🔗 Laser: The Ultimate Tech Hub for Home Entertainment, Audio, Smart Home & More](#)