



Laserliner 080 50 Flexi-Messlatte Laser Measuring Device User Manual

[Home](#) » [Laserliner](#) » Laserliner 080 50 Flexi-Messlatte Laser Measuring Device User Manual 

Laserliner®

Flexi-Messlatte




Contents

- [1 Flexi leveling staff](#)
- [2 Documents / Resources](#)
- [2.1 References](#)
- [3 Related Posts](#)

Flexi leveling staff

Principles of taking a measurement using the Flexi leveling staff:

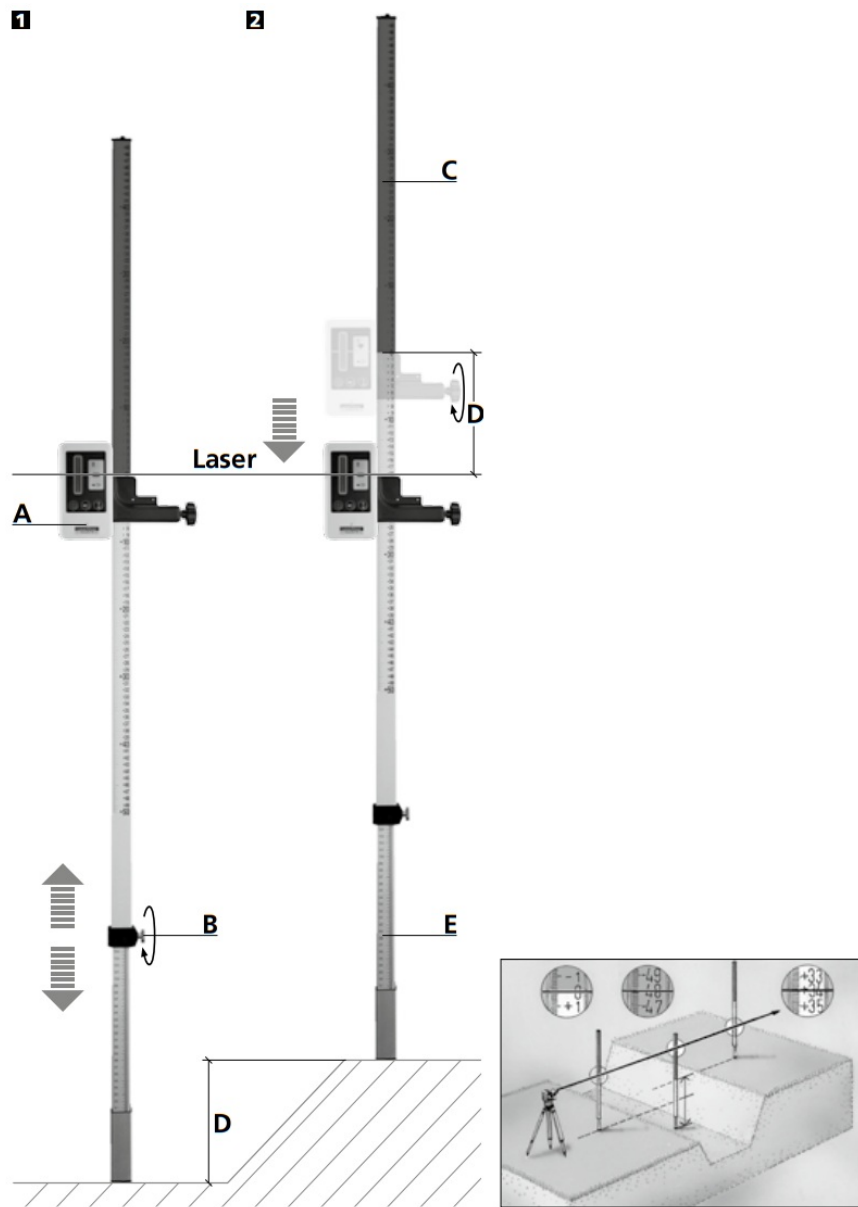

In the first step, the laser measuring device is aligned and the laser receiver (A) is mounted onto the leveling staff and set to "0". Next, the knurled screw (B) is used to set the Flexi leveling staff exactly to laser beam height "0" (Picture 1).


The laser receiver is then re-adjusted and moved to the height of the laser beam (Picture 2).

If the measurement point lies below the starting level, the leveling staff will indicate a negative value; if it lies above, the value indicated will be positive. So, the plus/minus scale indicates the correct height reference value straightaway, without the user having to carry out any calculations.

C Plus/minus mm scale

D Height difference

E Millimetre scale for measuring heights

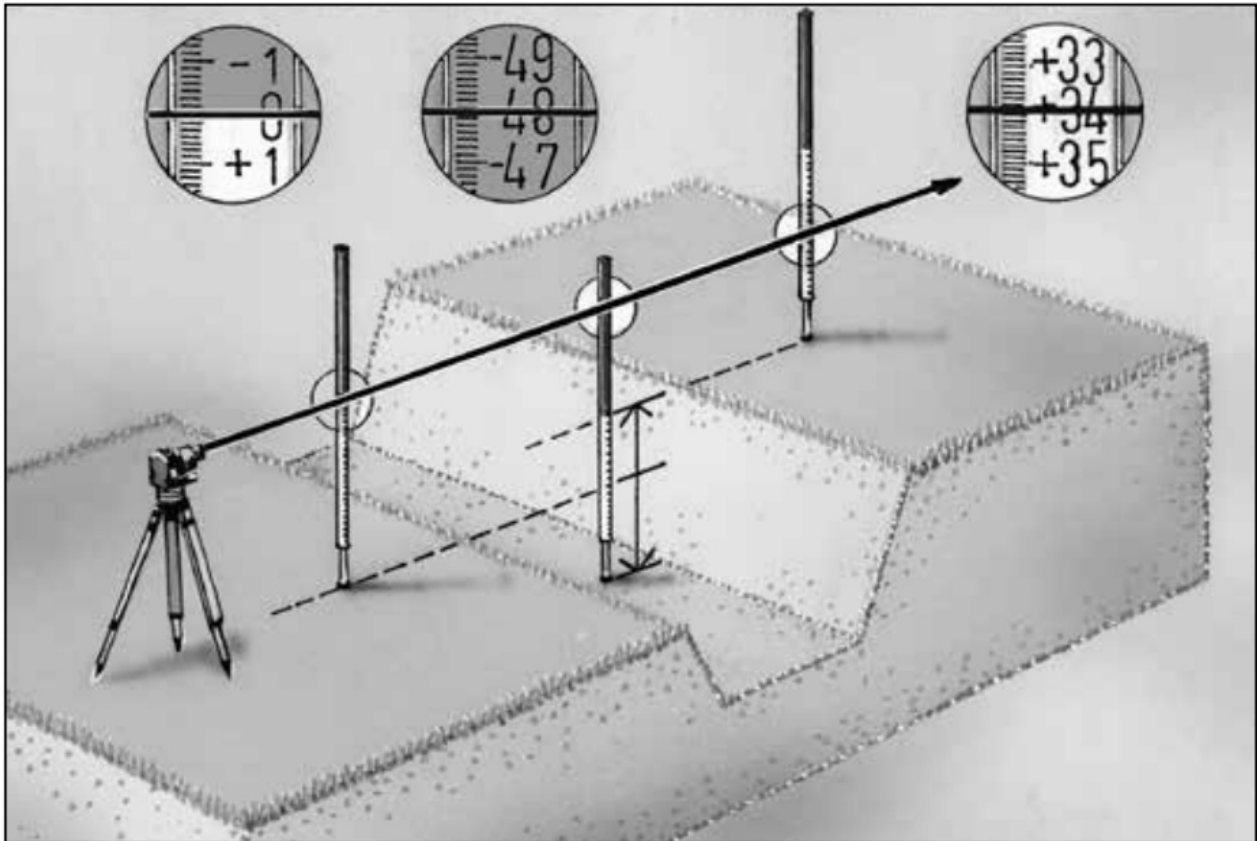

SERVICE

Umarex GmbH & Co. KG

– Laserliner –

Möhnestraße 149, 59755 Arnsberg, Germany
Tel.: +49 2932 638-300, Fax: +49 2932 638-333
info@laserliner.com

Umarex GmbH & Co. KG
Donnerfeld 2
59757 Arnsberg, Germany
Tel.: +49 2932 638-300, Fax: -333
www.laserliner.com



8.026.96.23.01 / Rev18W05

Documents / Resources

[Laserliner 080 50 Flexi-Messlatte Laser Measuring Device](#) [pdf] User Manual
080 50 Flexi-Messlatte Laser Measuring Device, 080 50, Flexi-Messlatte Laser Measuring Device

References

-  [Home](#)

Manuals+.