



LaserPecker Bluetooth Dongle Firmware Upgrade Instructions

[Home](#) » [LASERPECKER](#) » LaserPecker Bluetooth Dongle Firmware Upgrade Instructions 

 
LaserPecker Bluetooth Dongle Firmware Upgrade Instructions




* Please make sure your LP machines is powered off in case the app is connected to the machine instead of the dongle.

Steps:



1. Plug your LP Bluetooth dongle into a computer to power it on.
2. Scan the QR code below to download the LP Firmware Upgrade APP. It's clean app, sopleaseclick" Continue Installation" to authorize its installation.

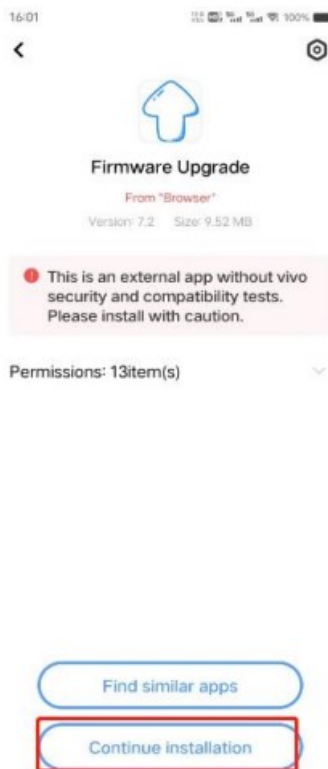

 3. Open the app, and click Bluetooth Dongle Firmware Upgrade at the bottom(you Bluetooth dongle will be connected at the same time).
4. The app will auto-detect the firmware version your LP Bluetooth dongle and recommend the newest available installation package. Choose the package and click Start upgrade.

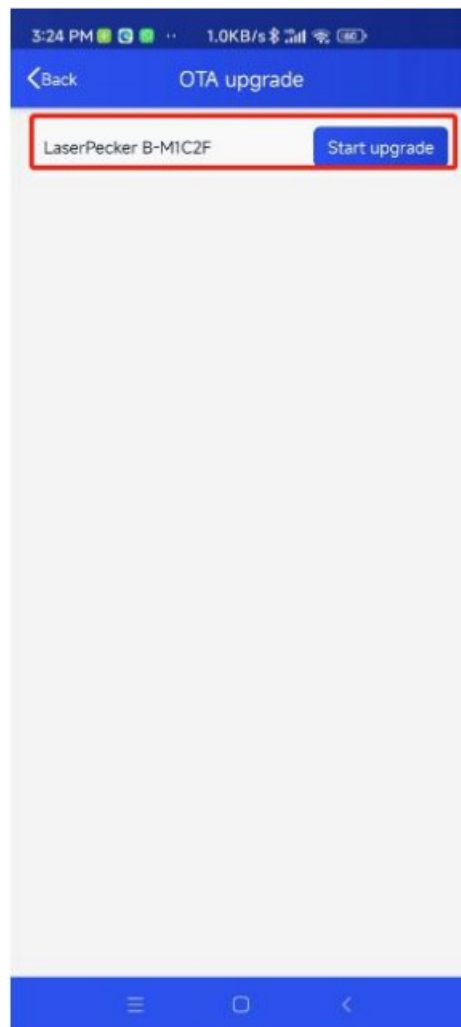

5. Wait until the progress notification reaches "100" and the prompt says "Succeed".

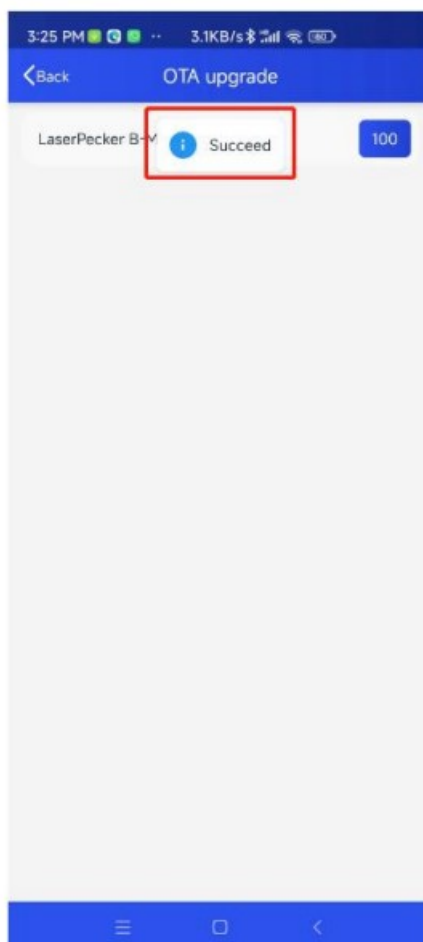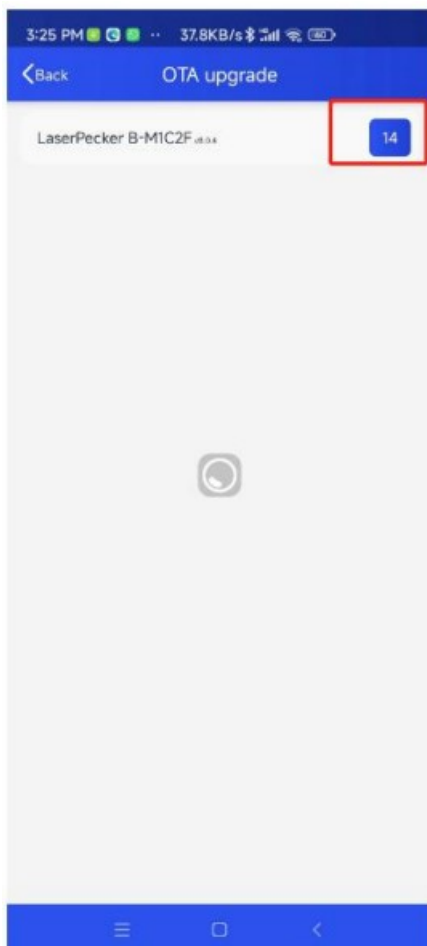

Now, you've successfully upgraded the firmware of your LaserPecker Bluetooth Dongle.



- Contents
- [1 Documents / Resources](#)
- [2 Related Posts](#)

Documents / Resources

| | |
|---|---|
|  | <div>LaserPecker Bluetooth Dongle Firmware Upgrade [pdf] Instructions</div> <div>Bluetooth Dongle Firmware Upgrade, Bluetooth Dongle, Dongle Firmware Upgrade, Dongle</div> |
|---|---|