

Lasko T36550C Tower Fan with Remote Control Instruction Manual

Home » Lasko » Lasko T36550C Tower Fan with Remote Control Instruction Manual





Used for Model: T36550C

Register Your Product Today www.lasko.com/product-registration/

You will benefit from:

- · Efficient and enhanced support
- Future product updates

Have a Question? Need a Part?

Please Do Not Return Product to Store! Contact Lasko Customer Service: (800) 233-0268 Monday-Friday 8AM – 5PM EST. (Valid in the USA, its Territories, and CANADA Only)

READ AND SAVE THESE INSTRUCTIONS

Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage!

This Fan is for residential use only. It is not intended to be used in commercial, industrial, or agricultural settings.











Contents

- 1 IMPORTANT SAFETY INSTRUCTIONS
- 2 Parts Included
- 3 Assembly
- **4 Controls**
- **5 REMOTE CONTROL:**
- **6 MAINTENANCE**
- **7 TROUBLESHOOTING TIPS**
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, these instructions and warnings should always be followed to reduce the risk of fire, electrical shock, and injury to persons:



Read all instructions before using this Fan.





WARNING

TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, OR PERSONAL INJURY, ALWAYS FOLLOW THESE IMPORTANT SAFETY INSTRUCTIONS AND WARNINGS:

DO NOT use this Fan to ventilate areas where flammable liquids or vapors are used, stored, or are present, including paints, gasoline, varnishes, floor refinishing products or solvents. ALWAYS read and follow all warnings and instructions on the con' trainers for these products!

ALWAYS be sure the plug fits tightly into the outlet. When plugs fit loosely into outlets, they may slip partially out of the outlet and create a poor connection. This may cause outlets to overheat and create a potential fire hazard. Outlets in this condition 'should be replaced by a qualified electrician.

ALWAYS unplug the power cord when servicing, cleaning, or moving the Fan. **DO NOT** use the ON/OFF switch as the sole means of disconnecting power. **NEVER** leave children unattended when the Fan is on or plugged in. **ALWAYS** turn off and 'unplug the Fan when not in use.

BE CERTAIN that the power source for the Fan is 120V AC. DO NOT plug the Fan into 240V or another power source.

The **Blue Plug**⁻ on your Lasko Fan is a safety feature. It contains a non-replaceable safety device (fuse) that should not be removed or tampered with. To reduce the risk of fire, electric shock, and personal injury, **DO NOT** attempt to remove, replace, repair or tamper with the originally supplied plug. If the Fan has stopped functioning, it may be due to the safety device incorporated in this plug.


THIS FAN HAS A POLARIZED PLUG (one blade is wider than the other). This plug is designed to fit into the outlet only one way. Match the wide blade to wide slot in the outlet and FULLY INSERT. **DO NOT** attempt to bypass or defeat this safety feature. If the plug does not fit in the outlet, consult a qualified electrician. The outlet may need to be replaced.



- AVOID the use of extension cords, power strips, power taps, outlet style air fresheners, or other cord connected devices, as these devices may overheat and cause a fire hazard.
- **DO NOT** route power cord under rugs, carpets, runners, or furniture. This may damage the cord or cause it to overheat creating a fire hazard.
- ALWAYS place the Fan on a stable, flat, level surface while in operation to prevent the Fan from overturning.
- NEVER insert or allow fingers or objects to enter grill openings while Fan is in operation or injury and/or damage to the Fan may occur.
- DO NOT block, cover or obstruct airflow to or from the Fan while in operation.
- **DO NOT** use this Fan outdoors or near water or wet locations such as a bathtub, pool, or hot tub. Use of this Fan in a wet location may create a shock hazard
- **DO NOT** run cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Do not route the cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- NEVER use a single extension cord to operate more than one Fan or another electrical device.
- **DO NOT** use this Fan if it has been damaged or is not functioning properly.
- Remote controls for other appliances or electronic equipment can sometimes interfere with the operation of this Fan. If this occurs, move the Fan to another location.
- Keep Fan remote control unit away from chairs and your bed where it may be sat or laid upon and inadvertently turn on the Fan.
- THIS FAN DOES NOT MEET THE REQUIREMENTS OF NEC ARTICLE 547-7 (2008). This Fan is not suitable
 for use in agricultural facilities including areas where livestock, poultry, or other animals are confined. Please
 refer to National Electric Code (NEC) Article 547-7 (2008), or applicable state or local codes or standards
 relating to electrical requirements for agricultural buildings.
- THIS FAN DOES NOT MEET THE REQUIREMENTS OF NEC ARTICLE 500 (2008). This Fan is not suitable for use in hazardous locations. Please refer to National Electric Code (NEC) Article 500 or applicable state or local codes or standards relating to electrical requirements for hazardous locations.

SAVE THESE INSTRUCTIONS


Parts Included

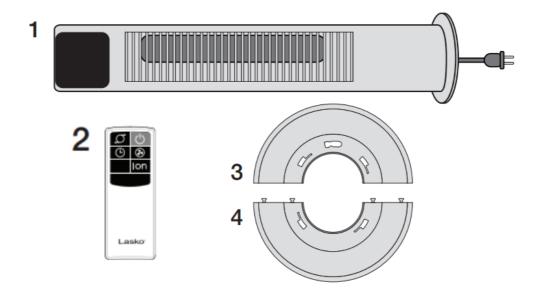


1 Body	3 Support Base A
2 Remote Control	4 Support Base B

Assembly


1. Push the Bosses on Support Base B into the Boss Slots on Support Base A.

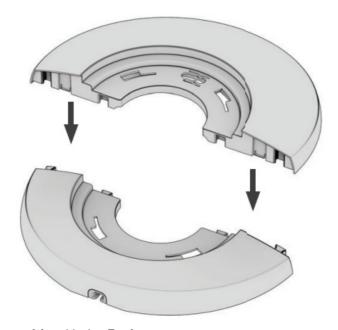

2. Align the Support Base Assembly with the Body.

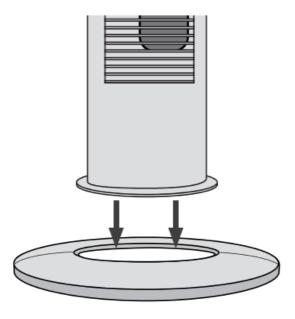

3. Hold the **Body** in place while turning the **Support Base Assembly** clockwise until it no longer turns and locks in place.

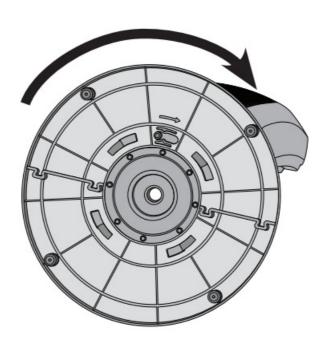

Controls



Power Button

Turn Fan ON/OFF by pressing the Power Button.



Timer Button

The timer can be set up to 8 hours. Continue pressing the Timer Button to reach the desired time s etting.



Oscillation Button

Press the Oscillation Button to start and stop the oscillation function.



Fan Speed Button

Fan Speed can be adjusted to 1, 2, or 3.



Ionizer Button

Press to turn Ionizer On/Off. When the Ionizer is turned on it will assist in the purification of the roo m air. The Ionizer function on this Fan will operate within any speed mode.

REMOTE CONTROL:

All the functions performed with the Remote Control work iden ti cally to the manual controls.

- 1. Install two "AAA" batteries (not included).
- 2. Do not mix old and new batteries. Do not mix al ka line, standard (carbon-zinc), or rechargeable (nickel-cad mi um) batteries.
- 3. DO NOT DISPOSE OF BATTERIES IN FIRE. BAT TER IES MAY EXPLODE OR LEAK.
- 4. Always purchase the correct size and grade of battery most suitable for the intended use.
- 5. Replace all batteries of a set at the same time.
- 6. Clean the battery contacts and also those of the device prior to battery installation.
- 7. Ensure the batteries are installed correctly with regards to polarity (+ and -).
- 8. Remove batteries from equipment that is not to be used for an extended period of time.
- 9. Remove used batteries promptly.

MAINTENANCE

To reduce the risk of electrical shock and fire please observe the following instructions:





- Always unplug the cord before moving, servicing, or cleaning.
- NEVER place the Fan in or near water.
- Clean the Fan only with a vacuum equipped with a brush attachment; the vacuum will remove the lint and dirt from inside the Fan.



- NEVER attempt to take apart the Fan.
- Clean the body of the Fan with a soft cloth only.
- NEVER use ALCOHOL or SOLVENTS such as gasoline, benzene, paint thinner, or other harsh cleaners.

TROUBLESHOOTING TIPS

If your Fan fails to operate, see below for a list of probable causes and solutions:

- 1. Be sure the power cord is plugged into a working electrical outlet.
- 2. Make certain the batteries in the remote control are new and properly installed.

SERVICING: For servicing, other than general user maintenance, please contact Customer Service at (800) 233-0268, Monday through Friday, from 8 am-5 pm Eastern.

STORAGE: Store the Fan with these instructions, in the original carton in a cool, dry place.

LUBRICATION: Motor is permanently lubricated.

DISPOSITION: Corrugated packaging materials are recyclable. For environmentally responsible disposal of this product, contact your local waste service provider or visit www.1800recycling.com®.

LASKO PRODUCTS, LLC LIMITED WARRANTY (VALID IN THE USA, ITS TERRITORIES, AND CANADA ONLY)

WHAT THIS WARRANTY COVERS: This product is warranted against defects in workmanship and/or materials. HOW LONG THIS WARRANTY LASTS: This warranty extends only to the original purchaser of the product and lasts for one (1) year from the date of original purchase or until the original purchaser of the product sells or transfers the product, whichever first occurs.

WHAT LASKO WILL DO: During the warranty period, Lasko will, at its sole option, repair or replace any part or parts that prove to be defective or replace the whole product with the same or comparable model. For all warranty claims, the product must be returned to Lasko Products, LLC at customer expense with proof of purchase within the warranty period. Contact the Lasko customer service department to obtain a Return Authorization ("RA"). DO NOT return products without an RA or the warranty claim will not be processed.

WHAT THIS WARRANTY DOES NOT COVER: This warranty does not apply if the product was damaged or failed because of an accident, improper handling, or operation. shipping damage, abuse, misuse, unauthorized repairs made or attempted. This warranty does not cover shipping costs for the return of products to Lasko for repair or replacement. Lasko will pay return shipping charges from Lasko following warranty repairs or replacement.

ANY AND ALL WARRANTIES, EXPRESSED OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTY OF MERCHANTABILITY), LAST ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE OR UNTIL THE ORIGINAL PURCHASER OF THE PRODUCT SELLS OR TRANSFERS THE PRODUCT, WHICHEVER FIRST OCCURS AND IN NO EVENT SHALL LASKO'S LIABILITY UNDER ANY EXPRESS OR IMPLIED WARRANTY INCLUDE (I) INCIDENTAL OR CONSEQUENTIAL DAMAGES FROM ANY CAUSE WHATSOEVER, OR (II) REPLACEMENT OR REPAIR OF ANY HOUSE FUSES, CIRCUIT BREAKERS OR RECEPTACLES. NOTWITHSTANDING ANYTHING TO THE CONTRARY, IN NO EVENT SHALL LASKO'S LIABILITY UNDER ANY EXPRESS OR IMPLIED WARRANTY EXCEED THE PURCHASE

PRICE OF THE PRODUCT AND ANY SUCH LIABILITY SHALL TERMINATE UPON THE EXPIRATION OF THE WARRANTY PERIOD.

Some states and provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so these exclusions or limitations may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state to state and province to province.

Proof of purchase is required before a warranty claim will be accepted.

CUSTOMER SERVICE:

Toll-Free (800) 233-0268.

Email: producthelp@lasko.com

Our Customer Service team is available to assist you with product and service questions, and replacement parts.

They can be reached Monday through Friday, 8 am-5 pm Eastern.

Please have your model number available, as well as the type and style

(located on the underside of your product).

Customer Service Dept., 820 Lincoln Ave., West Chester, PA 19380 (Please do not send the product to this location)

www.lasko.com

Manual printed in China



Documents / Resources



<u>Lasko T36550C Tower Fan with Remote Control</u> [pdf] Instruction Manual T36550C, Tower Fan with Remote Control

References

- <u>RecycleNation Search. Find. Recycle.</u>
- Lasko, GermGuardian, B-Air, BlueDri | Fans, Heaters, Air Purifiers Lasko Products

Manuals+,