

LAUNCH LE4-FRD-01 Universal Remote Key User Manual

Home » Launch » LAUNCH LE4-FRD-01 Universal Remote Key User Manual

Contents

- 1 LAUNCH LE4-FRD-01 Universal Remote
- Key
- 2 Specifications
- **3 Product Usage Instructions**
- 4 Pairing with Vehicle
- **5 Overview**
- 6 Button description
- **7 FCC statements**
- 8 FAQ
- 9 Documents / Resources
 - 9.1 References
- **10 Related Posts**



LAUNCH LE4-FRD-01 Universal Remote Key



Specifications

Model: LE4-FRD-01 Universal Remote KeySuitable for vehicles with La AUNCH receiver

• Battery Type: 2032 with 3V

• Frequency Band: RFID (433.92 MHz)

• Max Power: -34.31 dBm

Product Usage Instructions

Changing Battery

- 1. Break open the back side plastic cover of the remote.
- 2. Remove the old battery and replace it with a new 2032 3V battery.
- 3. Ensure the positive and negative terminals of the battery are correctly aligned.

Pairing with Vehicle

- 1. Refer to the corresponding vehicle models to match.
- 2. Install the key the same as before.

FCC Statements

Reorient or relocate the receiving antenna. Increase the separation between the equipment and the receiver. Connect the equipment to an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

RF Warning for Portable Device:

The device has been evaluated to meet general RF exposure requirements The device can be used in portable exposure conditions without restriction.

CE Statements:

This device operates with the following frequency bands and maximum frequency power. The product is compliant with the power limits required by the European Union.

EU Declaration of Conformity:

Launch Tech Co., Ltd. declares that this product with moLE4FR01 complies with Directive 2014/53/EU and 2011/65/EU.

Overview

LE4-FRD-01 Universal Remote Key is suitable for a vehicle which contains the LAUNCH receiver. **Note:** The operating temperature of the product is -20–50°C.

Button description




Item	Description
1	Switch button for mechanical key
2	Lock button
3	Trunk button
4	Unlock button
5	Panic button

Change battery

First use or when the battery runs out need to change a new battery, following steps:





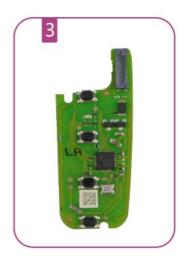

- 1. Break open the back side plastic cover to open the remote
- 2. Take the battery out and replace a new one

Note: The battery type is 2032 with 3V, ensure the positive and negative of the battery are correct.

3. Install the key the same as before

Pairing method

Pairing with vehicle: Referring to the corresponding vehicle models to match.

FCC statements

Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. this device may not cause harmful interference, and
- 2. this device must accept any interference received, including interference that may cause undesired operation.

Information to the user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

RF warning for Portable device

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

CE statements

Frequency Band(s)

- This device operates with the following frequency bands and maximum frequency power.
- Note: The product is compliant with these power limits required by the European Union. Frequency bands supported by the product vary by model.
- RFID (433.92 MHz) Max Pe.r.p. is -34.31 dBm.

EU DECLARATION OF CONFORMITY

Hereby, Launch Tech Co., Ltd. declares that this product with model LE4FR01 complies with Directive 2014/53/EU and 2011/65/EU.

FAQ

- Q: How do I know if my vehicle is compatible with the LE4-FRD-01 Universal Remote Key?
 - A: The remote key is suitable for vehicles equipped with the LAUNCH receiver. Please refer to your vehicle's manual or contact your vehicle manufacturer for compatibility information.

Documents / Resources



<u>LAUNCH LE4-FRD-01 Universal Remote Key</u> [pdf] User Manual LE4FR01, XUJLE4FR01, LE4-FRD-01 Universal Remote Key, LE4-FRD-01, Universal Remote Key, Remote Key, Key

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.