



LAX LX-248B Voltage Full Range Speaker Instruction Manual

[Home](#) » [LAX](#) » LAX LX-248B Voltage Full Range Speaker Instruction Manual 

 
LAX LX-248B Voltage Full Range Speaker Instruction Manual



Contents


- [1 The contour map:](#)
- [2 installation](#)
- [3 Product curve chart:](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

The contour map:

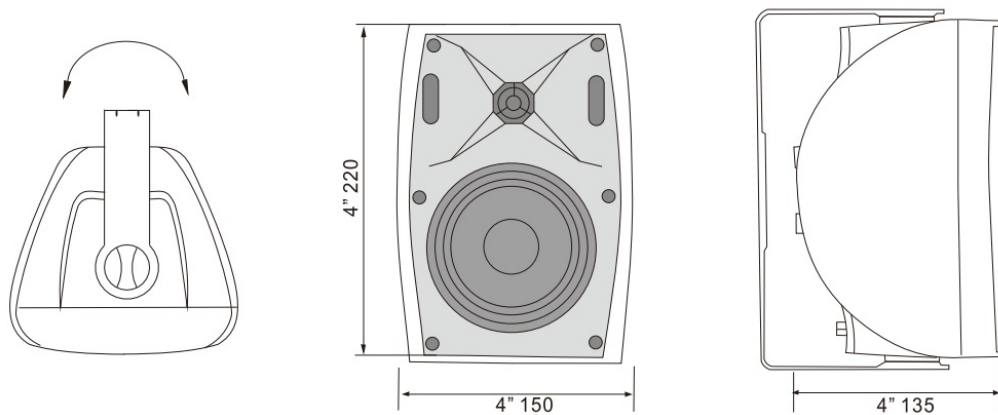


installation

 
1. First, two mounting holes suitable for the $\phi 6\text{mm}$ expansion rubber plug are punched on the wall, and the spacing between the holes is 144mm. Then, the $\phi 6\text{mm}$ expansion rubber plug is punched.

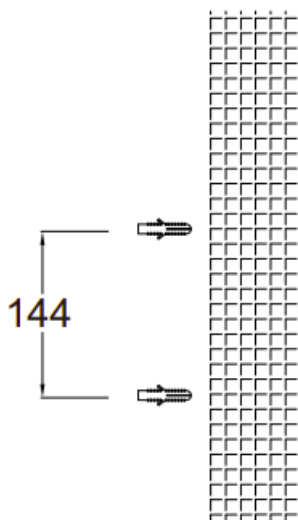

 
2. .Remove the product bracket, align it with the pre-made expansion rubber plug on the wall, lock the ST4.0 tapping screw, and fix the bracket on the wall.

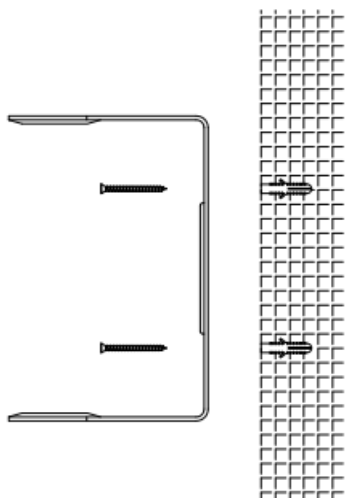

 3. Connect the audio cable, then attach the.

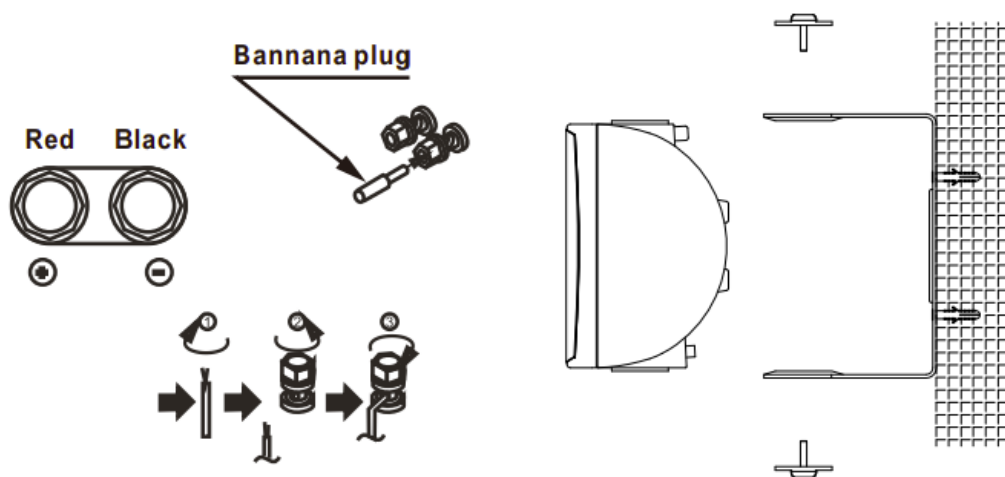

 4. Then adjust the Angle of the speaker. product to the holder.

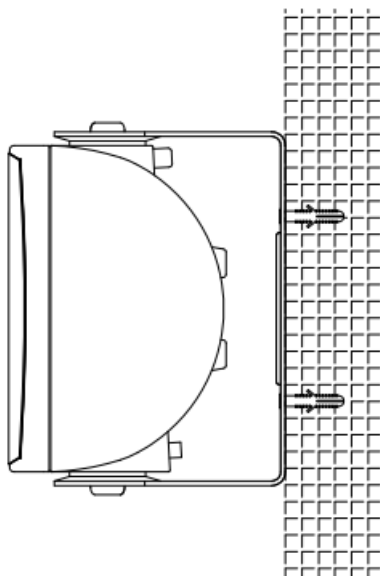

Voltage Speaker

Series application:

 
Shopping malls, schools, conference rooms, hotels and restaurants.

Product characteristics:

Extraordinary speech and music reproduction High strength HIPS material Lower maintenance costs Conformity with CE standards Quick and easy installation

Wiring diagram:


+ Red100V/20W

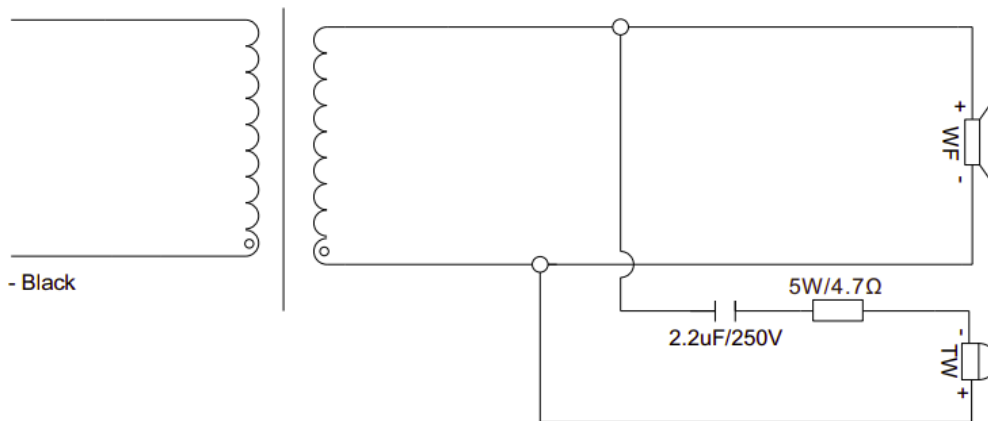


Technical parameters:

Frequency Response	90Hz ~ 20kHz
Sensitivity(1M/1W)	90dB
Rated power	20W(100V)
The loudest pressure level	103dB
Dimension	220*150*135mm
Unit Weight	2.15kg

  Product curve chart:

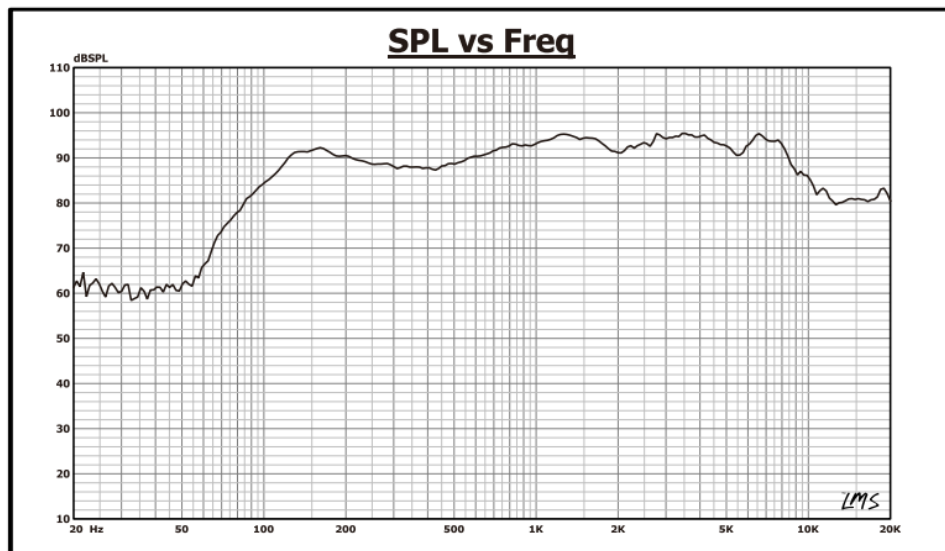

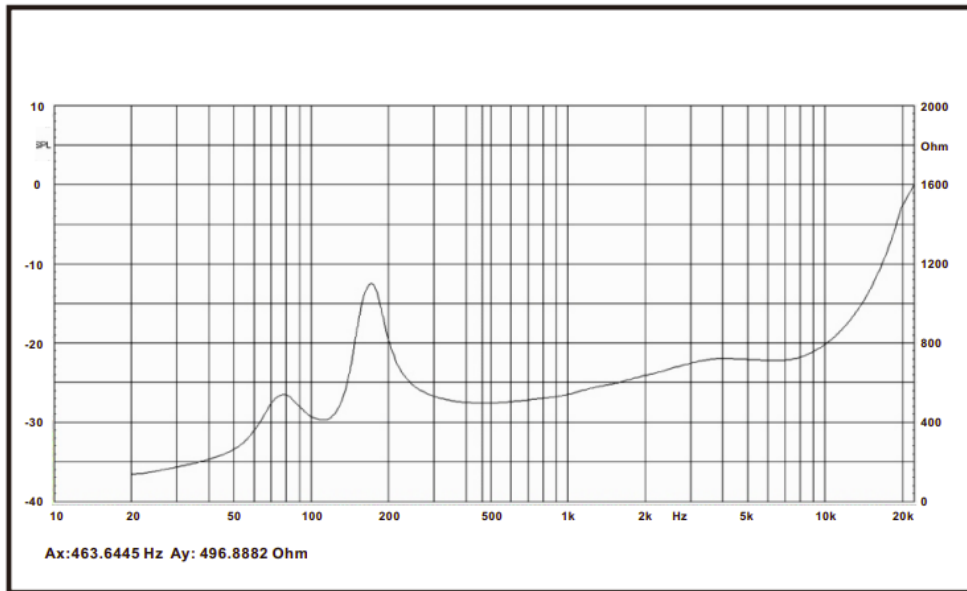

Product Performance Standards: GB/T 12060.5-2011

Manufacturer:Guangzhou Ruifeng Digital Technology Co., Ltd.

Address: No. 10, Shilou Section, Shilian Road, Shilou Town, Panyu District, Guangzhou

Documents / Resources



[LAX LX-248B Voltage Full Range Speaker](#) [pdf] Instruction Manual

LX-248B Voltage Full Range Speaker, LX-248B, Voltage Full Range Speaker, Full Range Speaker, Range Speaker, Speaker

References

- [User Manual](#)