

Lazada K1 Portable Wireless Microphone and Speaker



Lazada K1 Portable Wireless Microphone and Speaker User Manual

[Home](#) » [Lazada](#) » **Lazada K1 Portable Wireless Microphone and Speaker User Manual** 

Contents

 
- [1 Lazada K1 Portable Wireless Microphone and Speaker](#)
- [2 Product Diagram](#)
- [3 How to Charge](#)
- [4 FAQs](#)
- [5 How to Use](#)
- [6 Service Description](#)
- [7 FCC STATEMENT](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)









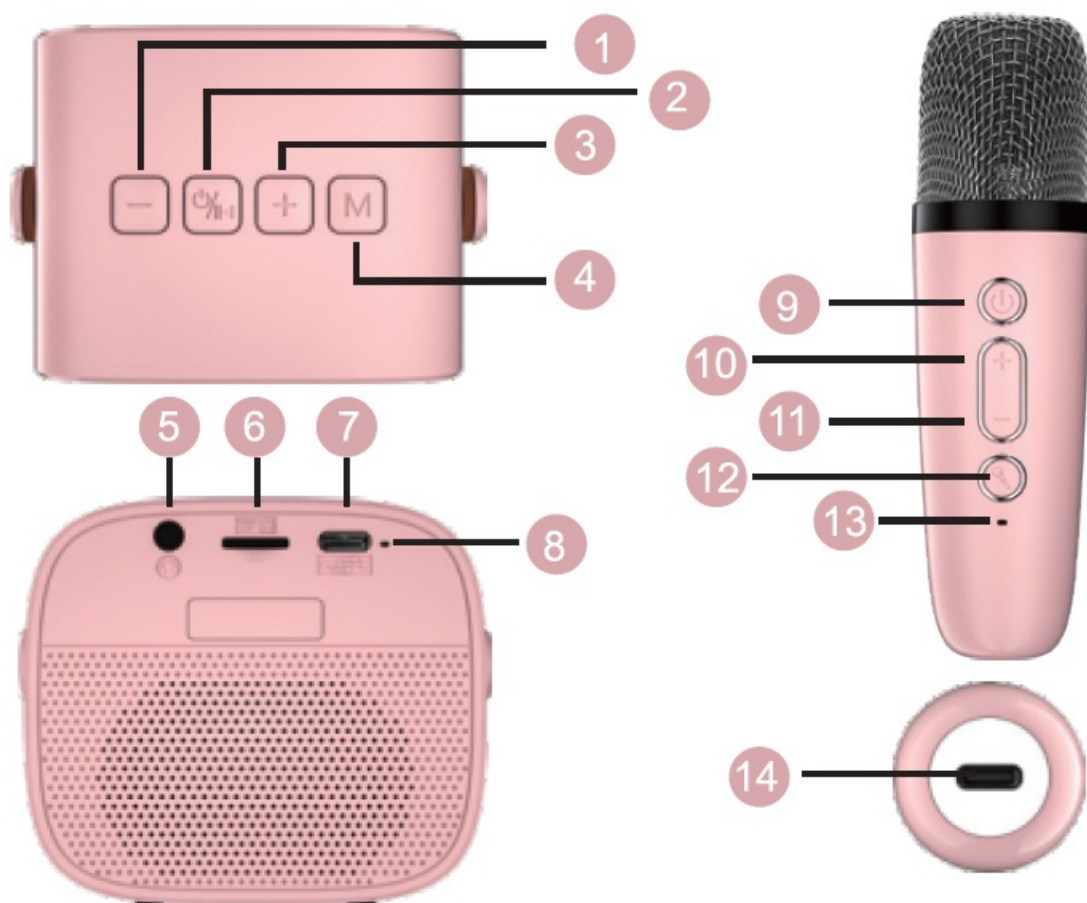







Lazada K1 Portable Wireless Microphone and Speaker




Product Diagram



1		Short press to turn down volume of the speaker Long press to switch to the previous song
2		Long press to POWER ON/OFF the machine Short press to PLAY/PAUSE the music
3		Short press to turn up volume of the speaker Long press to switch to the next song
4		Long press to turn on/off LED dancing light Short press to switch modes(TF/Bluetooth)
5		Headphone Port
6		TF card port
7		Charging port 5V-1A
8		Working Indicator
9		Press and hold for 2-3s to turn ON/OFF the microphone. Short press to PAUSE/PLAY music remotely.
10		Short press to turn up microphone volume, there are 5 levels of mic volume. Long Press 2-3s to turn up echo volume , there are 5 levels of echo volume. (The default echo is 0)
11		Short press to turn down microphone volume, total 5 levels of mic vol. Long Press 2-3s to turn down echo volume , total 5 levels of echo vol.(The default echo is 0)
12		Short press to switch between 4 kinds of magic voices Long press 2-3s to remove/restore music vocals (Part of IOS music not supported)
13		Working Indicator
14		Charging port for microphone 5V-1A


How to use the speaker?

1. **Power ON/OFF:** Press  and hold for 2-3s to turn ON/OFF the speaker. Short press the + – button to adjust volume of the speaker.

2. **Bluetooth Connection:** Turn on the speaker, and press the M button to switch to Bluetooth mode, there is a voice "Bluetooth", and search for the Bluetooth name "K1", click, and pair.
3. **Previous/Next Song:** Long press + – and hold for 2-3s to switch to the next/previous song.
4. **Play music via TF card:** Prepare a micro SD card loaded with MP3 songs, plug the card into the TF card slot of the speaker, and it will auto-play.

How to use the microphone?

1. Power ON/OFF

Press  and hold for 2-3s to turn ON/OFF the microphone. The mic and speaker will auto-connect when both power on.

2. How to adjust the microphone volume?

Short press + – to turn up/down microphone volume, there are 5 levels of mic volume. When reaching the highest or the lowest volume, there will be a prompt voice "du du"


3. How to adjust the echo volume?


Long Press + for 2-3s to turn up echo volume, long press once to turn up 1 level, total 5 levels of echo vol.

Long Press – for 2-3s to turn down echo volume, long press once to turn down 1 level, a total of 5 levels of echo volume.

Note: The default echo is 0, pls long press + to turn up the echo volume to suitable level for a better singing/karaoke effect.

4. Magic Sound Effect

Short press  to switch between 4 kinds of magic voices



Long press  2-3s to remove/restore music vocals (Part of music for IOS not supported)

How to Charge

1. Take out the type-C charging cable included in the package
2. Plug type-C end of the cable into the machine or microphone, and another USB end into the normal USB charging adaptor/PC Port (5V, 1A-2A)
3. When the speaker/mic is being charged, the indicator light turns red. Once it is fully charged, the indicator light will turn off.

 
FAQS

- Bluetooth can't be paired
 - Press the M button to switch to Bluetooth mode first
 - Distant Bluetooth connection, try to adjust the distance between the karaoke machine and the phone.
 - The karaoke machine is already paired with another phone. First, turn off the Bluetooth of other phones restart the machine, and try to pair with the phone again.
- The mic is no sound;
 - Try to charge the mic and use it


- Try to long-press  the mic to turn it on
- The speaker and mic are not connected successfully.
- Pls restart them and turn up the mic vol to try again.
- The machine no sound when playing music;
 - Check whether the Bluetooth is connected successfully
 - Check if the sound was paused via the mic end, if yes, a short press  of the mic to PLAY/PAUSE the music
 - Check if the phone volume is turned up
 - Short press + of the speaker to turn up the speaker's volume
- Presence of noise
 - Environmental noise, or mobile phone signal interference,
 - Adjust the distance between the karaoke machine and the cellphone, and adjust the distance between the mic and machine
- Long press the power button and the machine/mic indicator does not light up;
 - Try to charge the device/mic and use it.

HOW TO USE THE MICROPHONE?

MODEL: K1

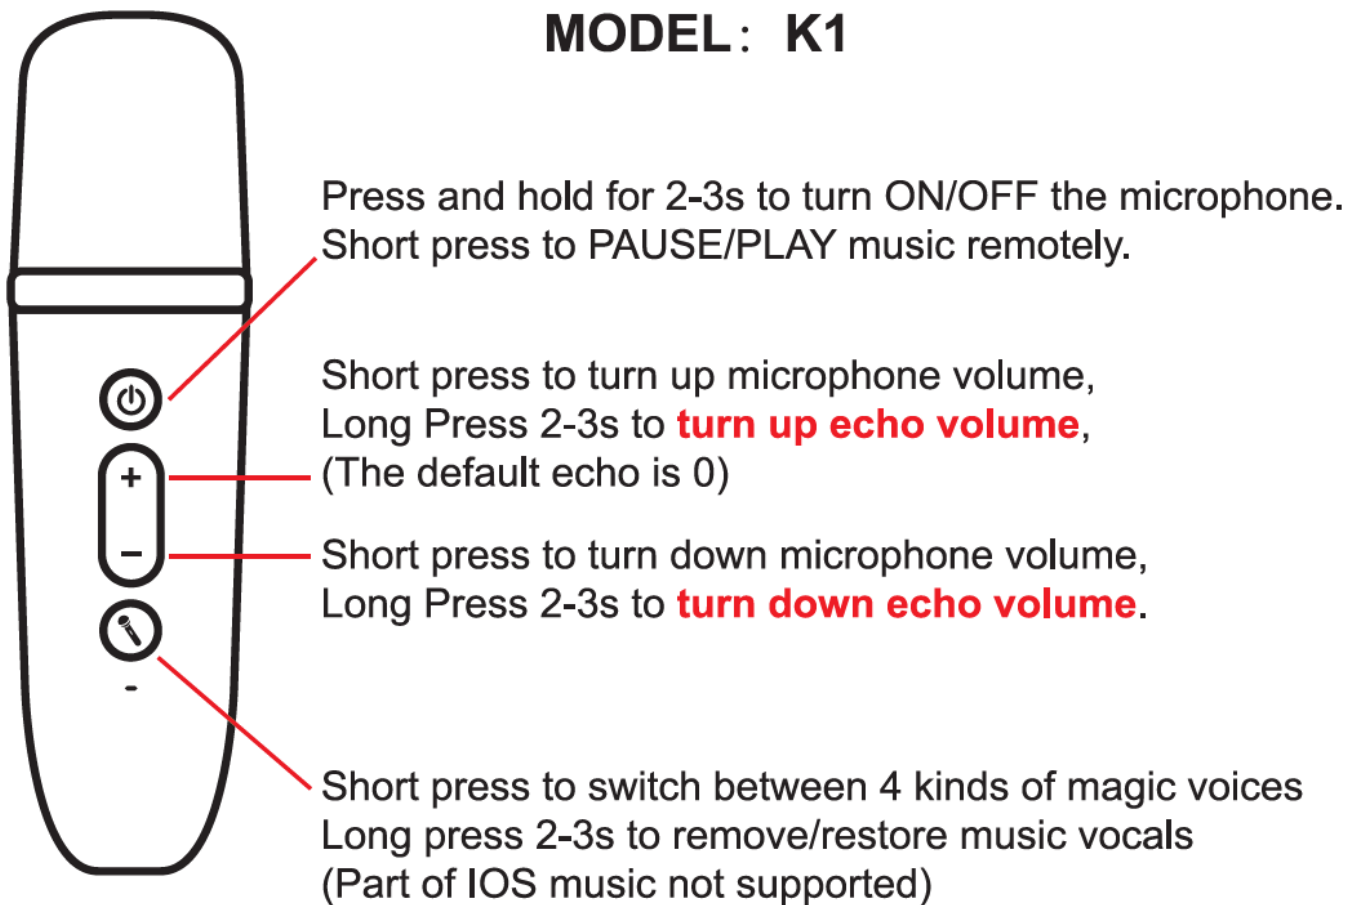

HOW TO USE THE SPEAKER?

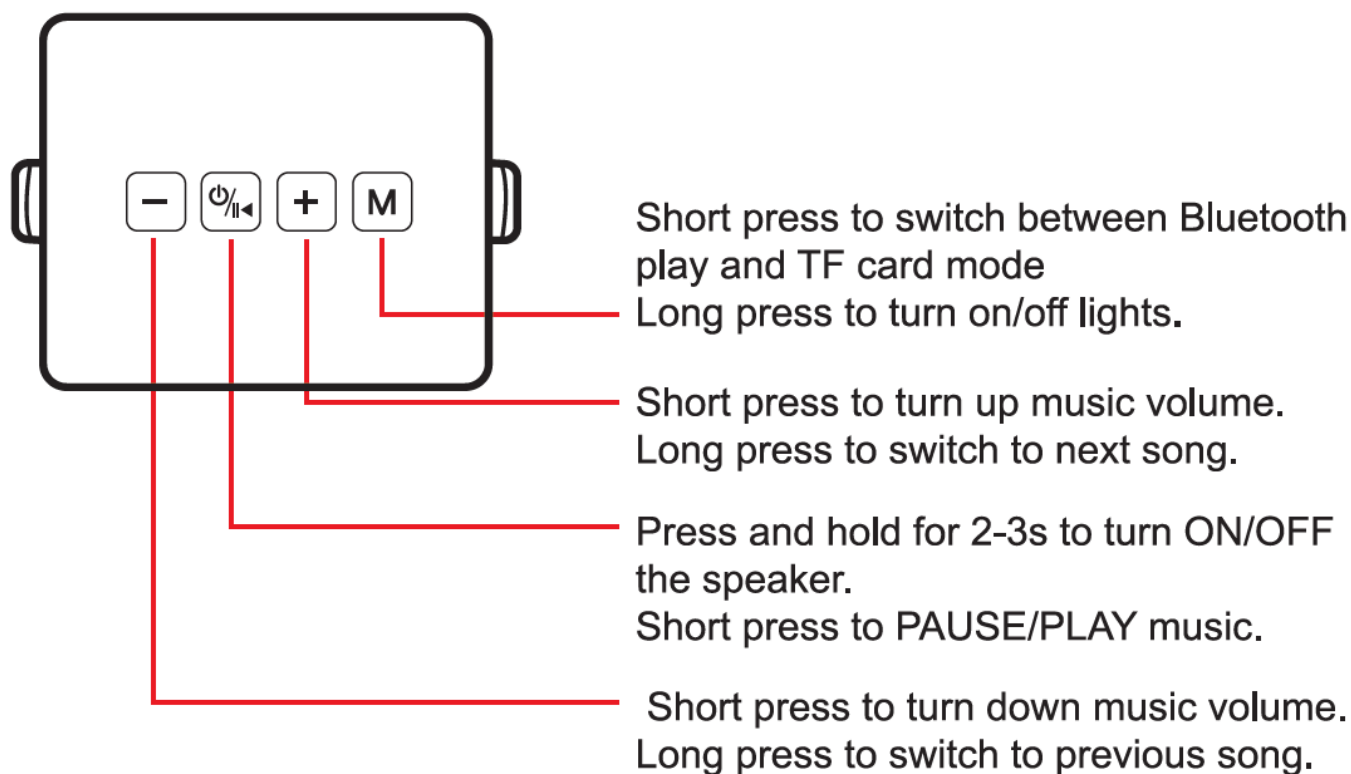 

How to Use



FAQ

1. Bluetooth can't be connected
Pls press the M button to switch to Bluetooth mode first. If the speaker has been connected to other Bluetooth device, pls turn off the other Bluetooth first.
2. The microphone volume is too low
Plus, turn up both echo and mic volumes to try.
3. The microphone doesn't work
Fully charge the speaker and the mic, and restart them to connect again.

Service Description

No worries about this purchase!

30-day no reason money back guarantee, 1-year Warranty, and 24hours warm customer service!

If you encounter any issues with the machine, refer to the user manual or contact us for assistance.

How to Contact Us?

Click “My Orders”→select your order→click “Order Questions”→write down your questions and send them to us.

FCC STATEMENT

Any changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, according to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Documents / Resources

	<p>Lazada K1 Portable Wireless Microphone and Speaker [pdf] User Manual K1, K1 Portable Wireless Microphone and Speaker, Portable Wireless Microphone and Speaker , Wireless Microphone and Speaker, Microphone and Speaker, Speaker</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.