 


Lazy XKD-19 LED Projector Light User Manual

[Home](#) » [Lazy](#) » Lazy XKD-19 LED Projector Light User Manual 

HOOVER FE18AG Jet Vacuum Cleaner

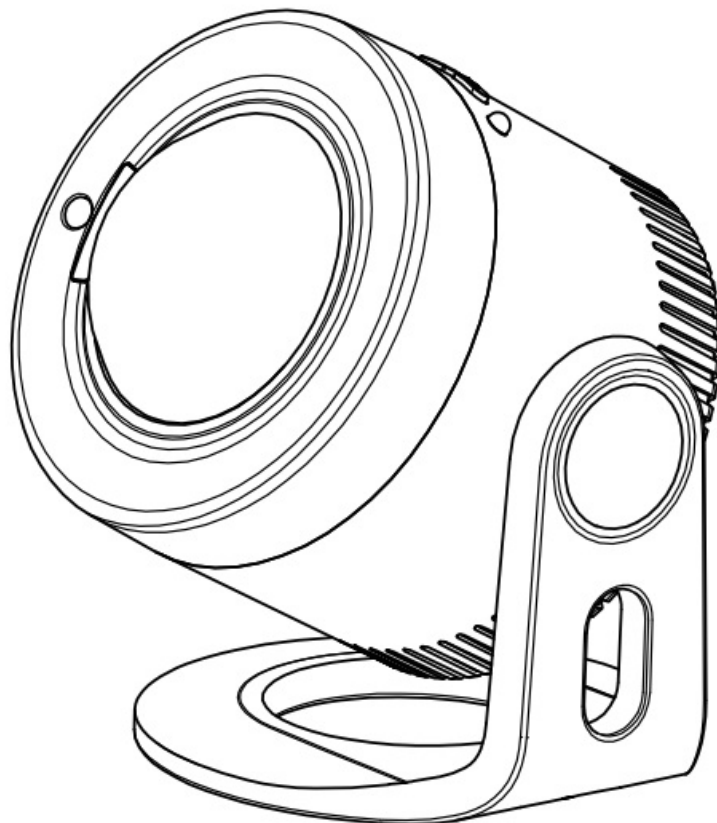

Contents

- [1 Please read the instruction carefully before use](#)
- [Instructions](#)
- [2 Attention](#)
- [3 Instructions](#)
- [4 Disclaimer](#)
- [5 FCC Warning](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Please read the instruction carefully before use Instructions


Package Included
LED Projector Light
Type-c cable
Remote control
User Manual

Product Name	LED Projector Light
Model No.	XKD-19
Material	ABS/PVC
LED Power	< 5W
Input	5V/1A
Working Temperature	10°C~40°C/50°F-104°F
Product Size	160*121* 112mm
Remote Control Range	<5M /16.4FT (Best distance)
Laser Wavelength	532nm
Applicable Environment	Indoor (Better in a dark environment)

Attention

1. The light source of stars and nebulae is strong, please do not look directly at the light source.
2. The brightness of the stars (laser brightness) is affected by the ambient temperature and usage time. When the ambient temperature exceeds 40°C/104°F or Use time exceeds 6 hours, the brightness of the laser will decrease, At this time, just turn off the power and let the laser emit heat dissipation and then turn it on to restore the brightness.
3. This device has a timer setting to automatically turn off the power after 8 hours of operation.

 Instructions

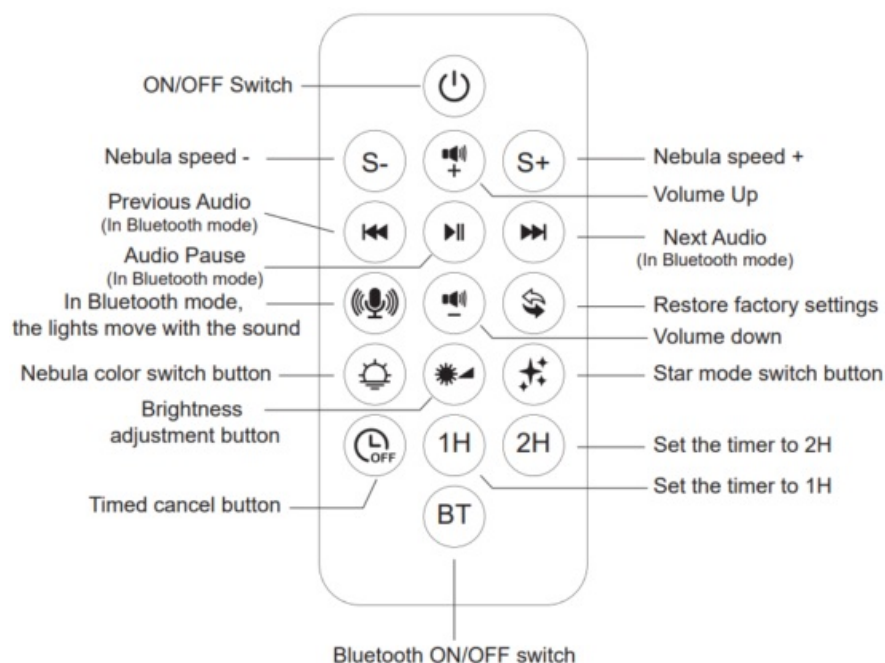

Disclaimer

 
The product you have purchased has been verified as the genuine product manufactured by us.

We are responsible for the products sold from our store only.

The production is carried out under strict monitoring and quality-control.

We provide corresponding after-sales service (the maintenance, warranty or return service for product quality problems confirmed by the merchant).

In addition, the brand is not responsible for any damages caused by the customer privately.

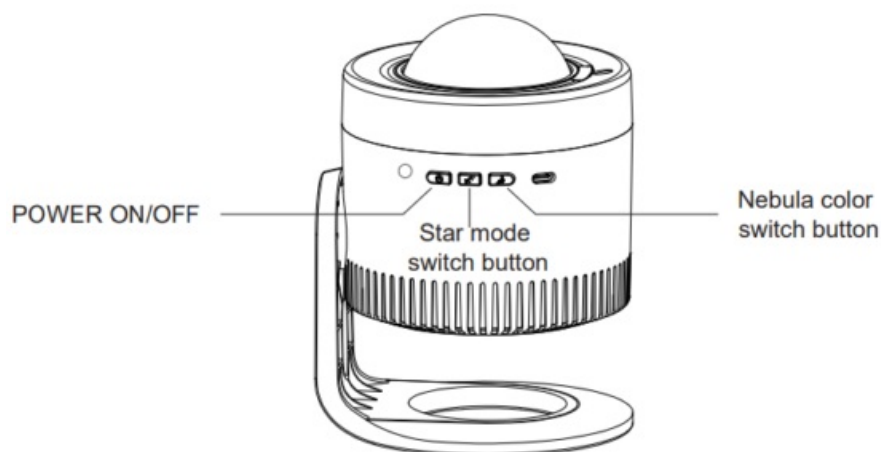

Bluetooth Mode ON and OFF

Bluetooth mode is turned on by default when the device is turned on.

The volume is low when it is turned on, and can be adjusted through the remote control or mobile phone (tablet) and other bluetooth devices.

How to connect the projector via Bluetooth?

Step 1 Please make sure that the Bluetooth of the device you want to connect to is turned on.

Step 2 Restart the projector.

Step 3 the device you want to connect to the projector, In Settings – Bluetooth – Available Devices select “XKD-19” or search for XKD-19 to connect.

Step 4 After connecting to Bluetooth, you can play the audio in the connected device.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Documents / Resources

	Lazy XKD-19 LED Projector Light [pdf] User Manual XKD-19, XKD19, 2BGYJ-XKD-19, 2BGYJXKD19, XKD-19 LED Projector Light, XKD-19, LED Projector Light, Projector Light, Light
-------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

-  - [Kowloon Digital Solutions \(HK\) Limited](#)
- [User Manual](#)