



LCN 8310-806K Remote Switch Keyed Instruction Manual

[Home](#) » [LCN](#) » LCN 8310-806K Remote Switch Keyed Instruction Manual 

LCN 8310-806K Remote Switch Keyed



Contents

- [1 Installation Instructions](#)
- [2 Support](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)

Installation Instructions

The 8310-806K(R) allows the operator to be set to one of three modes.

OFF – the operator will not respond to any input signals and open the door.


AUTO – the operator will respond to input signals and open the door.

HOLD OPEN – the operator will open the door to 90° and remain there until the selector switch is turned to another position.


Note: The key can be removed in any position (8310-806K only).

To install:

1. Use stick-on template (provided) and place at desired position. Drill the (2) .116" dia. holes and the (1) 1" dia. hole as shown.
2. Route the 6' wire cable to the operator.
3. Plug the switch into the 3-Pin connector on the controller.
4. Use the key to put the operator in the desired mode.

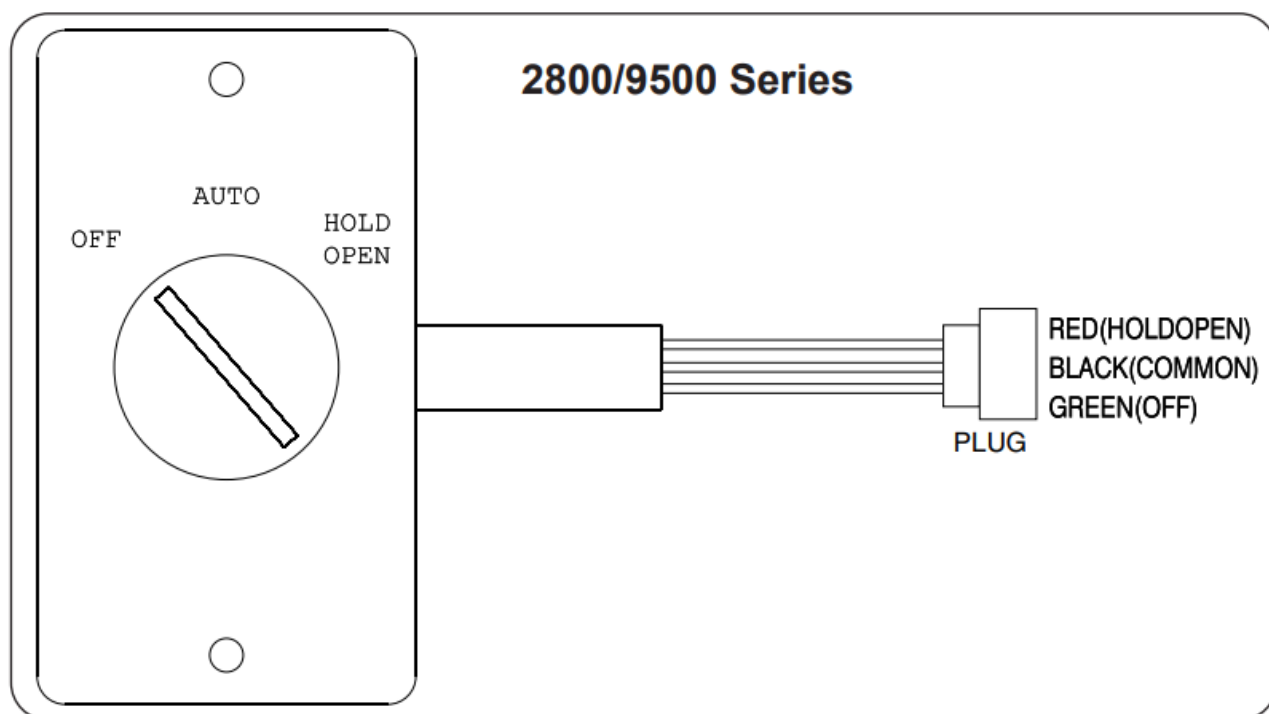

NOTE: To use the 8310-806K(R) on the 4600 and 9100 Series operators, cut the plug off, strip the wires about .25 inches, and attach to terminals, as shown below.

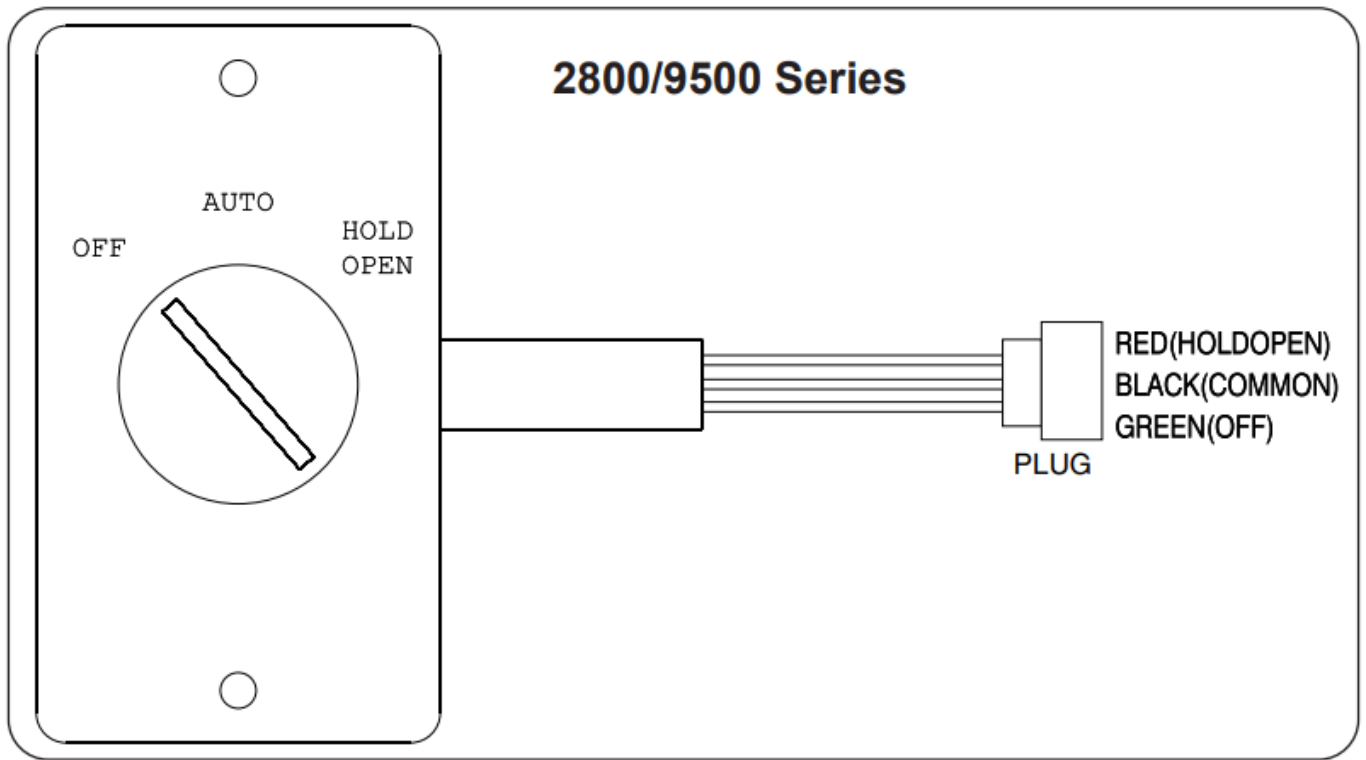


Support

1-877-671-7011

©2023 Allegion
Printed in U.S.A.
71029 09/23-c

LCN[®]

Documents / Resources

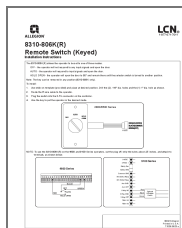

[LCN 8310-806K Remote Switch Keyed](#) [pdf] Instruction Manual
8310-806K Remote Switch Keyed, 8310-806K, Remote Switch Keyed, Switch Keyed, Keyed

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.