



LDLC Tangent Pebble Max Bluetooth Speaker User Manual

[Home](#) » [LDLC](#) » LDLC Tangent Pebble Max Bluetooth Speaker User Manual 

Contents

- [1 LDLC Tangent Pebble Max Bluetooth Speaker](#)
- [2 Parameter](#)
- [3 Accessories](#)
- [4 KEY FUNCTION](#)
- [5 LED indicator](#)
- [6 TF/Cable playback](#)
- [7 TWS pairing](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



 
 
LDLC Tangent Pebble Max Bluetooth Speaker



 
Parameter

- **Model Tagent:** Pebble Max
- **F.R;** 80Hz-18 KHz
- **BT version:** 5.0
- **Distortion:** 1%
- **BT range:** 18M (Open field)
- **Speaker power:** 30 2W
- **Play time:** 8H
- **Charging time:** <3.5H
- **Product Size:** 220*95 *72MM
- **Battery:** 7.4V/6600mAh
- **Input power:** Type-C 5V/2.1A

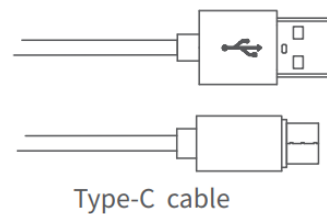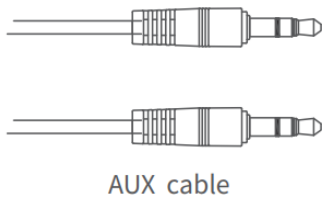


Accessories



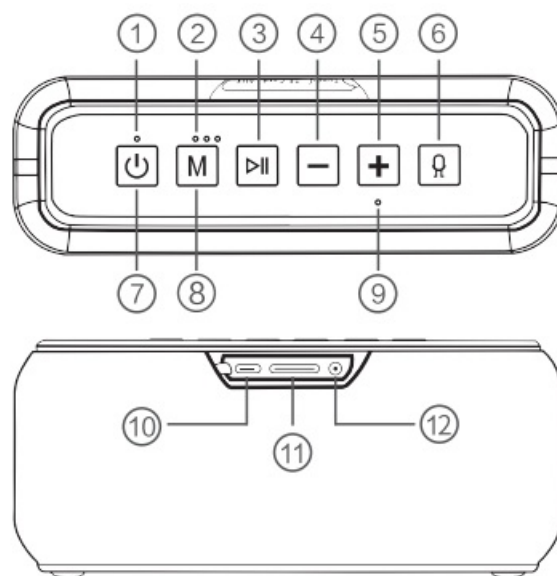



KEY FUNCTION



1. Status Indicator
2. Sound effect indicator
3. Play / Pause / Answer/ Hang up
4. Volume down/ Previous track
5. Volume up / Next track
6. Phone assistant wake up
7. Power on / off
8. Sound effect/mode switching
9. Microphone
10. Type-C charging / Audio port
11. TF card
12. AUX in

BUTTON	OPERATING	FUNCTION DESCRIPTION
	Short press	1. In the off state, short press to turn on 2. In the on state, short press to turn off
	Double click	In the state of Bluetooth to be connected, double-click to enter TWS pairing mode
	Short press	Play mode switching: Bluetooth, AUX / Type-C cable, TF card
	Long press	Sound switching: pop, vocal, heavy bass
	Short press	1. Music playback status: play, pause function 2. Call status: short press to connect 3. When the call is answered, short press to hang up 4. When the phone's Bluetooth is connected: Double-click quickly to call back the last call made by the phone

	Long press	1. Bluetooth connection status: long press for 2s to disconnect 2. When there is an incoming call: long press for 2s to reject
	Short press	Volume down, total 16 levels
	Long press	Previous track
	Short press	Volume up, total 16 levels
	Long press	Next track
	Short press	Bluetooth connection status: short press to wake up phone voice assistant
	Long press	1. Bluetooth connection status: long press for 2s to disconnect and forget the Bluetooth device 2. Press and hold for 5s to reset the device

LED indicator

1. Status indicator (Above the key)

- The blue light flashes quickly when Bluetooth is ready to pair; The blue light is always on when Bluetooth is connected
- When the AUX/TF card is playing, the blue light flashes slowly; When the Type-C cable is playing, the red and purple lights flash alternately


2. Sound effect indicator (Above the key)


- Press and hold for 2s to switch sound effects;
- **A white light is on:** Pop
- **Two white lights:** Vocal
- **Three white lights on:** Heavy bass

TF/Cable playback

1. Bluetooth speaker supports reading up to 64GB TF card Supports music format: APE / FLAC /WAV/ MP3
2. Insert the TF card into the card slot and automatically play the audio file after recognition
3. AUX, Type-C cable can be inserted into the device to play; if it is connected with Bluetooth, please press the "M" key to switch to the audio cable playback mode

TWS pairing

1. Power on the two speakers (if a Bluetooth device is connected, you must Bluetooth connection)
2. Double-click one of the  keys to enter TWS pairing mode
3. After the TWS is successfully paired, there will be a beep. At this time, the yellow indicators of the two speakers are on

4. Turn on the Bluetooth function of the mobile phone or another Bluetooth device, find and connect the Bluetooth named "Tangent Pebble Max"
5. TWS paired successfully, the machine will automatically perform TWS pairing each time after turning on the machine, no need to repeat the operation
6. If the machine has been paired with TWS, please press and hold the 5s  key to reset; After the reset is successful, restart the machine, and then refer to 1 ~ 4 above to complete the TWS pairing
7. In TWS mode, only the main speaker has hands-free function, and the sub speaker is silent during a call
8. In TWS mode, you can still switch sound effects


Note:

1. At high volume the speaker may move, you can minimize this by fitting the extra silicone feet included in the package. Or you can change the EQ or reduce the volume.

Note

The product has a built-in lithium battery, please dispose of for recycling User manuals on other languages can be downloaded here: www.tangent.dk

Documents / Resources

	<p>LDLC Tangent Pebble Max Bluetooth Speaker [pdf] User Manual Tangent Pebble Max Bluetooth Speaker, Tangent Pebble Max, Bluetooth Speaker</p>
--	--

References

-  [Tangent Danmark - Tangent A/S](#)