

# **Quad T-Junction Connects LDSBus Devices Sensors User Guide**

Home » LDSBus » Quad T-Junction Connects LDSBus Devices Sensors User Guide 🖫

#### **Contents**

- 1 Quad T-Junction Connects LDSBus Devices Sensors
- **2 Product Information**
- **3 Setup Instructions**
- **4 Warranty**
- **5 Documents / Resources** 
  - **5.1 References**
- **6 Related Posts**



# **Quad T-Junction Connects LDSBus Devices Sensors**



The LDSBus Quad T-Junction is a device that connects LDSBus Devices (Sensors/Actuators) to the LDSBus. It allows for the connection of up to four LDSBus Devices, and additional Quad T-Junctions can be daisy-chained to add more devices to the LDS Bus.

### **Setup Instructions**

- 1. Connect the first LDSBus Quad T-Junction to any of the LDSBus Host Systems using an RJ45 (CAT5e) cable.
- 2. Connect the configured LDSBus Device(s) to the LDSBus Quad T-Junction as shown in the picture.
- 3. If there is more than one LDSBus Quad T-Junction in the system, chain them together as shown in the picture.

#### Note:

Enable termination for the last LDSBus Device in the bus.

Please scan QR code A or visit <a href="https://brtsys.com/warranty">https://brtsys.com/warranty</a> for warranty registration using the UUID and Product Key. Alternatively, you can scan QR code B.

## **Setup Instructions**

The LDSBus Quad T-Junction connects LDSBus Devices (Sensors/Actuators) to the LDSBus. Each junction can connect up to four LDSBus Devices and additional LDSBus Quad T-Junctions may be daisy chained to add more LDSBus Devices to the LDS Bus.

#### Step 1:


Connect the first LDSBus Quad T-Junction to any of the LDSBus Host Systems using an RJ45 (CAT5e) cable.

#### Step 2:

Connect the configured LDSBus Device(s) to the LDSBus Quad T-Junction as shown in the picture.

# • Step 3:

If there is more than one LDSBus Quad T-Junction in the system, chain them together as shown in the picture.

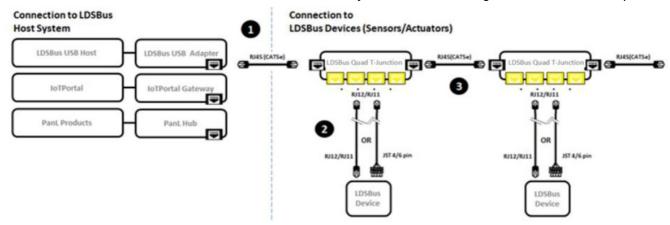

Note: Enable termination for last LDSBus Device in the bus

## Warranty

Please scan QR code A or visit <a href="https://brtsys.com/warranty">https://brtsys.com/warranty</a> for warranty registration using the UUID and Product Key.

 




View the full information on the LDSBus Quad T-Junction, application setup and installation at <a href="https://brtsys.com/resources/">https://brtsys.com/resources/</a> or scan QR Code B.



## **Documents / Resources**



<u>LDSBus Quad T-Junction Connects LDSBus Devices Sensors</u> [pdf] User Guide Quad T-Junction, Quad T-Junction Connects LDSBus Devices Sensors, Connects LDSBus Devices Sensors, LDSBus Devices Sensors, Sensors

# References

- <u>BRESOURCES BRT Systems</u>
- <u>a bridgetek</u>

Manuals+,