

Leap Frog 617603 Follow Me Learning Squirrel Instruction Manual

Home » Leap Frog » Leap Frog 617603 Follow Me Learning Squirrel Instruction Manual





Follow Me Learning Squirrel



Instruction Manual

This manual contains important information. Please save it for future reference.

Contents

- 1 INTRODUCTION
- **2 INCLUDED IN THE PACKAGE**
- **3 GETTING STARTED**
- **4 PRODUCT FEATURES**
- **5 CARE & MAINTENANCE**
- **6 TROUBLESHOOTING**
- **7 CONSUMER SERVICES**
- **8 PRODUCT WARRANTY/ CONSUMER**

GUARANTEES

- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts

INTRODUCTION

Thank you for purchasing the LeapFrog® Follow Me Learning Squirrel! The Follow Me Learning Squirrel will entice beginner crawlers and walkers to hone their motor skills to chase after him. When they catch him, they can cuddle his soft tail and explore more learning by pressing the music, animal and counting buttons. Parents will love hearing real animal sounds play as squirrel zooms off in search of his friends.



- · One Follow Me Learning Squirrel
- · Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.


NOTE

Please keep this Instruction Manual as it contains important information.

For best use play on a smooth flat surface.

Unlock the Packaging Locks


- 1. Rotate the packaging locks 90 degrees anticlockwise.
- 2. Pull out the packaging locks and discard.

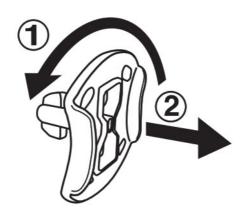

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

- 1. Make sure the unit is turned OFF.
- 2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
- 3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
- 4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
- 5. Replace the battery cover and tighten the screw to secure.

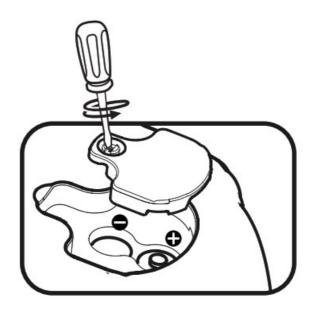

WARNING: Adult assembly required for battery installation. Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- · Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- · Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- · Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product

The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

LeapFrog® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so

all its materials can be recycled.

In the UK:

Visit <u>www.recyclenow.com</u> to see a list of collection points near you.


In Australia & New Zealand:

Check with your local council for kerbside collections.

PRODUCT FEATURES

1. On/Off/Volume Control Switch

Slide the On/Off/Volume Control Switch to the Low or High or High position. To turn the unit Off, slide the On/Off/ Volume Control Switch to the Off position.

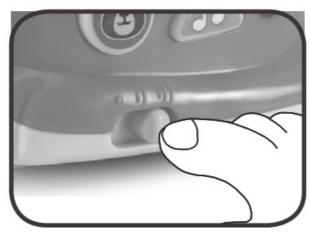


2. Three Learning Buttons

Press the three learning buttons to explore animal names and sounds, counting from 1 to 5 and music. Also press to hear 3 fun learning songs.



3. Press & Go Acorn Basket Button

Crawl and chase after squirrel to exercise motor skills. Listen and follow squirrel to build early language skills. Hear real animal sounds to build listening skills.

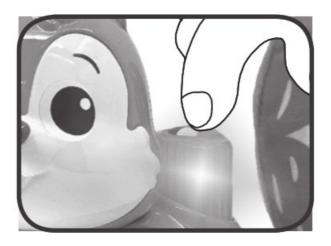

4. Fabric Tail

Fabric tail moves back and forth as squirrel moves around in search of nuts and forest friends.



5. Automatic Shut-Off

To preserve battery life, the Follow Me Learning Squirrel will automatically shut off after approximately 50 seconds without input. The unit can be turned on again by pressing the Press & Go Acorn Basket Button.

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat sources.
- 3. Remove the batteries if the unit will not be in use for an extended period of time.
- 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

- 1. Turn the unit Off.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit On. The unit should now be ready to use again.
- 5. If the unit still does not work, install a new set of batteries

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power Off and back On, or remove and reinstall

the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at 01702 200244 in the U.K. or email support@ leapfrog.co.uk. Creating and developing LeapFrog® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing LeapFrog® products is accompanied by a responsibility that we at LeapFrog® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: www.leapfrog.co.uk/support

Australian Customers:

Phone: 1800 862 155 Website: support.leapfrog.com.au

NZ Customers:

Phone: 0800 400 785 Website: support.leapfrog.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers: Read our complete warranty policy online at <u>leapfrog.com/warranty</u>.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED CONSUMER GUARANTEES Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to leapfrog.com/en-au/legal/warranty for further information.

 


Visit our website for more information about our products, downloads, resources and more.

leapfrog.com

LeapFrog Enterprises, Inc. A subsidiary of VTech Holdings Limited. TM & © 2022 LeapFrog Enterprises, Inc. All rights reserved. IM-617600-000 Version:0

Documents / Resources



<u>Leap Frog 617603 Follow Me Learning Squirrel</u> [pdf] Instruction Manual 617603 Follow Me Learning Squirrel, 617603, Follow Me Learning Squirrel, Learning Squirrel, Squirrel

References

- Mids Learning Games | Educational Toys & Kids Tablets | LeapFrog
- Support For LeapFrog Products
- Mids Learning Games | Educational Toys & Kids Tablets | LeapFrog
- Mids Learning Games | Educational Toys & Kids Tablets | LeapFrog
- **Warranty**
- © Support : LeapFrog

Manuals+,