


LeapFrog 6078 Sing Along Song Bot



LeapFrog 6078 Sing Along Song Bot User Guide

[Home](#) » [LeapFrog](#) » LeapFrog 6078 Sing Along Song Bot User Guide 

Contents

- [1 LeapFrog 6078 Sing Along Song Bot](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQs](#)
- [5 INCLUDED IN THE PACKAGE](#)
- [6 INSTRUCTIONS](#)
- [7 CARE & MAINTENANCE](#)
- [8 FCC](#)
- [9 Declaration of Conformity](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)



LeapFrog 6078 Sing Along Song Bot



Product Information

- **Specifications:**
 - **Trade Name:** LeapFrog
 - **Model:** 6078
 - **Product Name:** Sing-Along Song Bot™

Product Usage Instructions

- **Unlocking the Packaging Locks:**
 - Turn the packaging lock counterclockwise several times. Pull out and discard the packaging lock.
- **Battery Removal and Installation:**
 - Make sure the unit is turned off.

- Find the battery cover on the back of the unit. Use a screwdriver to loosen the screw and open the battery cover.
- Remove old batteries by pulling up on one end of each battery.
- Install 3 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. Alkaline or fully charged Ni-MH rechargeable batteries are recommended for best performance.
- Replace the battery cover and tighten the screw to secure it. Adult assembly is required for battery installation. Keep batteries out of reach of children.

- **Activating Normal Play Mode:**

- This product is in Try-Me mode in the packaging. To activate normal play mode, turn the toy off and then back on.

- **Care & Maintenance:**

- Keep the unit clean by wiping it with a slightly damp cloth.
- Avoid direct sunlight and keep away from heat sources.
- Remove batteries if the unit will not be used for an extended period.
- Avoid dropping the unit on hard surfaces, or exposure to moisture, or water.
- If the unit stops working, install a new set of batteries.

FAQs

- **Q: How can I contact Consumer Services for assistance?**

 
- **A:** You can call our Consumer Services Department at 1-800-701-5327 in the U.S. and Canada, or email support@leapfrog.com for assistance with any problems or suggestions regarding the product.

INCLUDED IN THE PACKAGE

- One Sing-Along Song Bot™
- Quick Start Guide
 - **WARNING:** All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.
 - **NOTE:** Please save this Quick Start Guide as it contains important information.

Unlock the Packaging Locks


1. Turn the packaging lock counterclockwise several times.
2. Pull out and discard the packaging lock.

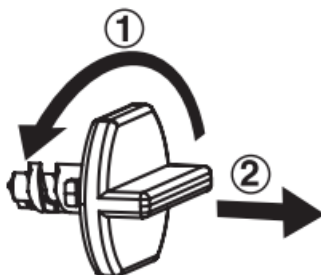

INSTRUCTIONS

Battery Removal and Installation

 1. Make sure the unit is turned Off.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure it.

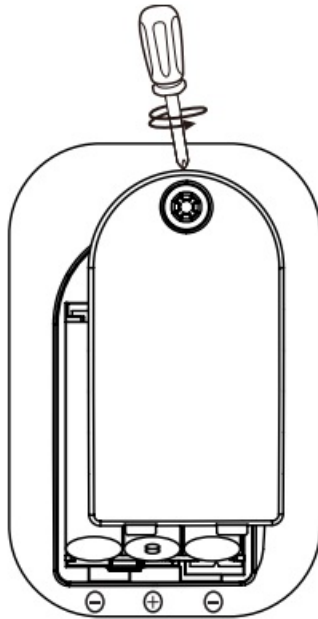

WARNING: Adult assembly is required for battery installation. Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in a fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

ACTIVATE NORMAL PLAY MODE

- This product is in Try-Me mode in the packaging.
- To activate normal play mode, please turn the toy off and then back on.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit stops working or malfunctions, install a new set of batteries.

FCC

NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Declaration of Conformity

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

- **Trade Name:** LeapFrog®
- **Model:** 6078
- **Product Name:** Sing-Along Song Bot™
- **Responsible Party:** LeapFrog Enterprises, Inc.
- **Address:** 2200 Powell Street, Suite 500 Emeryville, CA 94608
- **Website:** leapfrog.com.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND

2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

IMPORTANT NOTE:

- If the problem persists, please call our Consumer Services Department at 1-800-701-5327 in the U.S. and Canada, or email support@leapfrog.com.
- Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously.
- We make every effort to ensure the accuracy of the information, which forms the value of our products.
- However, errors sometimes can occur. You need to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

We aim to reduce our environmental impact and have reduced the amount of paper used for our printed manuals. The full version of the manual is available online through the following link or by scanning the QR code.

For USA



leapfrog.com/guides.

For Canada



 
leapfrog.ca/guides.

For AUS/NZ



Read our complete warranty policy online at leapfrog.com/legal. TM & © 2023 LeapFrog Enterprises, Inc. All rights reserved. Printed in China. 91-004411-000 CA AUS

Documents / Resources

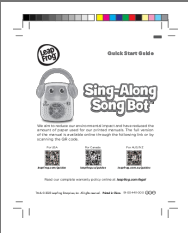	<p>LeapFrog 6078 Sing Along Song Bot [pdf] User Guide</p> <p>6078 Sing Along Song Bot, 6078, Sing Along Song Bot, Song Bot</p>
-----------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------

References

- [LeapFrog Kids Learning Games | Educational Toys & Kids Tablets | LeapFrog](#)
- [User Manual](#)

Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.