




LeapFrog 619000 Count and Swirl Ice Cream Maker User Guide

[Home](#) » [LeapFrog](#) » LeapFrog 619000 Count and Swirl Ice Cream Maker User Guide 



Quick Start Guide



Count & Swirl Ice Cream Maker™

Contents

- 1 619000 Count and Swirl Ice Cream Maker
- 2 INCLUDED IN THE PACKAGE
- 3 GETTING STARTED
- 4 CARE & MAINTENANCE
- 5 Documents / Resources
 - 5.1 References

619000 Count and Swirl Ice Cream Maker

We aim to reduce our environmental impact and have reduced the amount of paper used for our printed manuals. The full version of the manual is available online through the following link or by scanning the QR code.

For US



leapfrog.com/guides

For Canada



leapfrog.ca/guides

For AUS













leapfrog.com.au/guides

Read our complete warranty policy online at leapfrog.com/legal

INCLUDED IN THE PACKAGE

- Count & Swirl Ice Cream Maker™

		
1 ice cream maker	2 chocolate swirls	2 vanilla swirls
		
2 strawberry swirls	1 cherry topping	1 mint topping
		
1 caramel topping	1 whipped cream topping	1 cone
		
1 sundae cup		

- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

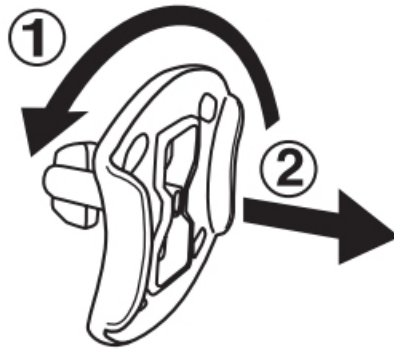
Please save this Quick Start Guide as it contains important information.

NOTE

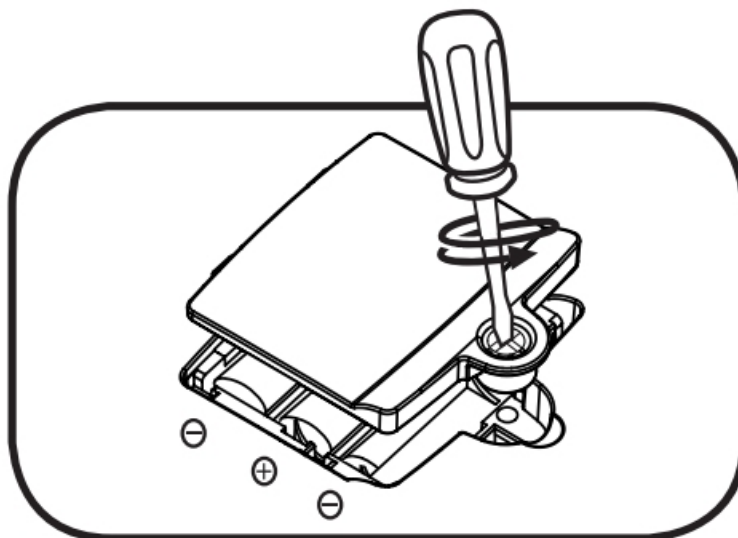
Do not place any object into the ice cream maker other than the swirl pieces provided with the Count & Swirl Ice Cream Maker™. Wash the sundae cup thoroughly before and after use.

Unlock the Packaging Locks

1. Rotate the packaging locks 90 degrees counterclockwise.
2. Pull out the packaging locks and discard

**GETTING STARTED****BATTERY REMOVAL AND INSTALLATION**

1. Make sure the unit is turned OFF.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

**WARNING:**

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit stops working or malfunctions, install a new set of batteries.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at 1-[800-701-5327](tel:800-701-5327) in the U.S. and Canada, or email support@leapfrog.com. Creating and developing LeapFrog® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we

stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information


Trade Name:	LeapFrog®
Model:	6190
Product Name:	Count & Swirl Ice Cream Maker™
Responsible Party:	LeapFrog Enterprises, Inc.
Address:	2200 Powell St., Suite 500 Emeryville, CA 94608
Website:	leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE



619000 manual(simplify)-0116.indd 8619000 manual(simplify)-0116.indd
01/16/2024 13:53:2001/16/2024 13:53:20

Documents / Resources

The thumbnail shows the front cover of the user guide. It features a small image of the ice cream maker at the top left, followed by the title "Count & Swirl Ice Cream Maker" in a stylized font. Below the title, there are several bullet points and icons, including a QR code, providing additional information about the product and the guide.

[LeapFrog 619000 Count and Swirl Ice Cream Maker](#) [pdf] User Guide

619000 Count and Swirl Ice Cream Maker, 619000, Count and Swirl Ice Cream Maker, Swirl Ice Cream Maker, Ice Cream Maker, Cream Maker, Maker

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.