

LeapFrog B0CSM4BSVN Get Ready for Phonics Spin and Learn



LeapFrog B0CSM4BSVN Get Ready for Phonics Spin and Learn Instruction Manual

[Home](#) » [LeapFrog](#) » LeapFrog B0CSM4BSVN Get Ready for Phonics Spin and Learn Instruction Manual 

Contents

- 1 [LeapFrog B0CSM4BSVN Get Ready for Phonics Spin and Learn](#)
- 2 [Product Usage Instructions](#)
- 3 [INTRODUCTION](#)
- 4 [INCLUDED IN THE PACKAGE](#)
- 5 [GETTING STARTED](#)
- 6 [PRODUCT FEATURES](#)
- 7 [CARE & MAINTENANCE](#)
- 8 [TROUBLESHOOTING](#)
- 9 [FCC](#)
- 10 [Documents / Resources](#)
 - 10.1 [References](#)



LeapFrog B0CSM4BSVN Get Ready for Phonics Spin and Learn



Specifications:

- Product Name: Get Ready for Phonics™ Spin & Learn
- Manufacturer: LeapFrog
- Learning Modes: 4 (Explore mode, Fun Sounds Mode, Detective Mode, Sound Blender Mode)
- Battery Requirement: 3 AA (AM-3/LR6) batteries
- Automatic Shut-Off Time: Approximately 50 seconds

Product Usage Instructions

Getting Started

1. Ensure the unit is turned Off.
2. Locate the battery cover on the back of the unit and open it using a screwdriver.
3. Remove old batteries and install 3 new AA batteries following the diagram inside the battery box.
4. Close the battery cover securely.

Product Features

- **Off/Low/High Volume Control Switch:** Adjust the volume and turn the unit on/off.
- **Mode Switch:** Choose between different learning modes.
- **Centre Button:** Press to explore phonemes and sounds.
- **Light-Up Buttons:** Press for word sounds, phrases, and sound effects.
- **Pages:** Explore 44 phonemes with colorful images.
- **Automatic Shut-Off:** Preserves battery life by turning off after 50 seconds of inactivity.

Care & Maintenance

1. Keep the unit clean with a damp cloth.
2. Avoid direct sunlight and heat sources.
3. Remove batteries during extended periods of non-use.
4. Avoid dropping or exposing the unit to moisture.

Troubleshooting

1. Turn the unit Off.
2. Remove the batteries to interrupt the power supply.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On to resume use.

 
Frequently Asked Questions (FAQ):

- Q: How do I change the learning modes on the Get Ready for Phonics™ Spin & Learn?
A: Use the Mode Switch to select between Explore Mode, FunSounds Mode, Detective Mode, and Sound Blender Mode.
- Q: What type of batteries does the product require?
A: The product requires 3 AA (AM-3/LR6) batteries for operation. Alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended for best performance.

This manual contains important information. Please save it for future reference.

INTRODUCTION

Thank you for purchasing the LeapFrog Get Ready for Phonics™ Spin & Learn! Get ready to learn about the 44 phonemes in the English language. With 4 learning modes and engaging pictures, kids will have fun playing with word sounds and getting ready for phonics and reading.

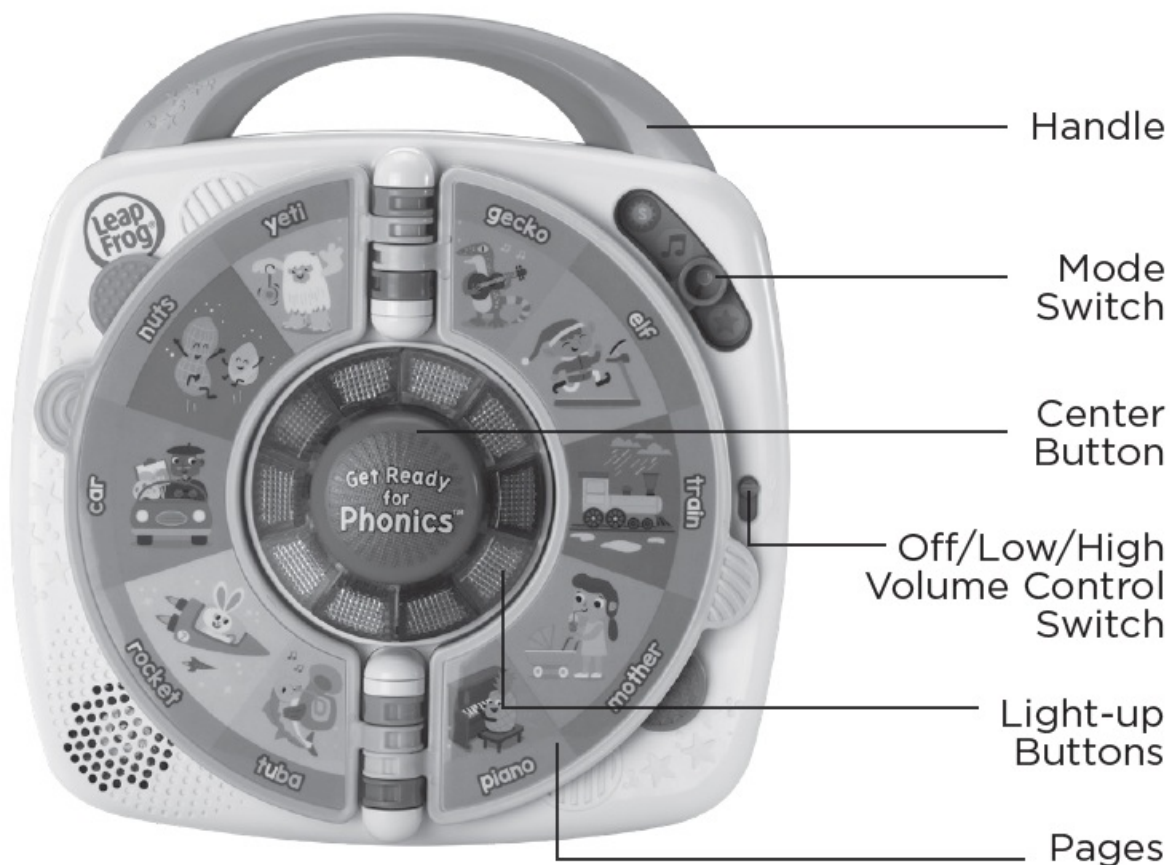

INCLUDED IN THE PACKAGE

- Get Ready for Phonics™ Spin & Learn
- Quick Start Guide

 
WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks

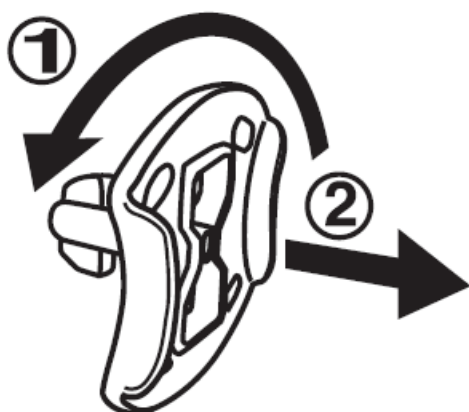


1. Rotate the packaging locks 90 degrees counterclockwise
2. Pull out the packaging locks and discard.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

 1. Make sure the unit is turned Off.
2. Find the battery cover located on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure

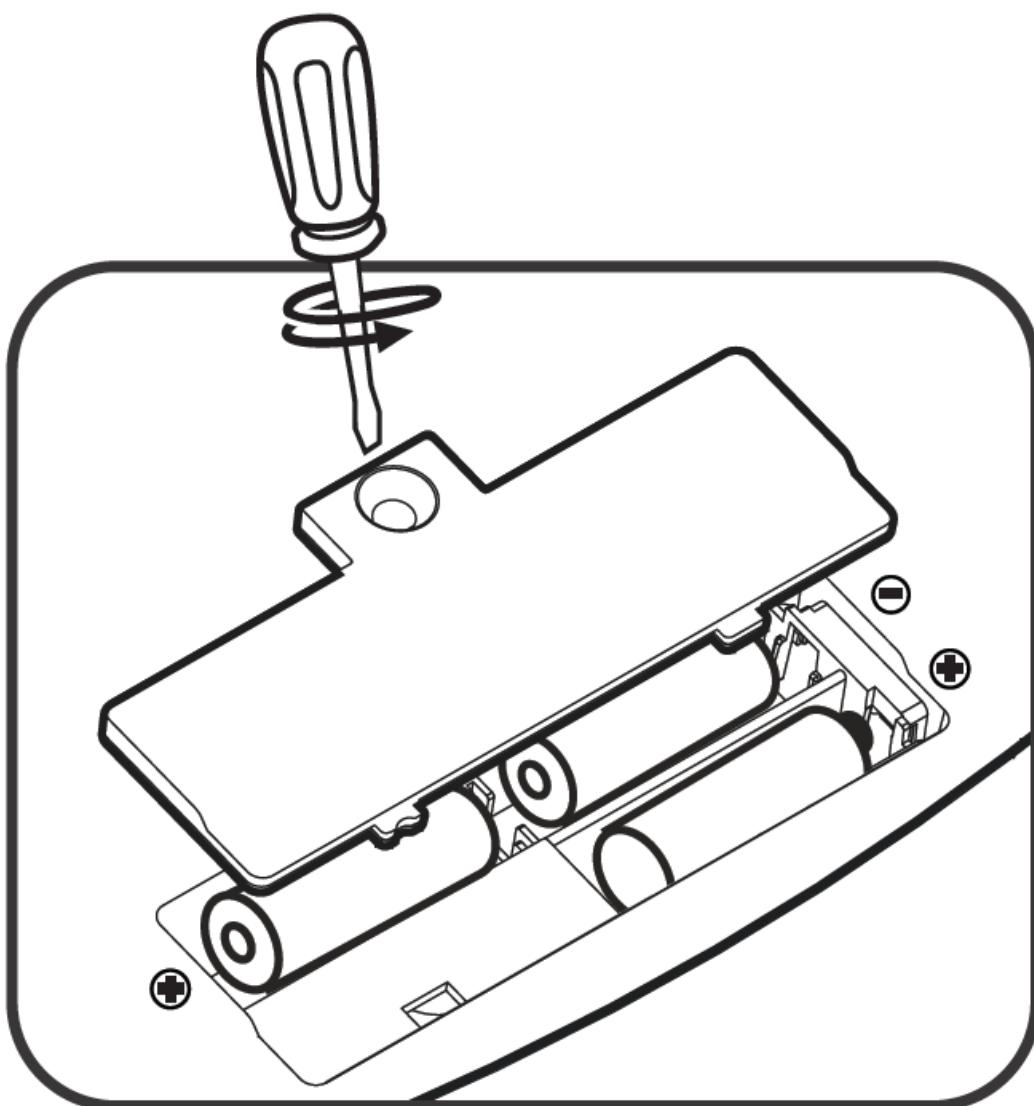

WARNING:

Adult assembly required for battery installation. Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries

PRODUCT FEATURES

Off/Low/High Volume Control Switch

Slide the Off/Low/ High Volume Control Switch to the Low or High position. To turn the unit Off, slide the Off/Low/High Volume Control Switch to the Off position



Mode Switch

Slide the Mode Switch to hear word sounds and phrases in Explore mode, fun sound effects in Fun Sounds Mode, find what makes a sound in Detective Mode, and blend sounds to make words in Sound Blender Mode



Center Button

Press the Center Button to learn about 44 phonemes and fun sounds while 10 light-up buttons spin in a circle



Light-Up Buttons

Press the light-up buttons beside each picture to hear word sounds, words, phrases, and fun sound effects.



Pages

10 colorful Pages teach about all 44 phonemes in the English language with fun images of animals and objects



Automatic Shut-Off

To preserve battery life, the Get Ready for Phonics™ Spin & Learn will automatically shut off after approximately 50 seconds without input. The toy can be turned on again by pressing the center button or any of the light-up buttons.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power Off and back On, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

FCC

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at 1-[800-701-5327](tel:800-701-5327) in the U.S. and Canada, or email support@leapfrog.com. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. You need to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: LeapFrog®

Model: 6189

Product Name: Get Ready for Phonics™ Spin & Learn

Responsible Party: LeapFrog Enterprises, Inc.

Address: 2200 Powell St., Suite 500 Emeryville, CA 94608

Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE

MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

Visit our website for more information about our products, downloads, resources and more.

leapfrog.com

leapfrog.ca

Read our complete warranty policy online at

leapfrog.com/legal

 
LeapFrog Enterprises, Inc.,

A subsidiary of VTech Holdings Limited. TM & © 2024 LeapFrog Enterprises, Inc.

All rights reserved. IM-618900-000

Version:0

Documents / Resources

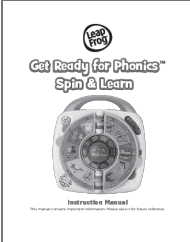	<p>LeapFrog B0CSM4BSVN Get Ready for Phonics Spin and Learn [pdf] Instruction Manual B0CSM4BSVN Get Ready for Phonics Spin and Learn, B0CSM4BSVN, Get Ready for Phonics Spin and Learn, Phonics Spin and Learn, Spin and Learn</p>
--	--

References

- [LeapFrog Kids Learning Games | Educational Toys & Kids Tablets | LeapFrog](#)
- [LeapFrog Kids Learning Games | Educational Toys & Kids Tablets | LeapFrog](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.