




## LeapFrog Fun-2-3 Instant Camera User Guide

[Home](#) » [LeapFrog](#) » LeapFrog Fun-2-3 Instant Camera User Guide 



### Contents

- [1 LeapFrog Fun-2-3 Instant Camera User Guide](#)
- [2 INTRODUCTION](#)
- [3 INCLUDED IN THIS PACKAGE](#)
- [4 GETTING STARTED](#)
- [5 PRODUCT FEATURES](#)
- [6 ACTIVITIES](#)
- [7 SONG LYRICS](#)
- [8 CARE & MAINTENANCE](#)
- [9 TROUBLESHOOTING](#)
- [10 CONSUMER SERVICES](#)
- [11 PRODUCT WARRANTY/ CONSUMER GUARANTEES](#)
- [12 Documents / Resources](#)
- [13 Related Posts](#)

 


This guide contains important information. Please keep it for future reference.

## INTRODUCTION

Thank you for purchasing the Fun-2-3 Instant Camera™.


Pretend to take pictures while encouraging fine motor skills and pretend play. The five double-sided photo cards teach numbers, colours, shapes and animals.

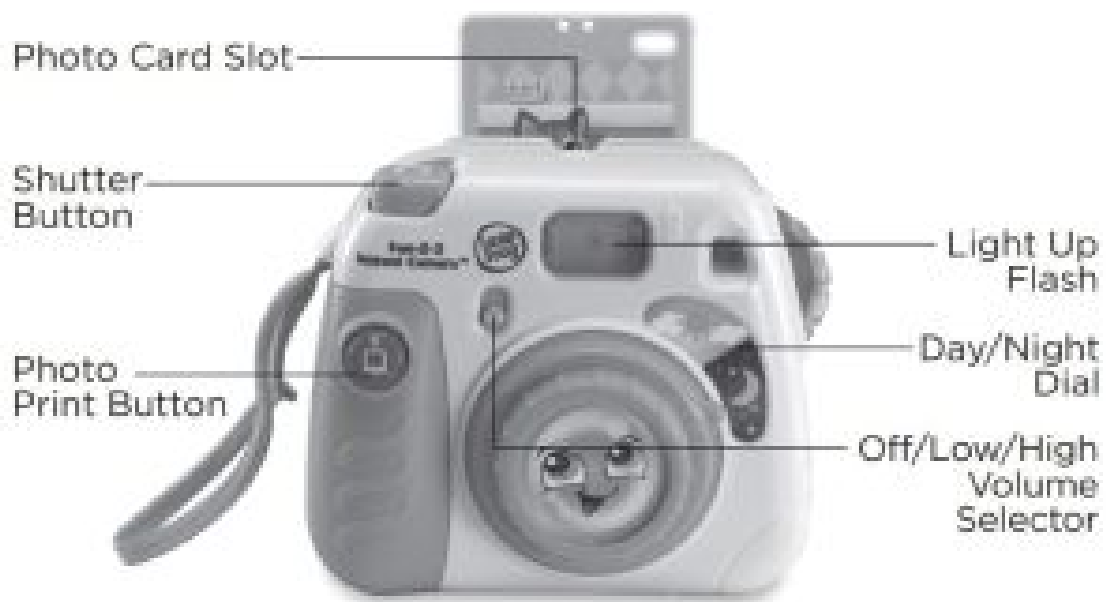



## INCLUDED IN THIS PACKAGE

 - Fun-2-3 Instant Camera™
- 1 Turtle photo card
- 1 Cat photo card
- 1 Duck photo card
- 1 Fox photo card
- 1 Fish photo card
- Parent's guide

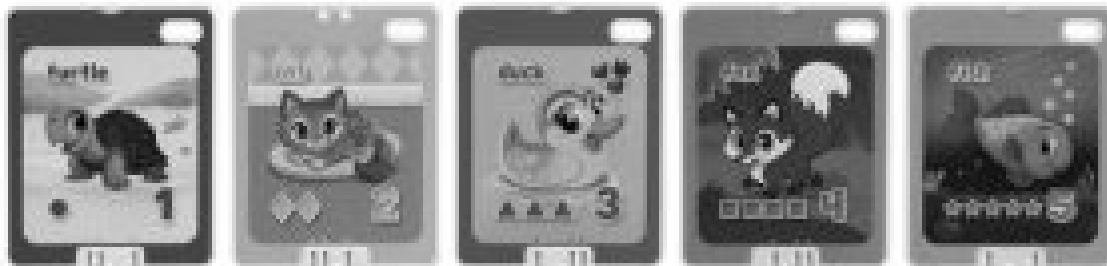

### WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

### NOTE

Please keep this parent's guide as it contains important information.

### NOTE

 
Please cut and discard the cords before playing with the unit.

The cords are not part of the product and should be discarded for your child's safety.

## Unlock the Packaging Locks

1. Rotate the packaging locks 90 degrees anticlockwise.


2. Pull out the packaging locks.

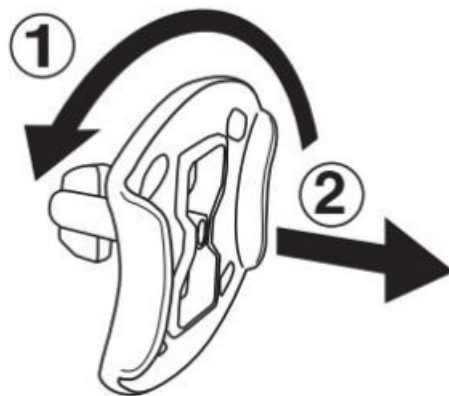

## GETTING STARTED

### BATTERY REMOVAL AND INSTALLATION

 1. Make sure the unit is turned Off.
2. Locate the battery cover on the bottom of the unit and use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure.

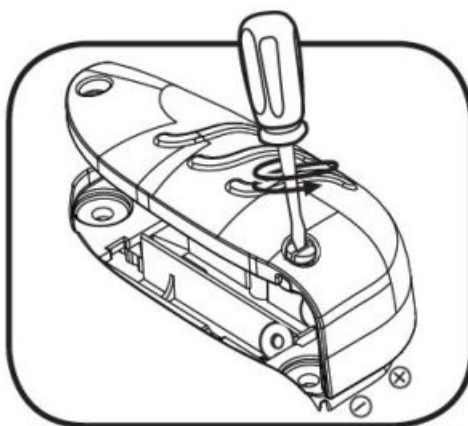

### BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity (+ and –).

- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

**WARNING:**

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

**Disposal of batteries and product**



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).  
The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

**In the UK:**

Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

In Australia & New Zealand:

Check with you local council for kerbside collections.

**PRODUCT FEATURES**

### 1. Off/Low/High Volume Selector

To turn the unit On, slide the **Off/Low/High Volume Selector** to the Low \* or High \* position. To turn the unit Off, slide the **Off/Low/High Volume Selector** to the Off ● position.



### 2. Five Double-Sided Photo Cards

The front sides of the five double-sided **Photo Cards** feature an animal and its name, colours, shapes, and numbers 1-5. The back sides offer grow-with-me content with full photo scenes showing where the animals live, plus shapes to look for and more objects to count.



### 3. Blue Shutter Button

Press the blue **Shutter Button** to hear phrases about taking photos, the Selfie Song or the camera asking for a specific photo. Insert a **Photo Card**, then press the blue **Shutter Button** to pretend to take photos. See the **Photo Card** shown in the back window and press the blue **Shutter Button** to learn about animals and where they live, shapes, colours, numbers and more.



### 4. Red Photo Print Button

Press the red **Photo Print Button** to hear the Camera Song, a phrase or the camera asking for a specific photo. Insert a **Photo Card**, then press the red **Photo Print Button** to pretend to print the photo, which automatically pops up.



### 5. Day/Night Dial

Turn to hear zoom lens sounds, phrases about day and night and other opposites.



 
### 6. Colour Wheel Lens & Viewfinder

Turn the **Colour Wheel Lens** to change the colours from clear, yellow, blue or green as you look through the **Viewfinder**.



## 7. Mirror

Play peek-a-boo or see yourself in the **Mirror** on the back of the camera.

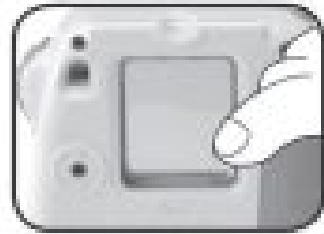

## 8. Card Storage Wrist Strap

Thread the **Wrist Strap** through the holes on each of the five double-sided **Photo Cards** to keep all the cards stored together with the camera.



## 9. Automatic Shut-Off

To preserve battery life, the Fun-2-3 Instant Camera™ will automatically shut off after approximately 65 seconds without input. The unit can be turned on again by pressing any button, inserting a Photo Card into the camera or turning the Day/Night Dial.

### NOTE

Do not place any object into the Photo Card Slot other than the five double-sided Photo Cards provided with the Fun-2-3 Instant Camera™.

### NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

## ACTIVITIES

### 1. Pretend to Take Photos

Pretend to take photos by placing one of the five double-sided **Photo Cards** into the camera and pressing the blue **Shutter Button**. Pretend to print the photo from the camera by pressing the red **Photo Print Button**. Encourage children to use their imagination by looking into the viewfinder and pressing the blue **Shutter Button** to pretend to take photos.



### 2. Opposites Play

Turn the **Day/Night Dial** to learn about opposites: day and night, light and dark, sun and moon.



## **SONG LYRICS**

### **Camera Song**

Look around,  
Let's explore.  
Colours and shapes,  
Animals and more.  
Come and take pictures with me!

### **Animal Song**

Watching all the animals,  
Let's take their picture.  
Look where they live and play.  
See them in the night and day!

### **Selfie Song**

Turn the camera  
So we're face to face.  
Hold out your arm,  
Keep it in place.  
5, 4, 3, 2, 1.  
(photo click)  
It's a selfie!

## **CARE & MAINTENANCE**

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep it out of direct sunlight and away from direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

## **TROUBLESHOOTING**

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

## **CONSUMER SERVICES**



Creating and developing LeapFrog® products is accompanied by a responsibility that we at LeapFrog® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products.

However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**UK Customers:**

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: [www.leapfrog.co.uk/support](http://www.leapfrog.co.uk/support)

**Australian Customers:**

Phone: 1800 862 155

Website: [support.leapfrog.com.au](http://support.leapfrog.com.au)

**NZ Customers:**

Phone: 0800 400 785

Website: [support.leapfrog.com.au](http://support.leapfrog.com.au)

## **PRODUCT WARRANTY/ CONSUMER GUARANTEES**

**UK Customers:**

Read our complete warranty policy online at [leapfrog.com/warranty](http://leapfrog.com/warranty).

**Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech

Electronics (Australia) Pty Limited. Please refer to [leapfrog.com/en-au/legal/warranty](http://leapfrog.com/en-au/legal/warranty) for further information.



Visit our website for more information about our products, downloads, resources and more.

[leapfrog.com](http://leapfrog.com)

LeapFrog Enterprises, Inc.,

A subsidiary of VTech Holdings Limited.

 
TM & © 2021 LeapFrog Enterprises, Inc.

All rights reserved.

91-003921-000 UK

Read More About This Manual & Download PDF:

Documents / Resources

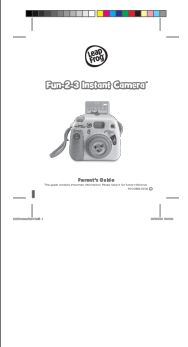	<p><a href="#">LeapFrog Fun-2-3 Instant Camera</a> [pdf] User Guide</p> <p>LeapFrog, Fun-2-3, Instant, Camera</p>
---	---