



19306
COUNT
ALONG
CASH
REGISTER



LeapFrog 19306 Count Along Cash Register User Guide

[Home](#) » [LeapFrog](#) » LeapFrog 19306 Count Along Cash Register User Guide 

Contents

- [1 LeapFrog 19306 Count Along Cash Register](#)
- [2 Features](#)
- [3 Get Started](#)
- [4 Assembly Instructions](#)
- [5 FCC Compliance Statement](#)
- [6 WARRANTY INFORMATION](#)
- [7 CUSTOMER SUPPORT](#)
- [8 FREQUENTLY ASKED QUESTIONS](#)
- [9 References](#)
- [10 Related Posts](#)



LeapFrog 19306 Count Along Cash Register



Features



Get Started

Assemble (see assembly instructions). Separate your eight food items from your ten coins. Next, turn the register on by sliding the red volume switch to the Low or High position.

How to Play


Play on your own:

Choose food items and ring them up with the food buttons or the scanner button. When you press the food button you will hear info related to each item. Then press the green total button and you will hear how many coins are needed to check your items out. Put the correct amount of coins into the count-along coin slot or the register drawer to complete your transaction. Slide the loyalty card through the card swipe for extra fun.

Play with a friend: Set up your store! Place food items on a table or shelves, give your customer their coins, and invite them on a shopping spree!

Assembly Instructions

Assemble by snapping the stabilization foot into the register base.

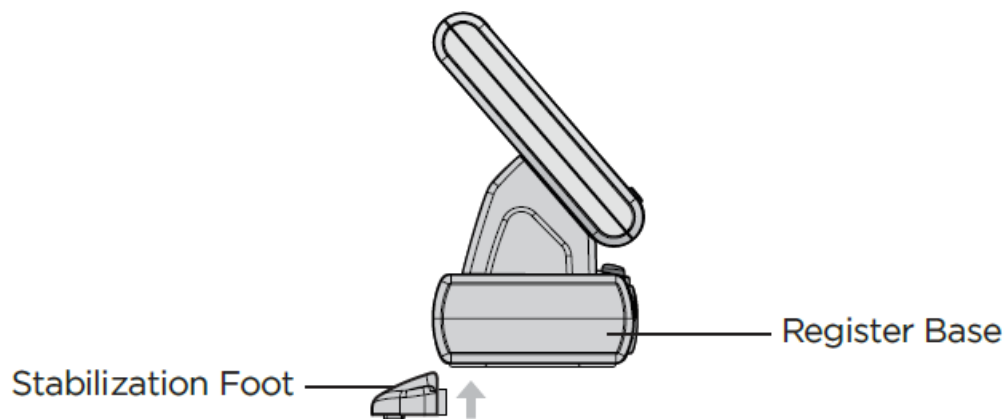

Battery information.

- Requires 3 AAA (called LR03 in some countries) alkaline batteries.

Battery removal and installation instructions:

1. Open the battery door with a Phillips screwdriver.
2. If used or dead batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace the battery door securely.

Battery safety. Batteries are small objects and may pose a choking hazard for small children. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy to avoid leaking. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries or types of batteries (e.g., alkaline/standard). DO NOT recharge non-rechargeable batteries.

- DO NOT short-circuit the supply terminals.
- Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision.

For dry, indoor-location use only. Keep food and beverages away from the product. Do not spill liquid of any kind on this product as it may render it inoperative. Clean with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry before re-use. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it



CAUTION: Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.



CAUTION: To be used under the direct supervision of an adult. Notice: The product may tip or fall over if a child uses it to pull him/herself up.



CAUTION: Adult assembly required.

FCC Compliance Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

CAN ICES-3 (B) / NMB-3 (B)

Environmental phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries

Recycle

Find out how to recycle this product at leapfrog.com/recycle or call 800) 701-5327. For UK consumers, visit www.leapfrog.co.uk/recycleand/support.

WARRANTY INFORMATION

Limited warranty. Visit our website at leapfrog.com for full details of the warranty provided in your country. For children ages 2 years and up.

- **Item number** 19306
- **Part number** 605-12306-A

Products are sold separately and may not be available in all countries. Actual products may vary.

Find out more at leapfrog.com

CUSTOMER SUPPORT

- **U.S.**..... leapfrog.com/support
- **U.K.** leapfrog.co.uk/support
- **Canada** leapfrog.ca/support
- **Australia** funtastic.com.au

FREQUENTLY ASKED QUESTIONS

What is the recommended age range for the LeapFrog 19306 Count Along Cash Register?

The LeapFrog 19306 Count Along Cash Register is recommended for children aged 24 months to 4 years.

What are the dimensions of the LeapFrog 19306 Count Along Cash Register?

The product dimensions are 5.5 x 8.8 x 7.45 inches.

How much does the LeapFrog 19306 Count Along Cash Register weigh?

The LeapFrog 19306 Count Along Cash Register weighs 2.13 pounds.

How many batteries does the LeapFrog 19306 Count Along Cash Register require?

The toy requires 3 AAA batteries.

What is the price of the LeapFrog 19306 Count Along Cash Register?

The price is \$21.99.

What type of warranty does the LeapFrog 19306 Count Along Cash Register come with?

The product comes with a 3-month warranty.

What educational benefits does the LeapFrog 19306 Count Along Cash Register provide?

The cash register helps young children learn basic counting, number recognition, and simple math skills through interactive play and simulated shopping experiences.

How can I replace the batteries in the LeapFrog 19306 Count Along Cash Register?

To replace the batteries, open the battery compartment located on the underside of the cash register, insert 3 AAA batteries, and close the compartment securely.

Does the LeapFrog 19306 Count Along Cash Register come with any accessories?

The cash register includes pretend play money and a credit card for added interactive play.

Why is my LeapFrog 19306 Count Along Cash Register not turning on?

Ensure that the batteries are correctly inserted and have enough charge. Try replacing the batteries with new ones, and check the battery compartment for any signs of corrosion or loose connections.

Why does the LeapFrog 19306 Count Along Cash Register stop responding during play?

This could be due to low battery power. Replace the batteries with fresh ones and ensure they are properly installed. If the issue persists, there might be an internal connection problem that requires professional repair.

Why is the sound on my LeapFrog 19306 Count Along Cash Register distorted?

Distorted sound is often caused by low battery power. Replace the batteries to see if the issue is resolved. If the sound remains distorted, the speaker might be faulty and need to be checked by a technician.

Why is the LeapFrog 19306 Count Along Cash Register not recognizing the coins?

Ensure the coins are clean and free of debris. Check the coin slot for any obstructions. If the toy still doesn't recognize the coins, the sensors may be malfunctioning and require servicing.

What should I do if the LeapFrog 19306 Count Along Cash Register buttons are unresponsive?

Check if the toy is turned on and if the batteries are working. If the buttons are still unresponsive, try resetting the toy by removing and reinserting the batteries. Persistent issues may indicate a need for professional repair.

Why is the LeapFrog 19306 Count Along Cash Register not dispensing the correct number of coins?

This could be due to an internal mechanism issue. Ensure that the coins are not jammed inside the toy. If the problem continues, the dispensing mechanism might need repair.

DOWNLOAD THE PDF LINK: [LeapFrog 19306 Count Along Cash Register User Guide](#)

REFERENCES

[LeapFrog 19306 Count Along Cash Register User Guide-Device.Report](#)

[LeapFrog 19306 Count Along Cash Register User Guide-wiki](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.