



19360  
LEARN  
AND  
GROOVE  
MUSICAL  
TABLE



## LeapFrog 19360 Learn and Groove Musical Table User's Guide

[Home](#) » [LeapFrog](#) » LeapFrog 19360 Learn and Groove Musical Table User's Guide 

### Contents

- [1 LeapFrog 19360 Learn and Groove Musical Table](#)
- [2 Learning Stones](#)
- [3 Instructions for Play](#)
- [4 Instructions for Care](#)
- [5 Battery Information](#)
- [6 CARE & MAINTENANCE](#)
- [7 TROUBLESHOOTING](#)
- [8 CONSUMER SUPPORT](#)
- [9 LIMITED WARRANTY](#)
- [10 FREQUENTLY ASKED QUESTIONS](#)
- [11 VIDEO – PRODUCT OVERVIEW](#)
- [12 References](#)
- [13 Related Posts](#)



**LeapFrog 19360 Learn and Groove Musical Table**



## Learning Stones

Explore a world of music with 70+ songs, tunes and learning responses!

- **Gross and Fine Motor Skills**

A variety of musical activities encourage baby to dance, reach, push, pull, press, slide, open and close, helping develop gross and fine motor skills.

- **Music**

More than 40 songs and activities introduce instrument sounds and a wide variety of musical genres.

- **First Words in English and Spanish**

Musical activities and learning songs introduce first words, such as shapes and colors, in both English and Spanish.

- **Early Number Sense**

Sliding the trombone introduces numbers and counting 1 to 10 in English and Spanish.


- **The Alphabet**

Children are introduced to the Alphabet Song in English and Spanish.

- **Opposites**

Three activities engage children with opposite words such as open and close, up and down and lights on and lights Off in English and Spanish.

## Instructions for Play

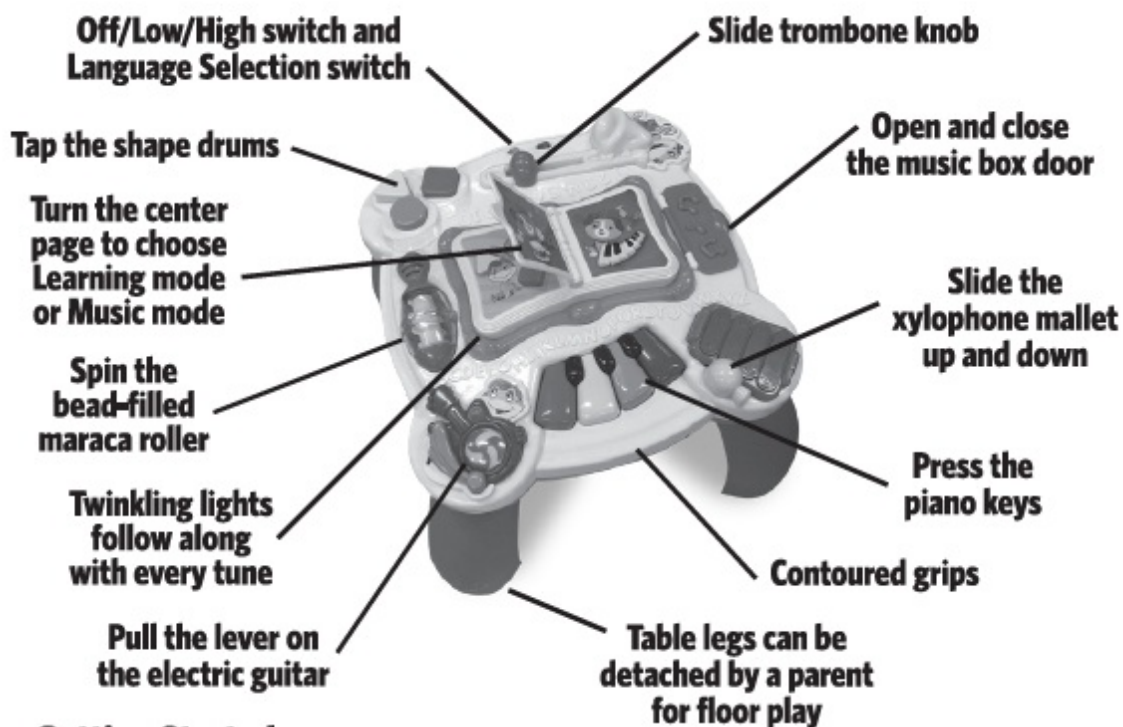


### Getting Started

Use the Learn & Groove Musical Table as a floor toy (without legs) for infants. Use as an activity table only when child is able to stand steadily. As with all toys for this age group, adult supervision is recommended.

#### To attach the legs:

- Place tabletop on the floor with the bottom facing up, as shown.
- With the smooth side of each leg facing out, insert one table leg into each corner of the table and snap into place securely.

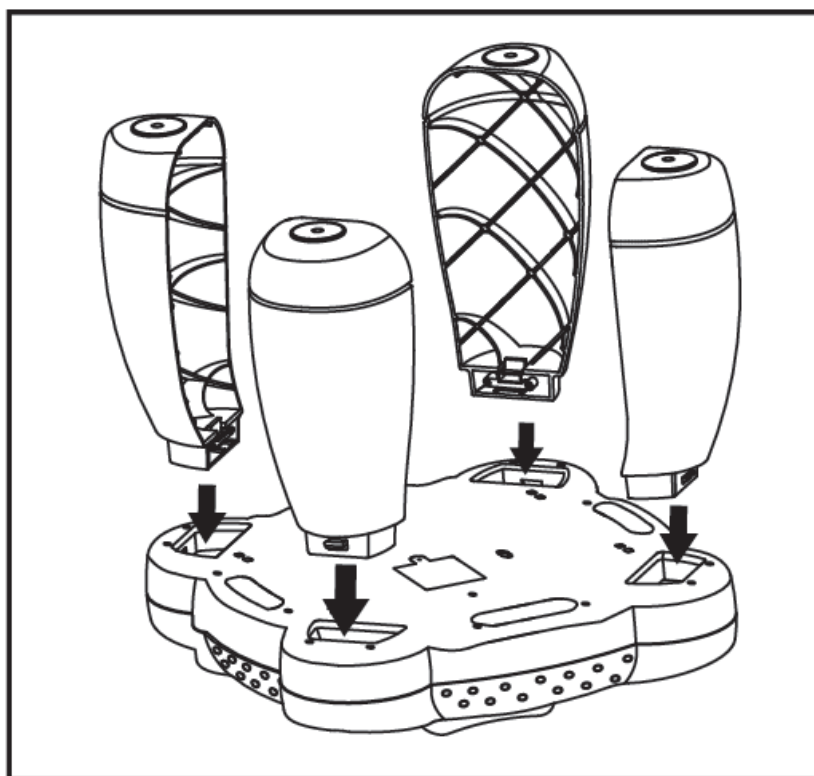

#### To remove the legs:

- To detach the table legs, turn the table over. With the tabletop on the floor, press the button on the table leg close to the tabletop and pull out.
- Turn on the Learn & Groove Musical Table by sliding the Off switch to Low or High volume.
- The product will shut off automatically after a period of inactivity. Wake the table up again by moving any manipulative or by turning it off and on again.

#### Play Modes


Use the Language Selection switch to choose either English or Spanish. Turn the center page to select either Learning mode or Music mode:

- **Learning mode:** Each instrument introduces concepts such as colors, the alphabet, shapes, numbers, opposites, and more.
- **Music mode:** Your child can explore real instrument sounds, a variety of musical styles, and 21 popular children's tunes.


#### Instructions for Care

FOR DRY, INDOOR-LOCATION USE ONLY

Keep food and beverages away from the product. Never spill liquid of any kind on this product as it may cause damage or render the device inoperative. Clean with a slightly damp cloth (cold water). Do not use soap or detergent. Never submerge the unit in water. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

-  **CAUTION:** Routinely check this toy for proper and safe condition. If there is any damage or broken parts,

remove the toy from use.

-  **CAUTION:** To be used under the direct supervision of an adult.

## Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 3 AA (called LR6 in some countries) alkaline batteries.

## Battery Removal and Installation Instructions

1. Open the battery door with a screwdriver.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of
3. Installater batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace the battery door securely.

## Battery Safety

Batteries are small objects and may pose a choking hazard for small children. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy to avoid leaking. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in a fire, as batteries may explode or leak.
- DO NOT mix old and new batteries or types of batteries (e.g., alkaline/standard).
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.
- Rechargeable batteries are to be removed from the toy before being charged Rechargeable batteries are only to be charged under adult supervision

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

## TROUBLESHOOTING

**If for some reason the program/activity stops working, please follow these steps:**

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back ON. The unit will now be ready to play again.

5. If the unit still does not work, replace it with an entire set of new batteries.

### **Environmental phenomena.**

- The unit may malfunction if subjected to radio-frequency interference.
- It should revert to normal operation when the interference stops.
- If not, it may become necessary to turn the power OFF and back ON or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

### **Supplier's Declaration of Conformity**

- **Trade Name:** Leapfrog®
- **Model:** 19269, 19270, 19358, 19360
- **Responsible Party:** Leapfrog Enterprises, Inc.
- **Address:** 6401 Hollis Street, Suite 100, Emeryville, CA 94608
- **Website:** [www.leapfrog.com](http://www.leapfrog.com)

**IMPORTANT NOTE:** If the problem persists, please call our Consumer Services Department at 1-[800-701-5327](tel:800-701-5327) in the U.S. or email [support@leapfrog.com](mailto:support@leapfrog.com). Creating and developing LeapFrog® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:**

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## CONSUMER SUPPORT

- **U.S. Consumer Service Contact:** Visit our U.S. Consumer Support website at [www.leapfrog.com/support](http://www.leapfrog.com/support) 24 hours a day.
- **Canada Consumer Service Contact:** Visit our Canada Consumer Support website at [www.leapfrog.ca/support](http://www.leapfrog.ca/support) 24 hours a day.
- **U.K. Consumer Service Contact:** Visit our U.K. Consumer Support website at [www.leapfrog.co.uk/support](http://www.leapfrog.co.uk/support) 24 hours a day.
- **Australia Service Contact:** Visit our Australia Consumer Support website at [www.leapfrog.com.au/support](http://www.leapfrog.com.au/support) 24 hours a day.

## LIMITED WARRANTY

Subject to a limited three (3) month warranty. Visit our website at [www.leapfrog.com](http://www.leapfrog.com) for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

For information on how this product might be recycled, visit [www.leapfrog.com/recycle](http://www.leapfrog.com/recycle) or call [800-701-5327](tel:800-701-5327). TM & © 2014 LeapFrog Enterprises, Inc. All rights reserved.

[leapfrog.com](http://leapfrog.com)

For ages 6-36 months./ Convient aux enfants de 6à 36 mois.

**Part number:** 91-LO0129-001 US

Visit our website for more information about our products, downloads, resources, and more. [leapfrog.com](http://leapfrog.com) For warranty information, please visit [leapfrog.com/warranty](http://leapfrog.com/warranty).

LeapFrog Enterprises, Inc., a subsidiary of VTech Holdings Limited. TM & © 2017 LeapFrog Enterprises, Inc. All rights reserved.

## FREQUENTLY ASKED QUESTIONS

What are the dimensions of the LeapFrog 19360 Learn and Groove Musical Table?

The LeapFrog 19360 Learn and Groove Musical Table measures 14.37 inches in length, 17.91 inches in width, and 14.37 inches in height.

What is the weight of the LeapFrog 19360 Learn and Groove Musical Table?

The LeapFrog 19360 Learn and Groove Musical Table weighs 4.3 pounds.

What is the price of the LeapFrog 19360 Learn and Groove Musical Table?

The LeapFrog 19360 Learn and Groove Musical Table is priced at \$44.99.

What is the model number of the LeapFrog Learn and Groove Musical Table?

The model number of the LeapFrog Learn and Groove Musical Table is 80-19360E.

Who is the manufacturer of the LeapFrog 19360 Learn and Groove Musical Table?

The LeapFrog 19360 Learn and Groove Musical Table is manufactured by VTech.

What is the recommended age range for the LeapFrog 19360 Learn and Groove Musical Table?

The LeapFrog 19360 Learn and Groove Musical Table is recommended for children aged 6 months to 3 years.

How many batteries does the LeapFrog 19360 Learn and Groove Musical Table require?

The LeapFrog 19360 Learn and Groove Musical Table requires 3 AA batteries.

What is the warranty period for the LeapFrog 19360 Learn and Groove Musical Table?

The LeapFrog 19360 Learn and Groove Musical Table comes with a 3-month warranty.

What features does the LeapFrog 19360 Learn and Groove Musical Table offer?



The LeapFrog 19360 Learn and Groove Musical Table offers interactive musical and educational activities designed to engage young children.

How can you clean the LeapFrog 19360 Learn and Groove Musical Table?

To clean the LeapFrog 19360 Learn and Groove Musical Table, use a damp cloth. Avoid using harsh chemicals or submerging the table in water.

What kind of educational benefits does the LeapFrog 19360 Learn and Groove Musical Table provide?

The LeapFrog 19360 Learn and Groove Musical Table helps develop motor skills, coordination, and introduces children to music and basic concepts through interactive play.

Why is my LeapFrog 19360 Learn and Groove Musical Table not turning on?

Ensure that the LeapFrog 19360 Learn and Groove Musical Table has fresh batteries installed. Check that the battery compartment is securely closed and that the batteries are inserted correctly. If it still doesn't turn on, try replacing the batteries or cleaning the battery contacts.

What should I do if the sound on my LeapFrog 19360 Learn and Groove Musical Table is too low or distorted?

Low or distorted sound can be caused by weak batteries. Replace the batteries with new ones and ensure they are inserted correctly. Also, check the volume control on the toy to ensure it is not set too low.

Why are some buttons on my LeapFrog 19360 Learn and Groove Musical Table not responding?

If some buttons are unresponsive, try replacing the batteries, as low power can affect functionality. Additionally, check for any debris or dirt around the buttons that might be preventing them from being pressed properly. Clean the buttons gently with a soft, dry cloth.

How can I fix my LeapFrog 19360 Learn and Groove Musical Table if it is playing the wrong sounds?

If the LeapFrog 19360 is playing incorrect sounds, try resetting the toy by turning it off and then on again. If the issue persists, remove the batteries, wait for a few minutes, and then reinsert them to reset the system.

## VIDEO – PRODUCT OVERVIEW



[Download the PDF link: LeapFrog 19360 Learn and Groove Musical Table User's Guide Groove-Musical-Table.mp4](#)

**REFERENCE:** [LeapFrog 19360 Learn and Groove Musical Table User's Guide-Device.Report](#)

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.