



80-601260  
STEP  
AND  
LEARN  
SCOUT



## LeapFrog 80-601260 Step and Learn Scout User's Guide

[Home](#) » [LeapFrog](#) » LeapFrog 80-601260 Step and Learn Scout User's Guide 

### Contents

- [1 LeapFrog 80-601260 Step and Learn Scout](#)
- [2 INTRODUCTION](#)
- [3 GETTING STARTED](#)
- [4 ASSEMBLY](#)
- [5 PRODUCT FEATURES](#)
- [6 ACTIVITIES](#)
- [7 CARE & MAINTENANCE](#)
- [8 TROUBLESHOOTING](#)
- [9 FREQUENTLY ASKED QUESTIONS](#)
- [10 VIDEO – PRODUCT OVERVIEW](#)
- [11 References](#)
- [12 Related Posts](#)




**LeapFrog 80-601260 Step and Learn Scout**



## INTRODUCTION

 Thank you for purchasing Step & Learn Scout™! Go for a walk with Scout and listen to letter and number songs by pushing him with the leash. Then sit and play by pressing the buttons on Scout's backpack to learn numbers, letters and letter sounds.

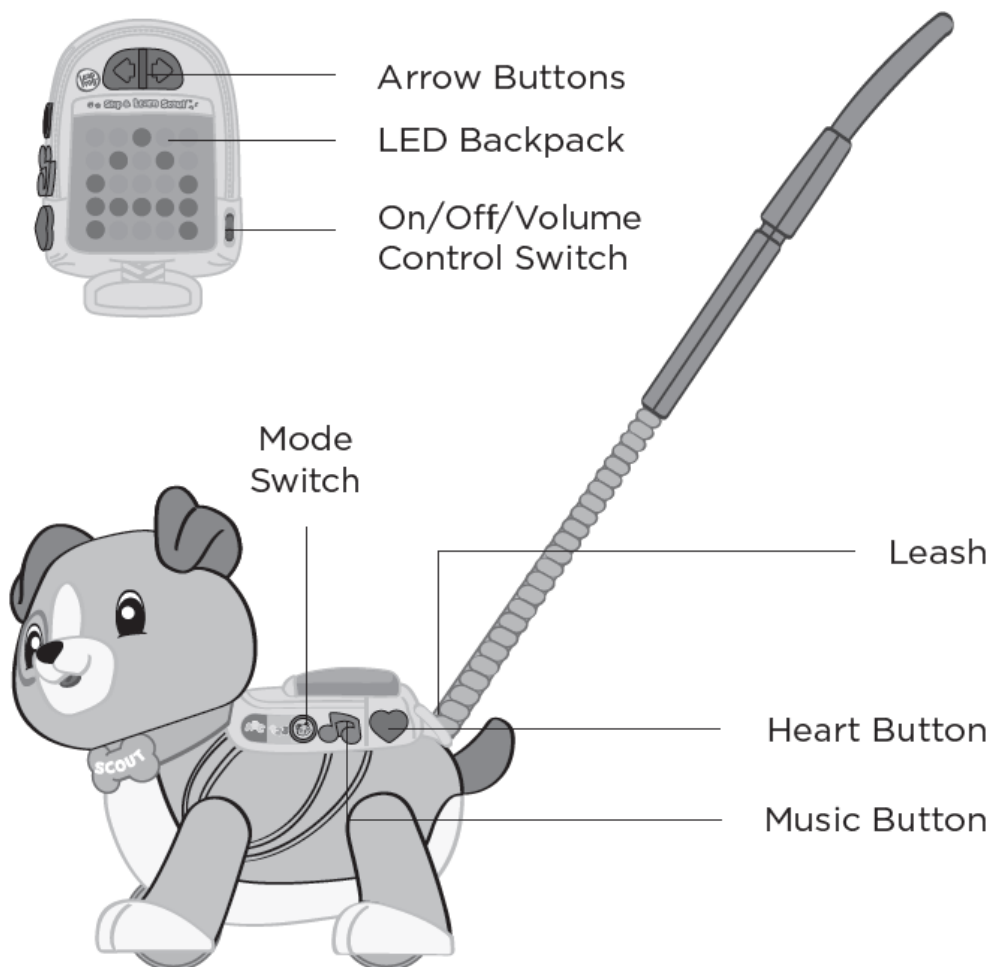


#### INCLUDED IN THIS PACKAGE

- One Step & Learn Scout™
- One leash
- One parent's guide

**WARNING:** All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

**NOTE:** Please keep this parent's guide as it contains important information.

 
**Unlock the packaging locks:**

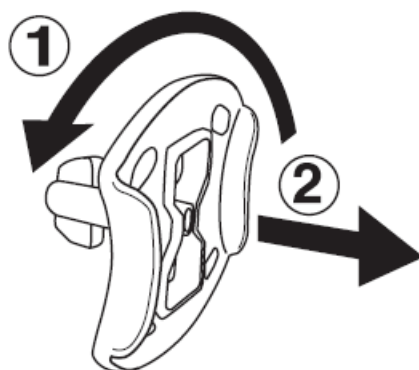

1. Rotate the packaging locks 90 degrees counterclockwise.
2. Pull out the packaging locks and discard.

## GETTING STARTED
 
### BATTERY INSTALLATION



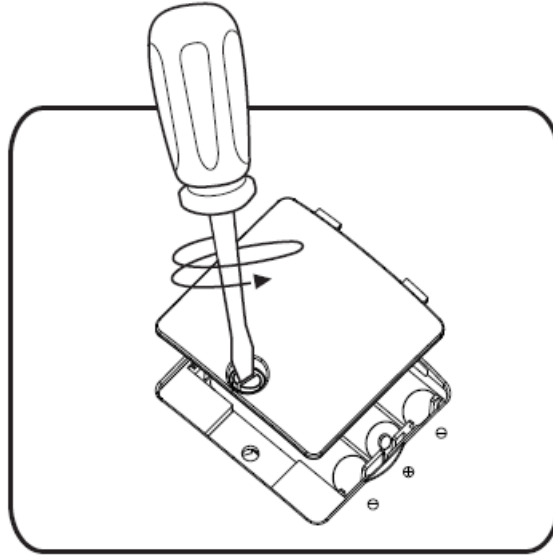


1. Make sure the unit is turned OFF.
2. Locate the battery cover on the bottom of the unit.
3. Use a screwdriver to loosen the screw and open the battery cover.
4. Install 3 new AAA (AM-4/LR03) batteries into the battery box as illustrated. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

### BATTERY NOTICE

   - Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.


## ASSEMBLY

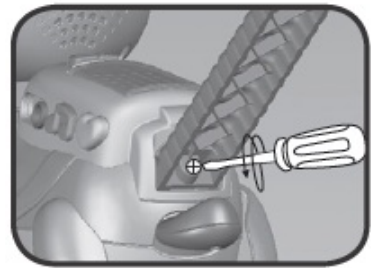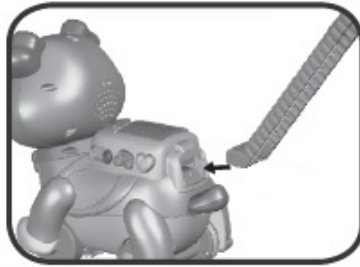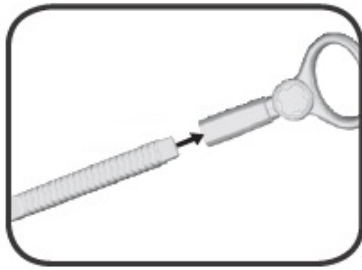

1. Insert and snap the leash into the handle.
2. Snap the leash into the slot in Scout's backpack.
3. Tighten the screw with a Phillips screwdriver. Do not over-tighten.





**Note:** Scout works with and without the leash. To remove Scout's leash, simply unscrew it and keep the leash and screw away from children.

- **Tool needed:** Phillips screwdriver (not included)

 **CAUTION:** This package contains a small screw.

ADULT ASSEMBLY REQUIRED

## PRODUCT FEATURES

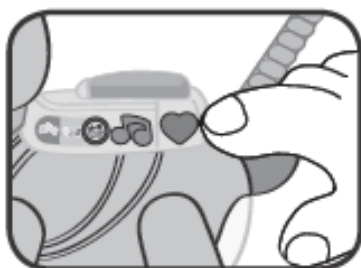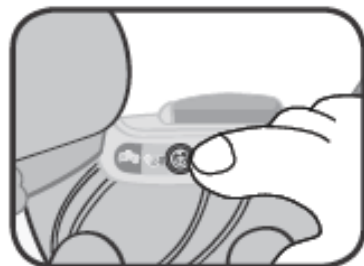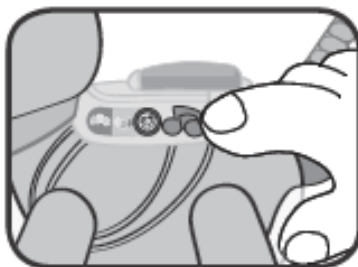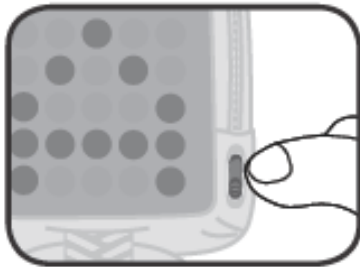    

### 1. On/Off/Volume Control Switch

Slide the On/Off/Volume Control Switch to turn the toy on and select the volume.

### 2. Mode Switch

Slide the Mode Switch to choose Letters, Numbers or Fun with Scout mode.

### 3. Music Button

Press the Music Button to hear three different songs.

### 4. Heart Button

Press the Heart Button to hear Scout talk to you.

### 5. Arrow Buttons

Press the Arrow Buttons to play activities in the different modes.

## ACTIVITIES

### 1. Letters Mode

 
Slide the Mode Switch to choose Letters mode. Use the Arrow Buttons to scroll through the alphabet on Scout's LED Backpack. Pushing Scout in Letters mode plays the ABC song.

### 2. Numbers Mode

Slide the Mode Switch to choose Numbers mode. Use the Arrow Buttons to scroll through numbers 1-10 on Scout's LED Backpack. Pushing Scout plays a numbers song.

### 3. Fun with Scout Mode

Slide the Mode Switch to choose Fun with Scout mode. Use the Arrow Buttons to play silly sound effects and animations on Scout's LED Backpack. Pushing Scout makes him talk and bark.

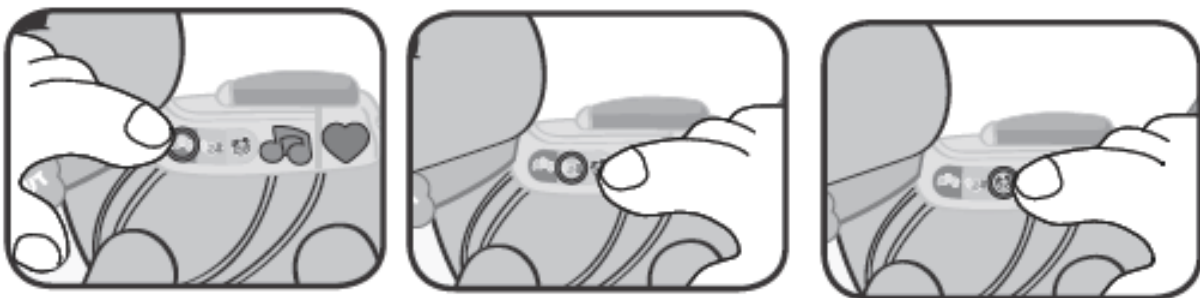

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

## TROUBLESHOOTING

**If for some reason the program/activity stops working, please follow these steps:**

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back ON. The unit will now be ready to play again.
5. If the unit still does not work, replace it with an entire set of new batteries.

### Environmental phenomena.

- The unit may malfunction if subjected to radio-frequency interference.
- It should revert to normal operation when the interference stops.
- If not, it may become necessary to turn the power OFF and back ON or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user

to reset the device by removing and reinstalling the batteries.

**IMPORTANT NOTE:** If the problem persists, please call our Consumer Services Department at 1-[800-701-5327](tel:800-701-5327) in the U.S. or email [support@leapfrog.com](mailto:support@leapfrog.com). Creating and developing LeapFrog® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:**

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Visit our website for more information about our products, downloads, resources, and more. [leapfrog.com](http://leapfrog.com) For warranty information, please visit [leapfrog.com/warranty](http://leapfrog.com/warranty).

LeapFrog Enterprises, Inc., a subsidiary of VTech Holdings Limited. TM & © 2017 LeapFrog Enterprises, Inc. All rights reserved. 91-003353-005

## **FREQUENTLY ASKED QUESTIONS**

What is the LeapFrog 80-601260 Step and Learn Violet?

The LeapFrog 80-601260 Step and Learn Violet is an interactive educational toy designed for young children, featuring a playful and engaging character named Violet that helps with physical activity and early learning.

What is the price of the LeapFrog 80-601260 Step and Learn Violet?

The LeapFrog 80-601260 Step and Learn Violet is priced at \$21.99.

What are the dimensions of the LeapFrog 80-601260 Step and Learn Violet?

The product dimensions are 9.5 x 9.3 x 5 inches.

How much does the LeapFrog 80-601260 Step and Learn Violet weigh?

The LeapFrog 80-601260 Step and Learn Violet weighs 2 pounds.

What is the manufacturer recommended age for the LeapFrog 80-601260 Step and Learn Violet?

The LeapFrog 80-601260 Step and Learn Violet is recommended for children aged 12 months to 4 years.

What type of batteries does the LeapFrog 80-601260 Step and Learn Violet require?

The LeapFrog 80-601260 Step and Learn Violet requires 3 AAA batteries.

Who is the manufacturer of the LeapFrog 80-601260 Step and Learn Violet?

The LeapFrog 80-601260 Step and Learn Violet is manufactured by VTech.

What is the warranty period for the LeapFrog 80-601260 Step and Learn Violet?

The warranty period for the LeapFrog 80-601260 Step and Learn Violet is 3 months.

What kind of learning activities does the LeapFrog 80-601260 Step and Learn Violet offer?

The LeapFrog 80-601260 Step and Learn Violet offers activities that promote physical movement and early learning concepts such as numbers, letters, and shapes through interactive play.

Can the LeapFrog 80-601260 Step and Learn Violet be used indoors and outdoors?

The LeapFrog 80-601260 Step and Learn Violet is primarily designed for indoor use, though it can be used in a variety of play environments within the home.

How does the LeapFrog 80-601260 Step and Learn Violet support physical activity?

The LeapFrog 80-601260 Step and Learn Violet encourages physical activity by incorporating movement-based games and exercises that help develop motor skills while learning.

How do I reset my LeapFrog 80-601260 Step and Learn Scout if it's not responding?

To reset the LeapFrog 80-601260 Step and Learn Scout, turn it off, remove the batteries, wait for about 10 seconds, and then reinsert the batteries. Turn the device back on to see if it resolves the issue.

Why is the LeapFrog 80-601260 Step and Learn Scout not turning on?

Ensure the LeapFrog 80-601260 Step and Learn Scout has fresh batteries installed. If the problem persists, try replacing the batteries with new ones. Check for any signs of battery corrosion in the compartment.

What should I do if the buttons on my LeapFrog 80-601260 Step and Learn Scout are not responding?

Check if the buttons are stuck or dirty. Gently clean around the buttons with a soft cloth. If the issue continues, try performing a reset as described in the first question.

How can I fix the sound issue on my LeapFrog 80-601260 Step and Learn Scout?

Verify that the volume is not set to the lowest setting. If the sound is still not working, check the batteries and replace them if necessary. Reset the device if needed.

## VIDEO – PRODUCT OVERVIEW



[Download the PDF link: LeapFrog 80-601260 Step and Learn Scout User's Guide and-Learn-Scout-Users-Guide.mp4](#)

**REFERENCE:** [LeapFrog 80-601260 Step and Learn Scout User's Guide-Device.Report](#)

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.