



80-610800  
TICKETY  
TOCK  
PLAY  
&  
LEARN  
CLOCK



# LeapFrog 80-610800 Tickety Tock Play & Learn Clock User's Guide

[Home](#) » [LeapFrog](#) » LeapFrog 80-610800 Tickety Tock Play & Learn Clock User's Guide 

## Contents

- [1 LeapFrog 80-610800 Tickety Tock Play & Learn Clock](#)
- [2 INTRODUCTION](#)
- [3 GETTING STARTED](#)
- [4 PRODUCT FEATURES](#)
- [5 ACTIVITIES](#)
- [6 CARE & MAINTENANCE](#)
- [7 TROUBLESHOOTING](#)
- [8 FREQUENTLY ASKED QUESTIONS](#)
- [9 VIDEO – PRODUCT OVERVIEW](#)
- [10 References](#)
- [11 Related Posts](#)




**LeapFrog 80-610800 Tickety Tock Play & Learn Clock**



## INTRODUCTION

 What time is it? It's play time with the Blue's Clues & You! Tickety Tock Play & Learn Clock. This interactive clock helps kids learn times of day, numbers, and daily routines through musical play with Tickety Tock and Blue!

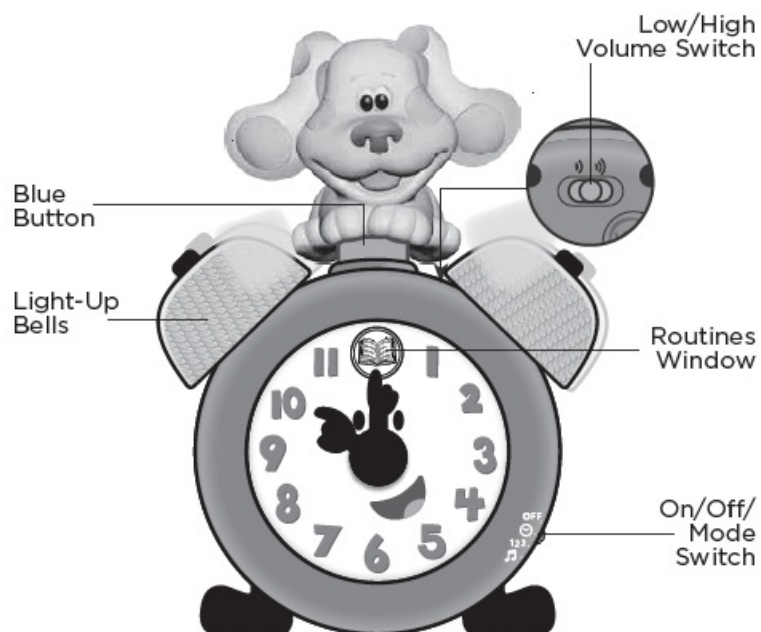

## INCLUDED IN THIS PACKAGE

- Blue's Clues & You!™ Tickety Tock Play & Learn Clock

 
- Parents' Guide

**WARNING:** All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

**NOTE:** Please keep this parents' guide as it contains important information.

### Unlock the Packaging Locks


1. Turn the packaging lock counterclockwise several times.
2. Pull out the packaging lock and discard.

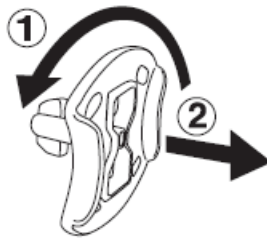

## GETTING STARTED

### Battery Removal and Installation

 1. Make sure the unit is turned OFF.
2. Locate the battery cover on the bottom of the unit, use a screwdriver to loosen the screw and open the battery box.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

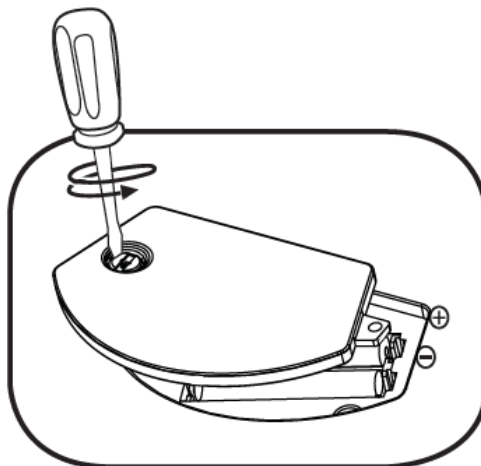



### BATTERY NOTICE

- Use new alkaline batteries for maximum performance.



- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc), or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## PRODUCT FEATURES

### 1. On/Off/Mode Switch

To turn the unit ON, slide the On/Off/ Mode Switch to Clock mode , Numbers mode **123** or Music mode . To turn the unit OFF, slide the On/Off/Mode Switch to the OFF position.

### 2. Low/High Volume Switch

 
To adjust the volume, slide the Low/High Volume Switch to the low volume  or high volume  position.

### 3. Clock Hands

Turn Tickety Tock's short hand to see the pictures at the top of the clock face change.

### 4. Blue Button

Press Blue to hear Tickety Tock ask questions, say learning phrases and sing.

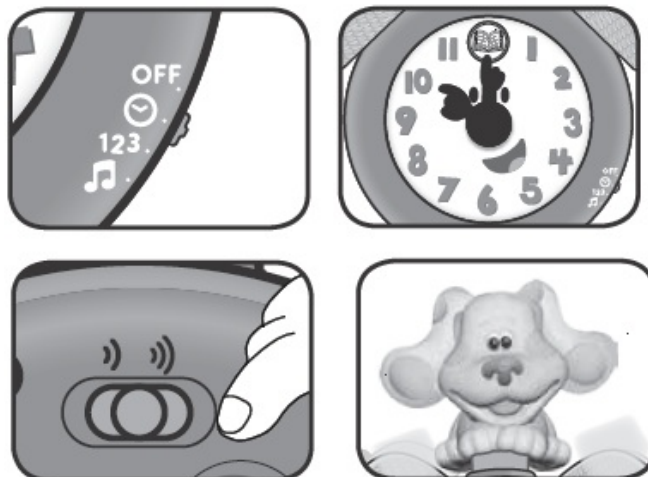

### 5. Automatic Shut-Off

To preserve battery life, the Blue's Clues & You!™ Tickety Tock Play & Learn Clock will automatically shut off after approximately 100 seconds without input. The unit can be turned on again by pressing Blue or moving the clock's short hand.

**Note:** This product is in Try-Me mode in the packaging. After opening the package, turn the product off and on again to proceed with normal play. If the unit powers down while playing, please install a new set of batteries.

 
 
## ACTIVITIES

## 1. Three Modes

Choose Time mode 🕒, to learn about what Blue does at different times of the day. Choose Numbers mode 123 to explore numbers and counting. Choose Music mode 🎵 to hear fun music and sing-along songs.

## 2. Routines Window


Turn Tickety Tock's short hand to see the pictures at the top of the clock face change and to hear Tickety Tock describe what happens at each hour.

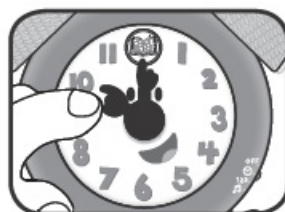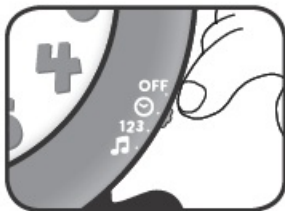

- 8 o'clock in the morning Time for Blue to eat breakfast and then brush her teeth!
- 9 o'clock in the morning Time for Blue to go to school.
- 10 o'clock in the morning Time for Blue to read and write!
- 11 o'clock in the morning Time for Blue to play outside!
- 12 o'clock. It's noon. Time for Blue to have lunch.
- 1 o'clock in the afternoon Time for Blue to take a nap.



 - 2 o'clock in the afternoon It's mail time!
- 3 o'clock in the afternoon Time for Blue to have a snack.
- 4 o'clock in the afternoon Time to play Blue's Clues! We need to look for one...two...three clues!
- 5 o'clock in the evening Time for Blue to wash up.
- 6 o'clock in the evening Time for Blue to eat dinner.
- 7 o'clock in the evening Time for Blue to take a bath, brush teeth, and go to bed.

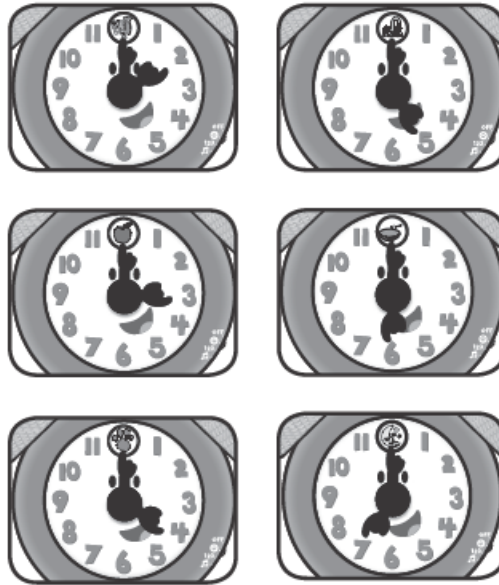


### 3. Light-Up Bells

Press the Blue Button and Tickety Tock's Light-Up Bells will light up and shake.

### 4. Blue Button

 Press the Blue Button to hear Tickety Tock ask questions, sing and more.

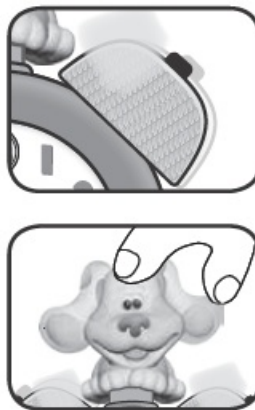

### Song Lyrics

- Learning is so fun to do,
- Numbers, letters, colors, clues.
- Come on, let's go figure it out,
- With Blue and you!

### CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

### TROUBLESHOOTING

**If for some reason the program/activity stops working, please follow these steps:**

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back ON. The unit will now be ready to play again.
5. If the unit still does not work, replace it with an entire set of new batteries.

#### **Environmental phenomena.**

- The unit may malfunction if subjected to radio-frequency interference.
- It should revert to normal operation when the interference stops.
- If not, it may become necessary to turn the power OFF and back ON or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

**IMPORTANT NOTE:** If the problem persists, please call our Consumer Services Department at 1- [800-701-5327](tel:800-701-5327) in the U.S. or email [support@leapfrog.com](mailto:support@leapfrog.com). Creating and developing LeapFrog® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:**

1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-3 (B)/NMB-3(B)

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Supplier's Declaration of Conformity

- **Trade Name:** LeapFrog®
- **Model:** 6108
- **Product name:** Blue's Clues & You!™ Tickety Tock Play & Learn Clock
- **Responsible Party:** LeapFrog Enterprises, Inc.
- **Address:** 6401 Hollis Street, Suite 100, Emeryville, CA 94608
- **Website:** [leapfrog.com](http://leapfrog.com)

Visit our website for more information about our products, downloads, resources, and more. [leapfrog.com](http://leapfrog.com) For warranty information, please visit [leapfrog.com/warranty](http://leapfrog.com/warranty).

LeapFrog Enterprises, Inc., a subsidiary of VTech Holdings Limited. TM & © 2017 LeapFrog Enterprises, Inc. All rights reserved.

## FREQUENTLY ASKED QUESTIONS

What is the LeapFrog 80-610800 Tickety Tock Play & Learn Clock?

The LeapFrog 80-610800 Tickety Tock Play & Learn Clock is an educational toy designed to help young children learn about time and numbers through interactive play.

What age range is the LeapFrog 80-610800 Tickety Tock Play & Learn Clock recommended for?

It is recommended for children aged 24 months to 5 years.

What is the price of the LeapFrog 80-610800 Tickety Tock Play & Learn Clock?

The LeapFrog 80-610800 Tickety Tock Play & Learn Clock is priced at \$19.99.

What are the dimensions of the LeapFrog 80-610800 Tickety Tock Play & Learn Clock?

The product dimensions are 2.48 x 5.32 x 7.72 inches.

How much does the LeapFrog 80-610800 Tickety Tock Play & Learn Clock weigh?



The LeapFrog 80-610800 Tickety Tock Play & Learn Clock weighs 1 pound.

What type of batteries does the LeapFrog 80-610800 Tickety Tock Play & Learn Clock require?

The LeapFrog 80-610800 Tickety Tock Play & Learn Clock requires 2 AAA batteries.

What is the warranty period for the LeapFrog 80-610800 Tickety Tock Play & Learn Clock?

The LeapFrog 80-610800 Tickety Tock Play & Learn Clock comes with a 3-month warranty.

Who is the manufacturer of the LeapFrog 80-610800 Tickety Tock Play & Learn Clock?

The LeapFrog 80-610800 Tickety Tock Play & Learn Clock is manufactured by VTech.

What features does the LeapFrog 80-610800 Tickety Tock Play & Learn Clock offer?

The LeapFrog 80-610800 Tickety Tock Play & Learn Clock features interactive elements that teach kids about numbers, time, and daily routines through songs and activities.

How does the LeapFrog 80-610800 Tickety Tock Play & Learn Clock engage children?

The LeapFrog 80-610800 Tickety Tock Play & Learn Clock engages children with colorful lights, fun sounds, and interactive buttons that make learning about time enjoyable.

What materials are used in the LeapFrog 80-610800 Tickety Tock Play & Learn Clock?

The LeapFrog 80-610800 Tickety Tock Play & Learn Clock is made from plastic and other child-safe materials.

What makes the LeapFrog 80-610800 Tickety Tock Play & Learn Clock a good educational toy?

The LeapFrog 80-610800 Tickety Tock Play & Learn Clock is considered a good educational toy due to its interactive features that teach fundamental concepts of time and numbers in an engaging and entertaining way.

Why is the LeapFrog 80-610800 Tickety Tock Play & Learn Clock not turning on?

Ensure that the batteries are properly installed and have sufficient charge. If the clock does not turn on, try replacing the batteries or check for any corrosion in the battery compartment.

What should I do if the sound on the LeapFrog 80-610800 Tickety Tock Play & Learn Clock is not working?

Check the volume settings to ensure it is not turned down or muted. If the sound is still not working, replace the batteries and make sure they are properly installed. If the issue persists, there may be a problem with the speaker.

Why is the screen on the LeapFrog 80-610800 Tickety Tock Play & Learn Clock not displaying correctly?

A distorted or blank screen could be due to low battery power. Try replacing the batteries with fresh ones. If the problem continues, reset the clock by turning it off and on again.

## VIDEO – PRODUCT OVERVIEW



[Download the PDF link for LeapFrog 80-610800 LeapFrog 80-610800 Tickety Tock Play & Learn Clock User's Guide](#)  
[Tickety Tock Play & Learn Clock Users Guide.mp4](#)

REFERENCE: [LeapFrog 80-610800 Tickety Tock Play & Learn Clock User's Guide-Device.Report](#)

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.