



# LeapFrog Learn and Groove Thumpin' Numbers Drum Instruction Manual

[Home](#) » [LeapFrog](#) » LeapFrog Learn and Groove Thumpin' Numbers Drum Instruction Manual 

## Contents

- [1 LeapFrog Learn and Groove Thumpin' Numbers Drum](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 INTRODUCTION](#)
- [5 INCLUDED IN THE PACKAGE](#)
- [6 GETTING STARTED](#)
- [7 PRODUCT FEATURES](#)
- [8 ACTIVITIES](#)
- [9 CARE & MAINTENANCE](#)
- [10 TROUBLESHOOTING](#)
- [11 FCC Warning](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)
- [13 Related Posts](#)



**LeapFrog Learn and Groove Thumpin' Numbers Drum**



## Product Information

### Specifications

- **Product Name:** TM Drum Toy
- **Model:** TM-123
- **Power Source:** 2 AA (AM-3/LR6) batteries (not included)
- **Recommended Age:** 6 months and above

### Product Features

- Off/Low/High Volume Selector
- Mode Selector
- Colourful Fabrics and Textures
- Fabric Handle
- Automatic Shut-off

### Included in the Package

The following items are included in the package:

- TM Drum Toy
- Instruction Manual

## Getting Started

### Battery Removal and Installation

1. Make sure the unit is turned Off.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

**WARNING:** Adult assembly required for battery installation. Keep batteries out of reach of children.

### Try-Me Mode

This product is in Try-Me mode in the packaging. After opening the package, slide the Off/Low/High Volume Selector switch to the Off position, then slide the Off/Low/High Volume Selector switch to the On position. If the unit powers down while playing, please install a new set of batteries.

## Product Usage Instructions

### French Learning Mode

Move the Mode Selector to French mode, then tap the drum to learn colour names in French that match the Fabric Tags and see the drum light up to match. Learn to count from 1-10 with each tap of the drum and hear the Counting to Ten song in French.

### English Learning Mode

Move the Mode Selector to English mode, then tap the drum to learn colour names in English that match the Fabric Tags and see the drum light up to match. Learn to count from 1-10 with each tap of the drum and hear the Counting to Ten song in English.

### Drum Solo Mode

Move the Mode Selector to Drum Solo mode, then drum along to Latin, reggae and pop melodies and play with different percussion sounds.

## FAQ

- **Q: What type of batteries does the TM Drum Toy require?**

A: The TM Drum Toy requires 2 AA (AM-3/LR6) batteries.

- **Q: What age is this toy suitable for?**

A: The TM Drum Toy is suitable for children aged 6 months and above.

- **Q: Can I use rechargeable batteries?**

A: Yes, you can use fully charged Ni-MH rechargeable batteries for best performance.

- **Q: Is adult assembly required for battery installation?**

 
A: Yes, adult assembly is required for battery installation. Please keep batteries out of reach of children.

## Instruction Manual

This manual contains important information. Please save it for future reference.

## INTRODUCTION

Thank you for purchasing the Thumpin' Numbers Drum™! Designed to stimulate infants' developing senses, this fun light-up drum is wrapped in brightly coloured printed patterns and textured fabric with a soft rim, fabric tags with printed numbers, and a sensitive drum surface that responds to every tap. Explore four ways to play and learn about colours and counting in English and French. Tap along to the music in Drum Solo mode and enjoy children's melodies in Music mode. Get in the learning groove!

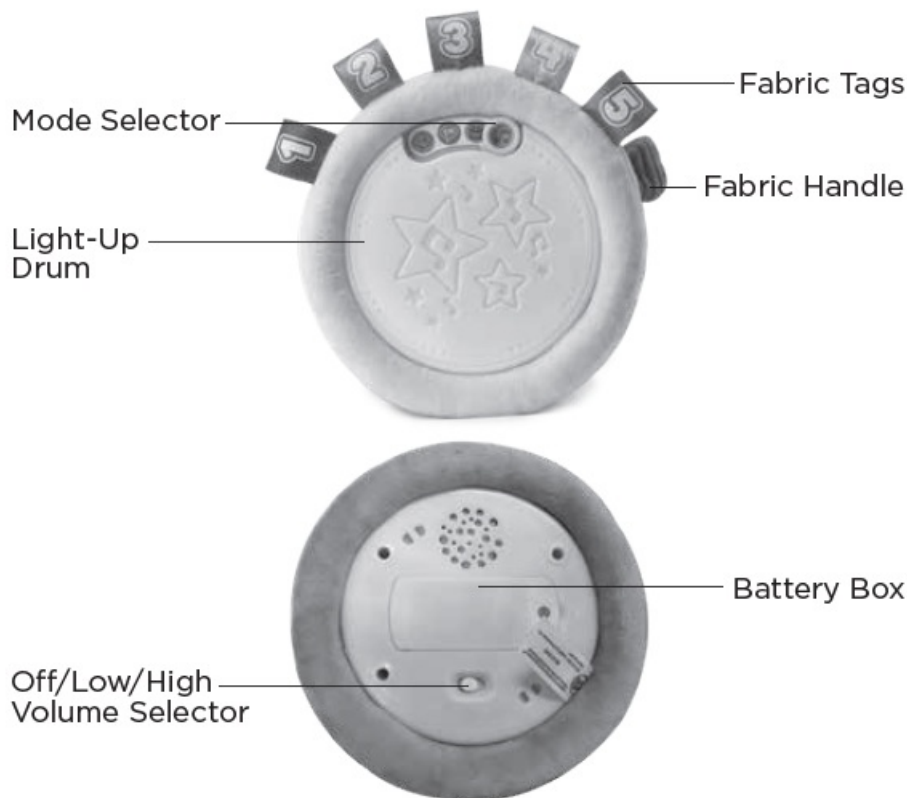

## INCLUDED IN THE PACKAGE

- Thumpin' Numbers Drum™
- Quick Start Guide

### WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

### NOTE

 
Please save this Instruction Manual as it contains important information.

## GETTING STARTED

### BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned Off.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.

4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

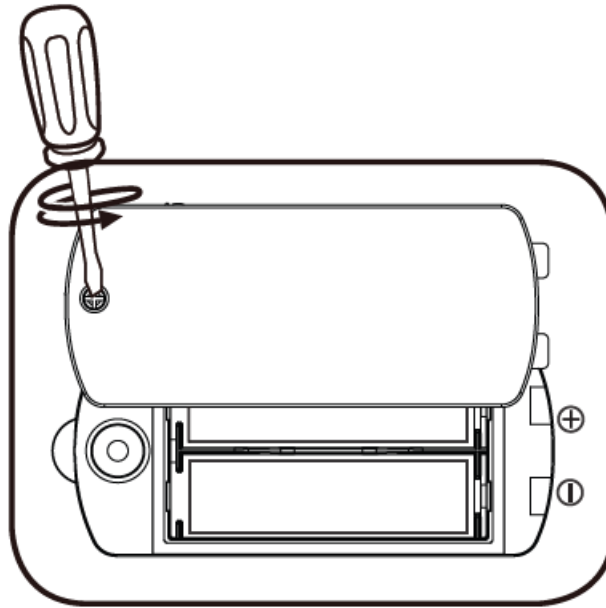

#### **WARNING:**

- Adult assembly required for battery installation.
- Keep batteries out of reach of children.

#### **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.



#### **RECHARGEABLE BATTERIES**

 
- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

#### **NOTE**

This product is in Try-Me mode in the packaging. After opening the package, slide the Off/Low/High Volume Selector switch to the Off position, then slide the Off/Low/High Volume Selector switch to the On position. If the unit powers down while playing, please install a new set of batteries.

## PRODUCT FEATURES

1. Off/Low/High Volume Selector To turn the unit On, slide the Off/Low/High Volume Selector to the Low  or High position. To turn the unit Off, slide the Off/Low/High Volume Selector to the Off position .

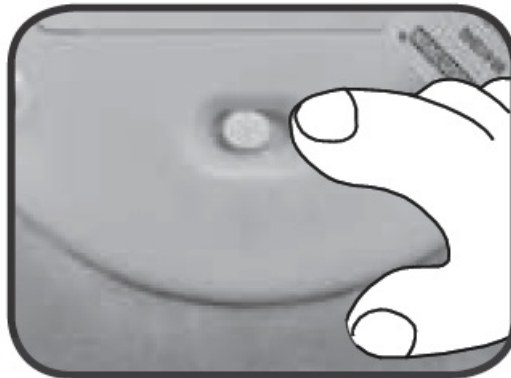

### 2. Mode Selector

1. Slide to choose among four play modes: French Learning Mode



2. Explore colours and numbers in French. English Learning Mode



 
3. Explore colours and numbers in English. Drum Solo Mode



4. Tap the drum along to the music. Music Mode



5. Tap along to children's melodies.

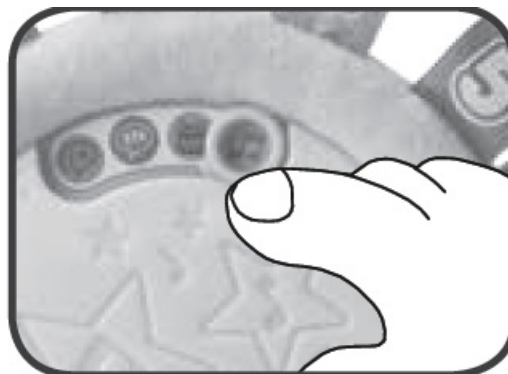


3. Colourful Fabrics and Textures Brightly coloured fabrics show patterns and images of drums for visual stimulation. The textured and numbered ribbon Fabric Tags foster tactile development. Soft plush encourages snuggling during play.



#### 4. Fabric Handle

 The built-in Fabric Handle on the drum makes it easy to carry.

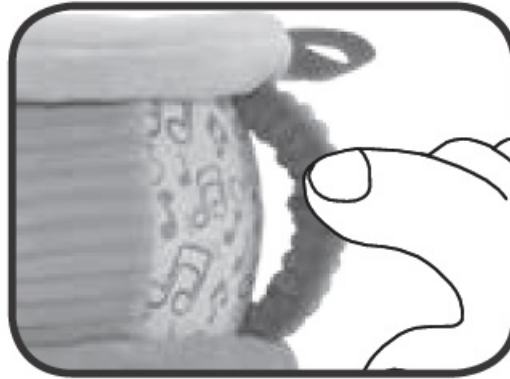

#### 5. Automatic Shut-off

1. To preserve battery life, the Learn & Groove® Thumpin' Numbers Drum™ will automatically shut off after approximately 35 seconds without input. The unit can be turned on again by sliding the Mode Selector.
2. **NOTE** If the unit powers down or if the light fades out during play, please install a new set of batteries.

### ACTIVITIES

 
#### 1. French Learning Mode

Move the Mode Selector to French mode, then tap the drum to learn colour names in French that match the Fabric Tags and see the drum light up to match. Learn to count from 1-10 with each tap of the drum and hear the Counting to Ten song in French.




#### 2. English Learning Mode

Move the Mode Selector to English mode, then tap the drum to learn colour names in English that match the Fabric Tags and see the drum light up to match. Learn to count from 1-10 with each tap of the drum and hear the Counting to Ten song in English.

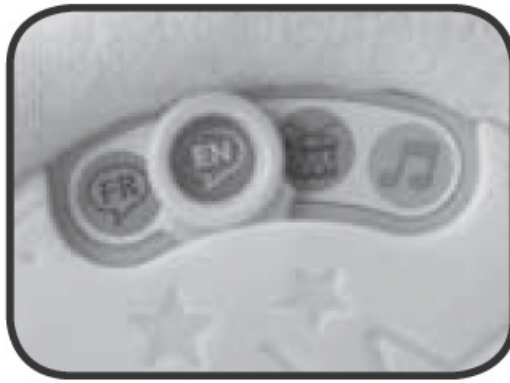

### 3. **Drum Solo Mode**

 Move the Mode Selector to Drum Solo mode, then drum along to Latin, reggae and pop melodies and play with different percussion sounds.

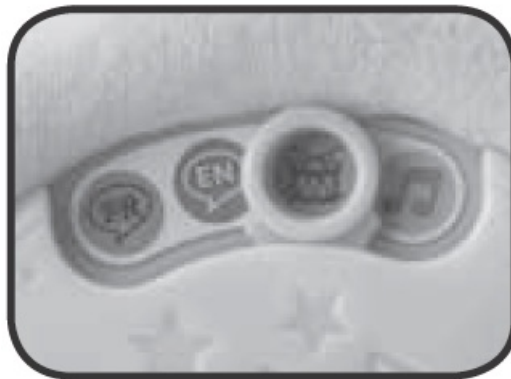

### 4. **Music Mode**

Move the Mode Selector to Music mode, then tap to the beat of 12 children's melodies while the drum changes colours to the beat of the music.



## **MELODIES**

1. La Cucaracha
2. If You're Happy and You Know It
3. John Jacob Jingleheimer Schmidt
4. Bingo
5. Mexican Hat Dance
6. A-Tisket A-Tasket
7. The Wheels on the Bus
8. Skip to My Lou
9. The Itsy Bitsy Spider
10. Head, Shoulders, Knees and Toes



11. Looby Loo
12. Are You Sleeping?

### **Counting to Ten Song**

- Let's count to ten
- Keeping the beat
- Beat the drum
- And tap your feet
- That's 1, 2, 3...4, 5, 6...7, 8, 9, 10
- Let's do it again!

### **SONG LYRICS**

- Drum Song
  - What's that?
  - Do you hear the sound?
  - With a little funky rhythm we'll be banging along (We're gonna) Rat-a-tat-tat, brrum-bah-bum!
  - Play and learn on my favourite drum.

### **CARE & MAINTENANCE**

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

### **TROUBLESHOOTING**

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

### **Environmental Phenomena**

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

### **FCC Warning**

### **NOTE**

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

### CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at 1-800-701-5327 in the U.S. and Canada, or email [support@leapfrog.com](mailto:support@leapfrog.com). Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.


- Visit our website for more information about our products, downloads, resources and more.
- [leapfrog.ca](http://leapfrog.ca)
- Read our complete warranty policy online at [leapfrog.com/legal](http://leapfrog.com/legal)

### LeapFrog Enterprises, Inc.,




A subsidiary of VTech Holdings Limited. TM & © 2021 LeapFrog Enterprises, Inc. All rights reserved.

Printed in China.

## Documents / Resources

	<p><a href="#">LeapFrog Learn and Groove Thumpin' Numbers Drum</a> [pdf] Instruction Manual Learn and Groove Thumpin Numbers Drum, Learn and Groove, Thumpin Numbers Drum, Num bers Drum</p>
---	--

## References

-  [Kids Learning Games | Educational Toys & Kids Tablets | LeapFrog](#)
-  [Legal | LeapFrog](#)
-  [LeapFrog Customer Support | Help & Support For LeapFrog Products](#)
- [User Manual](#)

Manuals+.