


LeapWell

LeapWell L-CD201 CD
Player



LeapWell L-CD201 CD Player User Manual

[Home](#) » [LeapWell](#) » LeapWell L-CD201 CD Player User Manual 

Contents

- 1 [LeapWell L-CD201 CD Player](#)
- 2 [Product Information](#)
- 3 [Product Usage Instructions](#)
- 4 [Key Introduction](#)
- 5 [Remote Control](#)
- 6 [Specifications](#)
- 7 [Function Mode Instructions](#)
- 8 [Packing List](#)
- 9 [Quick Troubleshooting](#)
- 10 [FCC Caution.](#)
- 11 [Documents / Resources](#)
 - 11.1 [References](#)
- 12 [Related Posts](#)

LeapWell

LeapWell L-CD201 CD Player



Product Information

Specifications

- Bluetooth Version: BT
- CD Player: Yes
- Supported Formats: CD
- Number of CDs: 3
- Bluetooth Range: 8-10 meters

Product Usage Instructions




1. **Bluetooth Connectivity:** To connect your device via Bluetooth, turn on the Bluetooth feature on the product by selecting BT or Bluetooth mode. Then, search for the device on your smartphone or other compatible device and pair them. Once paired, you can enjoy wireless audio streaming.
2. **CD Playback:** Insert up to 3 CDs into the CD player slot. Use the controls to select the desired CD and track. Press play to start playback. You can also skip tracks, pause, and adjust volume using the control buttons.
3. **Bluetooth CD Ding:** This feature allows you to receive notifications or alerts through a ding sound when using Bluetooth mode while playing a CD. Ensure the volume is audible to hear the dings clearly.

Frequently Asked Questions (FAQ)


Q: How do I reset the Bluetooth connection?

A: To reset the Bluetooth connection, go to the Bluetooth settings on your device and forget the product's pairing. Then, restart both devices and re-pair them following the initial pairing steps.

Key Introduction

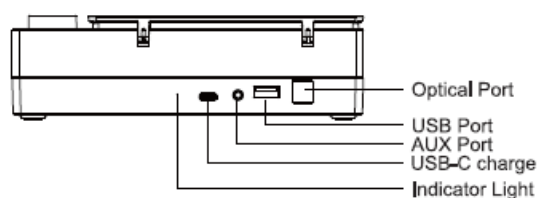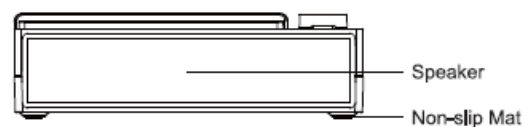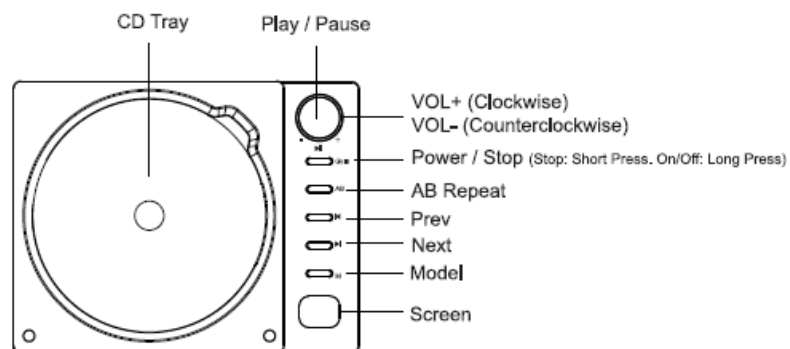

Remote Control

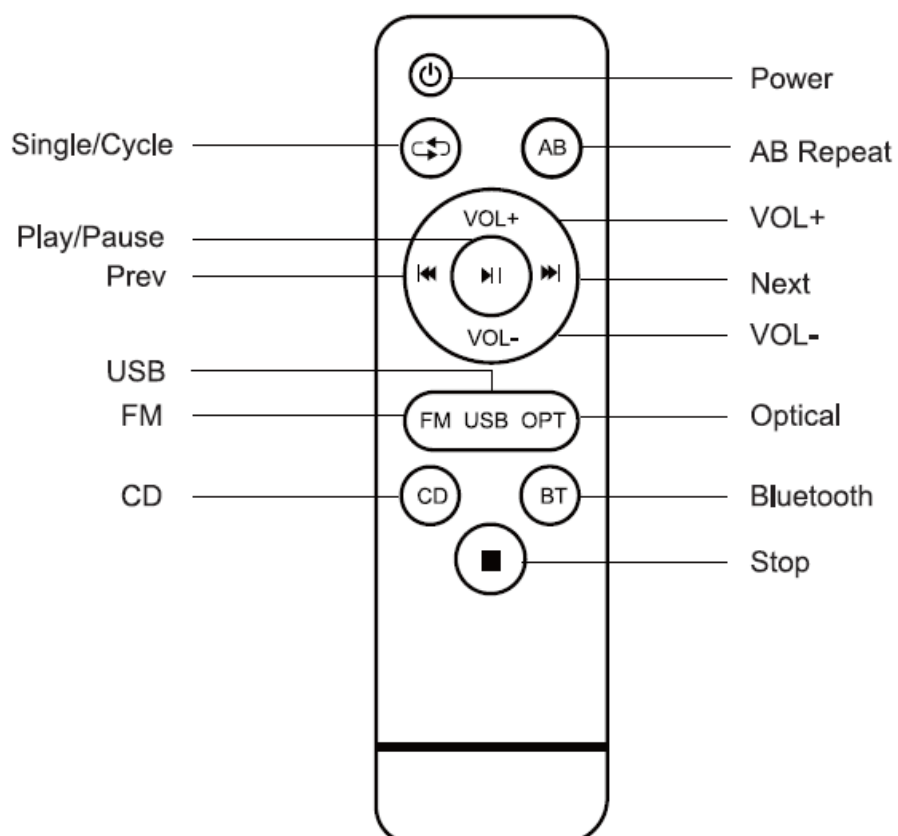

Specifications

1. Name: CD Player
2. Speaker: 40-3W
3. Bluetooth: BT 5.1
4. Interface: USB, SMM, OPTCAL, USBC
5. Battery: 3.7V-2600mAh/18650 Li-ion 9.62Wh
6. Working Time: Hours
7. FM Radio Range: 87.5KHz-108.0MHz
8. CD Format Support: CD, CD-R, CD-RW, MP3, WMA
9. Product Size: 185x145x54.7MM
10. Model: L-CD201
11. Rated Power: 6W
12. Input Voltage: 5V-2A

Note: Please fully charge it before use. (Support charging while using)

1. Please remove the button protection card before use.
2. Insert the disc into the CD player.
3. Press and hold the 'Power Button' for 3s to turn on.
4. Screen displays reading status (CD symbol flashes), CD disk rotates, and sound will play after 5-10s.
5. Press the 'Mode Button' or use remote control to switch modes.
6. Press the 'Play/Pause Button' to play or pause. (CD keeps spinning)
7. Press the 'Stop Button' to stop. (CD stops spinning)
8. Long press the 'Power Button' for 3s to turn off.

Function Mode Instructions



CD Mode: *

Note: Supported CD formats: CD, CD-R, CD-RM, MP3, WMA, WAV Press the 'CD Button' on the remote control or the 'Mode Button' on the machine to switch to CD mode: Screen display CD symbol.



USB Mode

Press the 'USB button' on the remote control or the 'Mode button' on the machine to switch to USB mode: Screen display USB symbol. The device will automatically read audio files from the U disk.



FM Mode:

* Note: FM radio range: 87.5MHz-108.0MHz Press the 'FM button' on the remote control or the 'Mode button' on the machine to switch to FM mode: Screen display FM symbols. Long press the play/pause button to enter the automatic station search and save the station. Short press the 'Previous/Next button' to select the Previous/Next station. Long press the 'Previous/Next button' to manually fine-tune the radio frequency.

Bluetooth Mode:



1. 1Receive Mode: Press the 'BT button' on the remote control or the 'Mode button' on the machine to switch to Bluetooth mode: Screen display BT symbol. Connect your phone/tablet to the CD player via bluetooth.

(Bluetooth Name:CD Player)



Transmit Mode: (Only used in CD mode) In CD mode, press and hold " Play/Pause

Button" 3s turn on Bluetooth transmit(BT symbol flashes). Please place the Bluetooth device close to CD play. Hearing "Ding" means connection is successful. (The first connection may take 8-10s

AUX Mode: *

Note: Standard 3.5mm audio output. Use the included 3.5mm male-to-male audio cable to connect the CD player to other speaker equipment.

Optical Mode: *

Note: Standard optical audio output port. (Only works in CD mode) Use an optical audio cable to connect the CD player to other amplifier. In CD mode, press and hold the 'MODE button' or press the 'OPT button' on the remote control to turn on the optical fiber function, and the optical fiber interface lights up. (Optical cable not included)

Repeat Mode:

Press the 'Single/Cycle Button' on the remote control to switch between 'Single Cycle' and 'Catalogue Play'.

A-B Repeat Mode:

*Note: A-B repeat function is only available in CD mode.

1. Press the 'AB button' to set the starting point (A) during playback, and 'A-' will appear on the screen.
2. Press the 'AB button' to set the end point (B) during playback, and 'A-B' will appear on the screen.
3. CD player will play the specified part from A to B repeatedly.
4. Press the 'AB button' again to exit the AB repeat function.

Notice

1. Please remove the button protection card before use.
2. Do not place stickers or write anything on the disc.
3. Never touch the laser of the device. Always use the dust cover to prevent dust from collecting on the laser.
4. If the device is unable to scan discs properly, use a standard cleaner to clean the laser optics. Other cleaning methods may damage the laser optics.

Packing List

- CD Player x 1
- Earphone x 1
- USB C Charge
- Cable x 1 Remote
- Control x 1 User
- Manual x 1 3.5mm
- Audio Cable x 1

Quick Troubleshooting

Malfunction	Possible reason	Solution
Device not work	Device is out of power	Please charge it
Unable to play	Disk not properly placed	Place the disk again
	Incompatibility issue	Replace to other compatible disk
No sound output	Device battery is low	Please charge by power
	Low volume	Volume up
Sound stuttering	Disk or laser lenses get dirty	Clean disk or laser
	Disk got scratched or curved	Replace the disk
Remote not work	The remote is out of power	Check the remote battery
	Angle is too much	Make sure remote is facing CD player
	Distance is too far	Make sure remote is within 4 meters

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception. which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

***RF warning for Portable device**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

service@szleapwell.com

Documents / Resources

	<p>LeapWell L-CD201 CD Player [pdf] User Manual L-CD201, L-CD201 CD Player, CD Player, Player</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.