
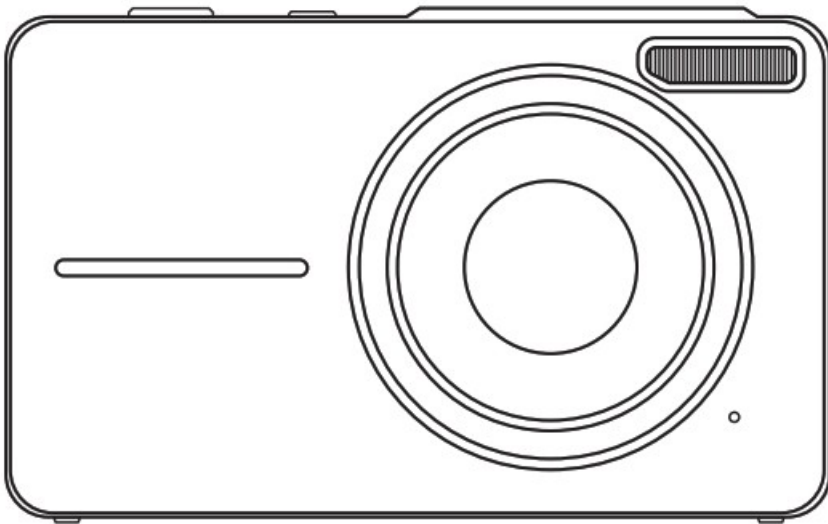 




LECRAN DC403-AF Digital Camera User Manual

[Home](#) » [Lecran](#) » LECRAN DC403-AF Digital Camera User Manual 

Digital Camera User Manual



RoHS **FC** **CE** 

Contents

- [1 Warm Tips](#)
- [2 Important Battery Safety Tips](#)
- [3 Introduction of Camera Parts](#)
- [4 Product Specifications](#)
- [5 Introduction to Image Mode Settings](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

Warm Tips

Since this product was designed for kids, we recommend shooting outdoors in bright light

Does this camera need to be charged prior to first use?

– Yes, we suggest you fully charge the camera before use.

After putting in the Micro SD card and everything else, it still says card error and what should I do?

– Please make sure your card is class 10 U1 32GB card, and put it in the slot again, if it still can't work, please contact the seller for help.

The camera freezes up and can't turn off, what can I do next?

– Please remove the battery, then install the battery again and turn the camera on, format SD card.

What is the best shooting distance?

– Since this camera is a fixed focus lens and cannot be replaced, the best shooting distance is 3.3 feet away. Please note that this camera cannot autofocus.







Important Battery Safety Tips

For your better experience with this product, please pay attention to the following safety tips

If the battery pack is mishandled, the battery pack can burst, cause a fire, or even chemical burns. Observe the following cautions.

- Do not disassemble.
- Do not crush and do not expose the battery pack to any shock or force such as hammering, dropping, or stepping on it.
- Do not short circuit and do not allow metal objects to come into contact with the battery terminals.
- Do not expose to high temperature above 60°C (140°F) such as in direct sunlight or in a car parked in the sun.
- Do not incinerate or dispose of in fire.
- Do not handle damaged or leaking lithium ion batteries.
- Be sure to charge the battery pack using a genuine battery charger or a device that can charge the battery pack.
- Keep the battery pack out of the reach of small children.
- Keep the battery pack dry.
- Replace only with the same or equivalent type recommended by seller.
- Dispose of used battery packs promptly as described in the instructions.

Introduction of Camera Parts

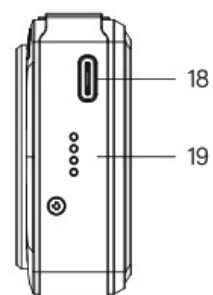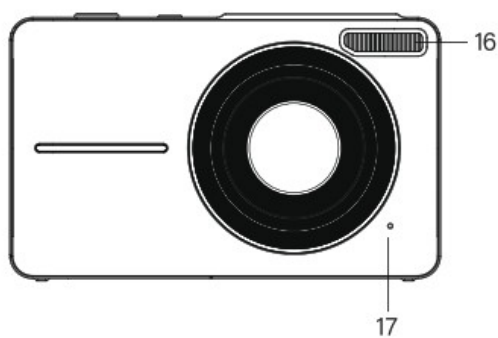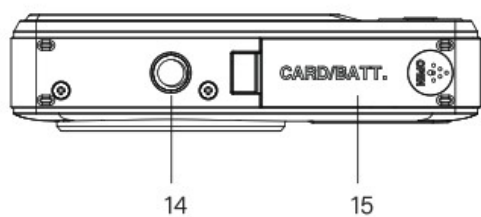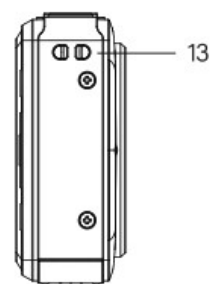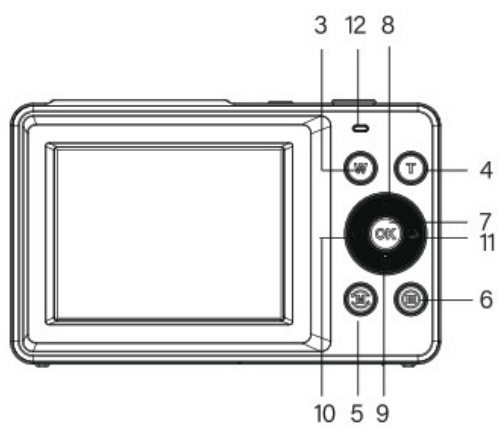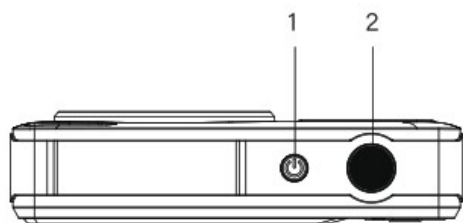


N O	Camera P arts	Introduction
1	Power But ton	Power the camera on/off
2	Shutter B utton	In image mode: take photos In video mode: start/end recording In playback mode: play/pause playing video file
3	W Button	Electronic zoom/zoom out In playback mode: reduce the sound of the video
4	T Button	Electronic zoom/enlarge In playback mode: enlarge the sound of the video
5	Mode Butt on	Switching camera modes: image mode/ video recording mode/playback mode
6	Menu Butt on	Enter or exit menu settings. In image mode: image mode setting In video mode: video mode setting In playback mode: delete files
7	OK Button	Confirm selection button In playback mode: stop playing video file
8	Up	Up key: turn on or off fill light /menu selection
9	Down	Down key: shortcut delete key /menu selection
1 0	Left	Left button: timer selfie button (in image mode, press it to set the timer photo count down time 2s, 5s or 10s) /menu selection
1 1	Right	Right key: In image mode, continuous shooting button (press this button to take 3 photos in a r ow)/menu selection.
1 2	Indicator li ght	1.The blue light indicates that the camera is working; 2.The red indicator light indicates that the camera is charging; 3.The red light goes out when fully charged
1 3	Hook	Attachable camera strap
1 4	Tripod mo unt	Standard screw port
1 5	Battery co ver	Install battery and Micro SD card
1 6	LED fill lig ht	LED fill light
1 7	MIC Port	Recording voice
1 8	USB	Type-C USB
1 9	Speaker	Play sound


Product Specifications

Video Resolution	1080P/720P/480P
Image Resolution	44MP/42MP/36MP/24MP/etc.
Memory Card	Support Micro SD card 32GB
File Format	JPG, AVI
Taking Photos	Single/Continuous shooting/2s timer /5s timer/10s timer
Electronic Zoom	16X
USB Port	Type-C
Display	2.5 inch Screen
Battery	Rechargeable Li-Ion Battery
Language	Support multi-language
Focal Length	f=7.36mm
Aperture	F/3.2
Power Save	Auto power off in 1 Min/2Mins/3Mins/4Mins /5Mins/1 °Mins
Operating System Requirements	Windows XP, Windows Vista, Windows 7, Windows 8, Windows 10, Mac 10.2


How to Insert and Remove the Battery

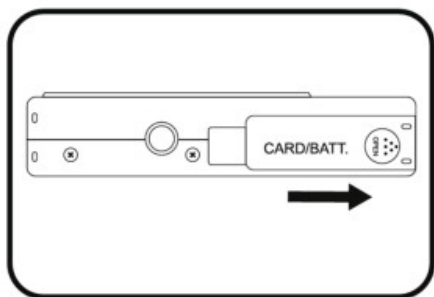


1.Open the battery cover

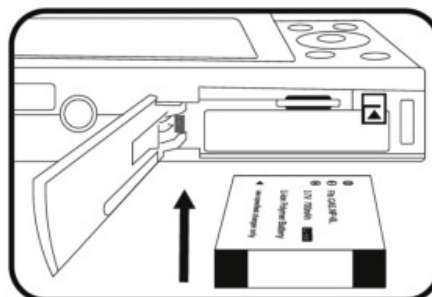

2.Insert the end with electrical contacts until it locks into place

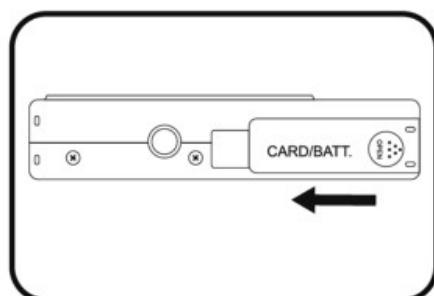



3.Close the battery cover

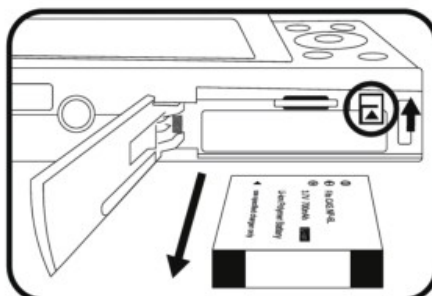

4.Please push the battery lock lever to remove the battery

How to Charge the Camera

1. Please use the USB cable and charger included in the package to charge the camera.
2. When the camera indicator light is red, it means the camera is charging.
3. When the camera light goes out, it means the camera is fully charged.

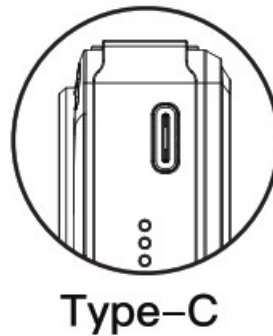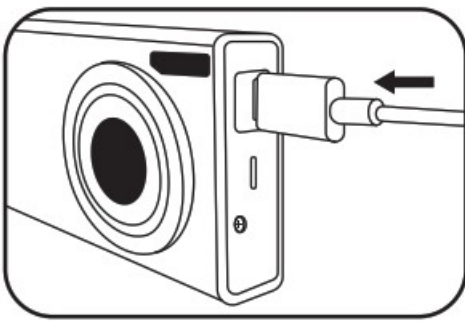


Please note

For the first time, please use the camera after fully charged.

How to Insert and Remove Micro SD Card

1. Open the battery cover
2. As shown by the illustration, face the card's metal contacts side toward you and insert it until it locks in place.

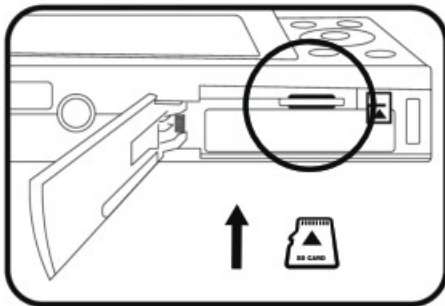

Metal contacts side



3. Close the battery cover.

Please caution

1. When the Micro SD card is used for the first time, please format it in the camera.
2. Please keep press the card until the lock lever locks the card.
When the card is locked, you will hear a "click" sound.


How to Format a Memory Card



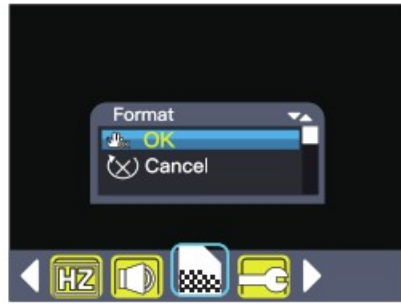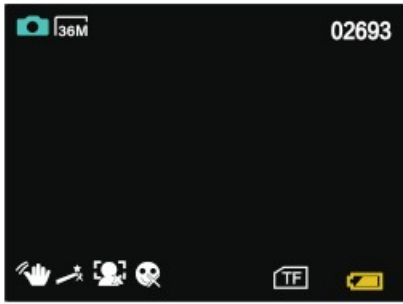



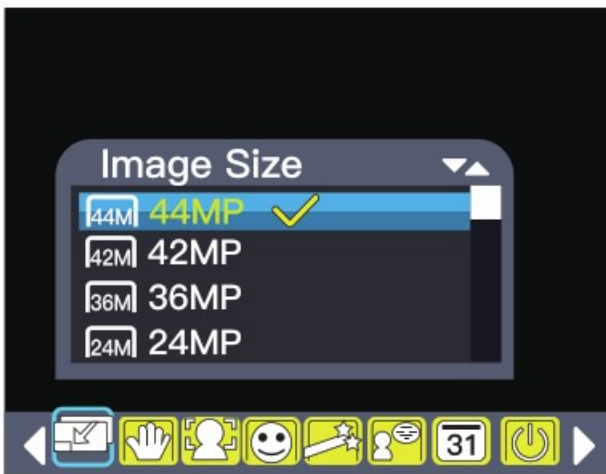

1. In the image mode, press the "Menu" button to enter the image mode setting interface
2. Press the "Left" and "Right" keys to find the "Format" option
3. Press "OK" button to confirm formatting



Introduction to Image Mode Settings


1. Press the "Menu" button in the image mode to enter the camera image mode settings
2. After the setting is completed, please press the "Menu" button to exit the image mode settings



NO	Option	Introduction
	Anti-Shake	1.On/Off 2.Default is on
	Effect	You can choose photo effects, Default is normal
	Language	Support multi-languauge
	Date	1.Via the up/down/left/right buttons to set date and time 2.Please choose whether to display the date watermark on the photo 3.Press OK to exit the date setting after setup 4.Default is off
	Auto Power Off	Auto power off in 3Min/5Min/10Min Default is Off
	Sound Effect	On/Off Default is on
	Format	You can choose whether to format the SD card or not
	Default Setting	You can choose whether to default setting or not


How to Take Image

1. Please make sure the camera is in image mode (The camera defaults to image mode when turned on)
2. Press the “shutter” button to shoot an image

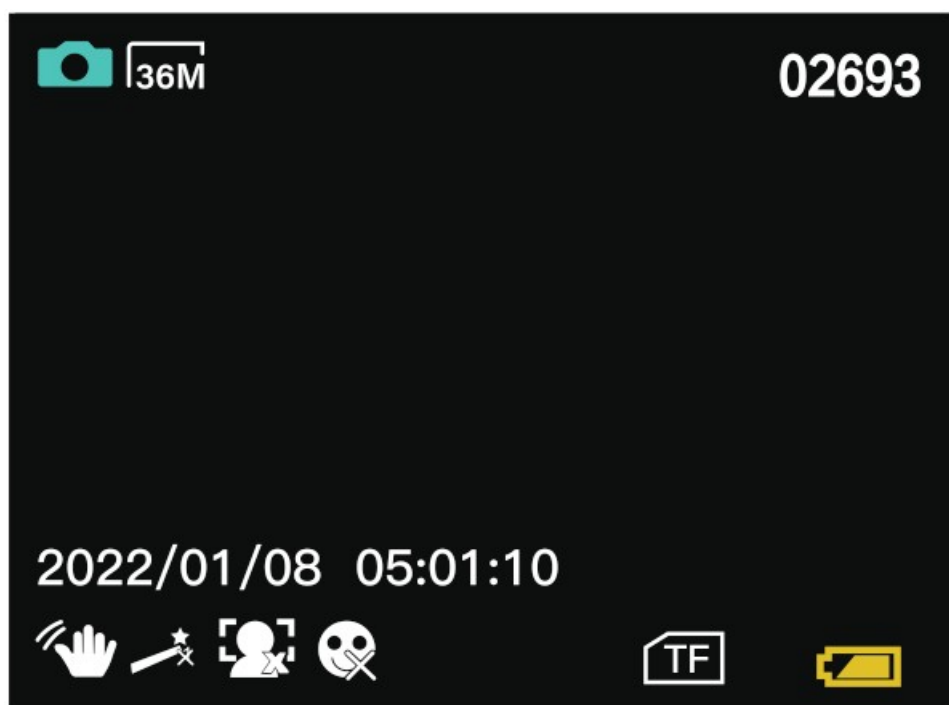


How to Play Back and Delete Image

1. Press the “Mode” button twice in the image mode to enter camera playback mode
2. Press “Right” or “Left” button to playback image one by one
3. Press “Down” button and select “Yes” to delete image
4. Please press the “Mode” button to exit image playback mode

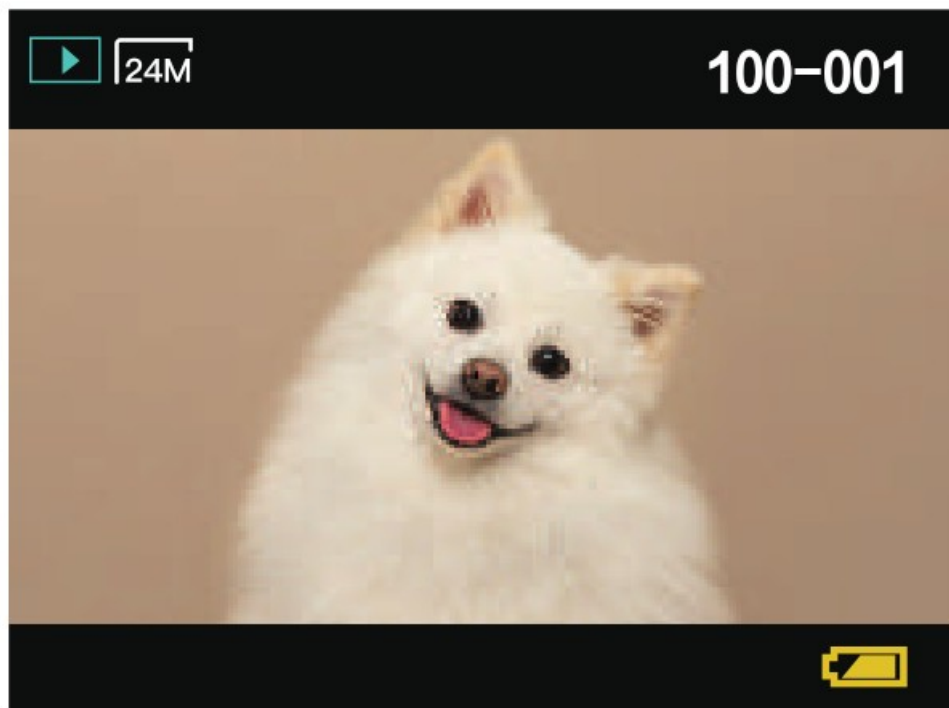

How to Record Video

1. The camera defaults to image mode when turned on, you need to press the “Mode” button once to enter video mode
2. Press the shutter button to start/stop video recording

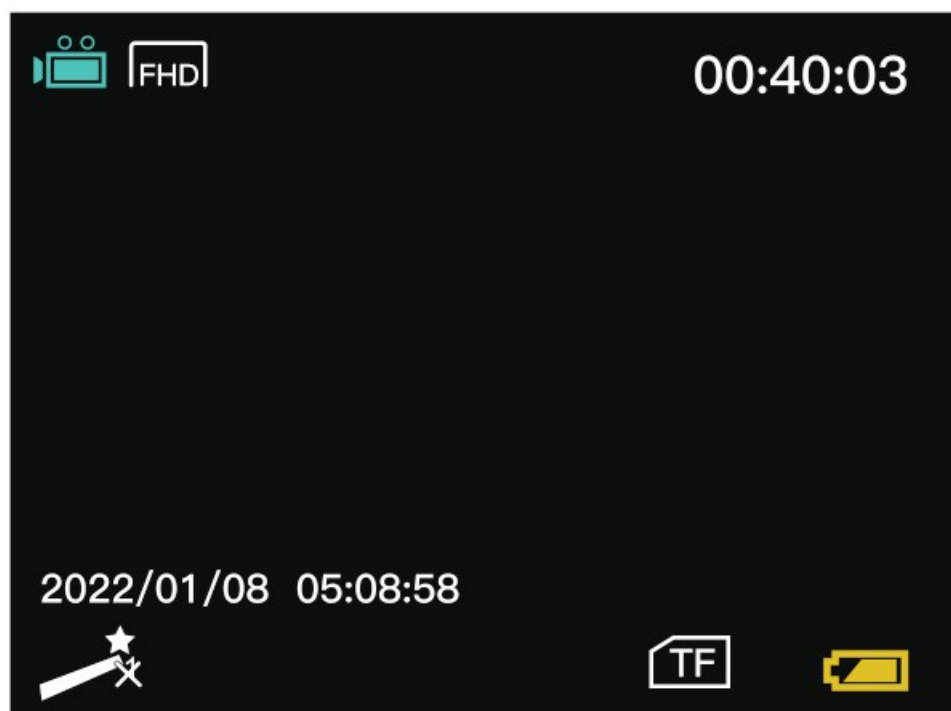

How to Play Back and Delete Recorded Videos

1. Press the “Mode” button once in the video mode to enter camera playback mode
2. Press “Right” or “Left” button to select video
3. Press “Down” button and select “Yes” to delete video
4. After the deletion is completed, please press the “Mode” button to exit video playback mode

How to Download Image/ Video Files to Computer

1. When the camera is turned on, use the USB cable (in the package) to connect the computer
2. Then you can download the files from the camera to your computer
3. After downloading, please remove the USB cable




How to Use Camera as Webcam

1. Please turn off the camera and use the USB cable (in the package) to connect the computer
2. Then please press the “Power” Button and “Shutter” Button at the same time
3. Then you can use the camera as webcam on the computer
4. After using, please remove the USB cable and the camera will exit webcam mode



Documents / Resources

<p>Digital Camera User Manual</p>  <p>Model: DC 403</p>	<p>LECRAN DC403-AF Digital Camera [pdf] User Manual</p> <p>DC403-AF, Digital Camera, DC403-AF Digital Camera, Camera</p>
--	--