



LECTRO VL-DAB Plus DAB Radio Owner's Manual

[Home](#) » [LECTRO](#) » LECTRO VL-DAB Plus DAB Radio Owner's Manual 

Contents

- [1 LECTRO VL-DAB Plus DAB Radio](#)
- [2 Safety Information](#)
- [3 SPECIFICATIONS](#)
- [4 OVERVIEW](#)
- [5 REMOTE CONTROL DEVICE](#)
- [6 DECLARATION OF CONFORMITY](#)
- [7 Documents / Resources](#)



LECTRO VL-DAB Plus DAB Radio



Safety Information

Please read this manual thoroughly before using the product. Keep it in hand for future reference. Warnings alert the user to potential serious outcomes, such as injury or adverse events to the user. Cautions alert the user to exercise care necessary for the safe and effective use of the product. Notes contain important information that may be overlooked or missed. This product can be used indoors only (see below for more info).

This appliance may be used by children aged 12 and over, and by persons with reduced physical, sensory or mental capacities or a lack of sufficient experience and/or knowledge¹ provided they are supervised or have been trained in the safe use of the appliance and understand the potential dangers.

Cleaning and maintenance must not be carried out by children without supervision. Children must not be allowed to play with the appliance.

Keep the packaging material away from children. There is a risk of suffocation!

Do not allow unsupervised children to clean or maintain this device.

- **WARNING!** Do not leave packaging material lying around carelessly. This may become dangerous playing material for children. Risk of suffocation!
- **DANGER** due to swallowing small parts. Keep these away from children. Risk of suffocation!

Avoid danger to life by electric shock

- Do not operate the unit with a damaged power line or damaged power plug.
ATTENTION! Damaged power lines represent danger to life by electric shock.
- Check the power lines regularly for damages and aging. If the power line is damaged it must be replaced by the manufacturer, his/her representative or a similarly qualified person in order to avoid safety hazards.
- Protect the power line against sharp edges, mechanical strain and hot surfaces.
- Do not switch on the unit if you notice visible damages (e.g. tears or cracks) or if you assume that the unit is damaged (e.g. after having fallen down).

NOTE/WARNINGS

- Do not open the device yourself.
- This device is not a TOY, keep it away from children.
- Do not use with appliances that could cause any fire in unattended use (like irons etc.).
- Any other use as the intended way forth, this device is not validated for any warranty or liability.

- This device is only used for domestic and private use!
- Do not use the device excessively and do not store them under heavy pressure. The device is not resistant to heat and water.
- Avoid rain, dampness or contact with other liquids


SPECIFICATIONS

Total watts:	2 x 1,5 w RMS built-in Active Stereo with built in Bass ReAex system
Impedance:	40
Speaker driver frequency:	100Hz-18KHZ, 53mm size Neodymium,
SNR:	70dB
Audio input mode:	DAB/DAB+/FM/Bluetooth/AUX / USB/TF
Preset stations:	4x DAB+ / 2x FM radio
Battery capacity:	3.7V@ 1800mAh
Playtime:	Up to 12 hours
LCD Screen:	With Backlight selectable
Built-in microphone:	Supported for handsfree calling
Equalizer mode:	Normal, Rock, Pop, Classic, Jazz, Rock, Speech, Flat, Movie, News
Power input:	DC 5V @ 1000mA (1A)
Working temperature:	0°C ~ +50°C
Dimensions:	200mmx100mmx70mm
USB Power Input	Any 5V – 1A ~ 2A power device
Fast charge time:	4H ± 0.5h (based on 2A input power)
Net weight:	About 850 g

LED function:	Charge status, battery full indication
Bluetooth version:	V5.0
Bluetooth frequency:	2.4 ~ 2.485 GHz
Bluetooth range:	+/- 10 meters Compatible with all Bluetooth A2DP Music devices in open space


OVERVIEW

FRONT SIDE

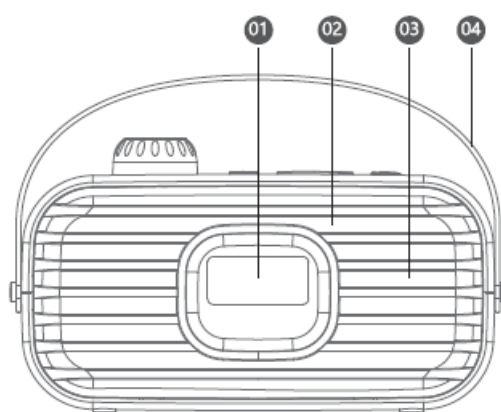

1. LCD Display
2. Remote Control Receiver
3. Speaker Driver
4. PU Leather Handle


TOPSIDE

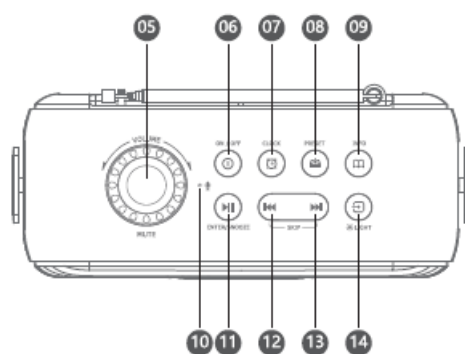

5. VOLUME KNOB
6. POWER ON/OFF/STANDBY
7. ALARM/CLOCK
8. PRESET RADIO STATIONS
9. INFO/MENU
10. MICROPHONE


11. PLAY/PAUSE/ENTER/SNOOZE
12. PREVIOUS/BACK/SKIP- (TRACKS)
13. NEXT/FORWARD/SKIP+ (TRACKS)
14. MODE/DISPLAY LIGHT

REAR SIDE

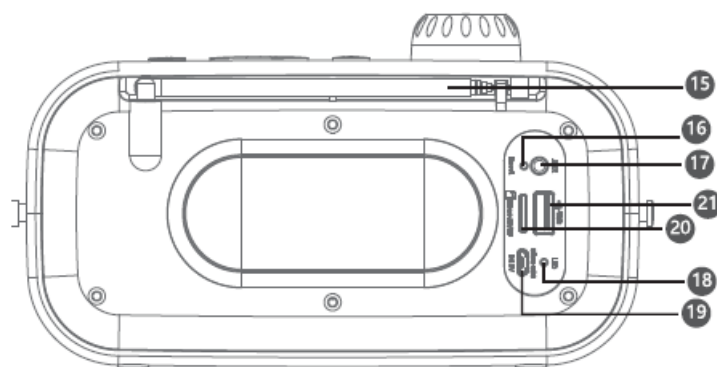

15. RADIO TELESCOPIC ANTENNA
16. RESET BUTTON SWITCH
17. AUX AUDIO INPUT 3.5MM
18. LED CHARGE INDICATOR LIGHT
19. MICRO USB CHARGE PORT
20. MICRO SD/TF CARD SLOT
21. USB AUDIO INPUT PORT

REMOTE CONTROL DEVICE

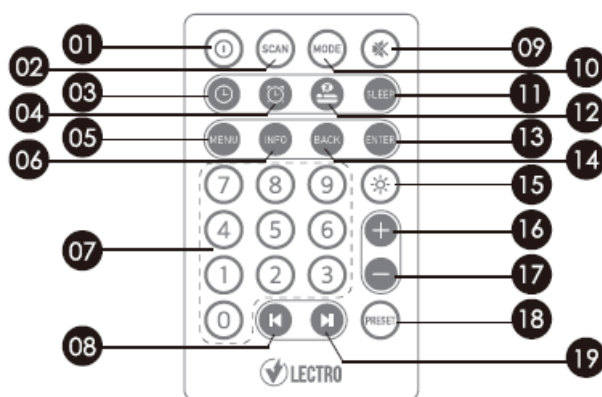

Use a CR2025 3V battery for remote control1 positive side facing up. Please take out the insulation tab plastic before using it!

If you need to replace the battery, take out the battery and push the battery out from the side. The batteries can be removed easy.

Remote controllable distance is around 5-10 meters. It must be pointed to the radio unit at all times.

RE-Battery assembly instructions

1. Push the tab on the battery cover on the side and open the battery cover.
2. Clean batte1v contacts and device contacts before installing the batte1\i
3. Make sure to check the correct polarity+ and – inside the remote contrnl compartment.
4. Put the battery cover back in place, and secure the buckle by pressing It inside the remote housing.

NOTE

Remove the batteries from the product if it is not used or a long time (1 month or longer) .

1. POWER ON/STANDBY
2. SCAN > When in DAB or FM Mode: Short press to scan radio stations
3. PRESET STATIONS> Long press number 0-9 button to store the radio station, press 0-9 button to select the radio station .
4. MENU> Press 1x for the menu setup settings
5. CLOCK> Press 1x for the radio setup settings
6. INFO > Press 1x to show (different) info settings
7. SKIP – When in DAB+ or FM mode: Press 1x for previous radio station, press and hold to fast move the radio stations
When in BT mode: Press 1x for previous track When in MENU mode: Press 1x for previous step
8. BACK> Press 1x to go back in the menu or settings.
When in alarm status long press to cancel the alarm sound.
9. SNOOZE> When the alarm signal is activated, press 1x to go into the snooze status.
Press it again to select the desired snooze time .
10. MUTE> Press 1x to activate ON/OFF
11. MODE/LIGHT> 1x Press to change DAB+/FM/BT/AUX mode change .
12. RESET 1x Press to show the radio station, Long press for the pre-stored radio stations .
13. ALARM> Press 1x for the alarm setup settings
(TIP: Press this button to switch off the alarm when activated.)
14. VOLUME+
15. SKIP+
When in DAB+ or FM mode: Press 1x for next radio station, press and hold to fast move the radio stations.
When in BT mode: Press 1x for next track
When in MENU mode: Press 1x for next step
16. ENTER> 1x Press to enter in DAB: /FM mode. 1x Press to pause in BT mode. 1x press to enter / confirm in the menu settings .
17. SLEEP > 1x Press to change the sleep mode into OFF/15/30/45/60/90 minutes .
18. VOLUME
19. LIGHT > Press to change the display light brightness (3x settings).

ALARM/CLOCK

When the device is powered ON, it is in DAB mode and automatically searches for DAB radio stations. If a DAB signal can be searched it will automatically set the date and time using the local DAB/DAB+ signal. When the time and date settings are not set automatically press and hold the 'CLOCK' button for approximately 2 seconds. Use the SKIP/TRACK buttons to set the time and date and press 'ENTER' to confirm it. To set the alarm in DAB+FM mode press the 'CLOCK' button 1x. Select the alarm setup number using the SKIP/TRACK buttons and press 'ENTER'. Use the SKIP/TRACK buttons to select your alarm times (up to 4 pieces) alarm durations, alarm sound source, alarm calendar and press ENTER' to confirm. 'select the alarm sound source using the SKIP!TRACK buttons and press 'ENTER'. Select the alarm calendar using the SKIP!TRACK buttons and press 'ENTER'. Select alarm volume using the SKIP/TRACK buttons and press 'ENTER'. Select alarm duration using the SKIP/TRACK buttons and press 'ENTER'. Use the 'SNOOZE' button to temporarily silence the alarm. TIP: Press this button to switch off the alarm when activated.

PRESET RADIO STATIONS (DAB+/ FM mode)

To setup a pre-set radio station select the station of your choice, using the SKIP/TRACK controls, then press 'ENTER'. Then press and hold the 'PRESET' button, use the SKIP/TRACK controls to find a free number, then press 'ENTER' to confirm. View the preset radio stations by pressing the 'PRESET' button and using the SKIP/TRACK controls to view all stations, press 'ENTER' to select the station you like to hear.

INFO/MENU

To change the device and speaker settings in all mode's (for example language, time, scan, tune etc) press and hold the 'INFO' button to see the menu. Use the SKIP/TRACK buttons to see and adjust all the settings in the menu and press 'ENTER' to confirm.

To see the INFO press ,x in each mode to select the different info as desired.

MICROPHONE

This is a built-in microphone to use for handsfree calling.

PLAY/PAUSE/ENTER/SNOOZE

When use in DAB mode> Press ,x for enter, press approximately 2 seconds for scan When use in FM mode> Press 1Xfor scan When in BT mode > Play/Pause the music Use the 'SNOOZE' button to temporarily silence the alarm or select the snooze time as desired.

PREVIOUS/SKIP-/BACK and NEXT/SKIP+/FORWARD

When in DAB+ or FM mode: Press ,x for previous/next radio station, press and hold to fast move the radio stations

When in BT mode: Press ,x for previous/next track

When in MENU mode: Press ,x for previous/next step

MODE/LIGHT:

MODE DAB/ FM/ BT/ AUX>

Enter a mode by pressing the mode button until 'DAB/FM/BT or AUX 'is displayed. Use the SKIP/TRACK buttons to select the previous/next radio stations/music track or scan radio stations and press 'ENTER' to confirm. When Bluetooth is selected it will activate pairing mode automatically. Turn on Bluetooth on your mobile device and select "Vlectro" from the list. You will then hear a sound that confirms that you are "connected". From now on you can listen to music and you are able to receive calls. The device also supports incoming calls.

Note, The memory function is automatically supported when reconnecting both devices that were used lasttime!

Bluetooth use:

1. Making phone calls

Make sure the device is connected to your mobile device. You can call now.

You answer the call by pressing the "ENTER" button once. To reject the call, long press the "ENTER" button so the call is rejected. You can change the volume by the volume knob or change it by the volume buttons from your device directly.

Note: all other functions should be used by your mobile device.

2. Listen to your music

Make sure that the device is connected to your mobile device. You can now listen to the music on your playlist.

,x short press the "ENTER" button to stop the music. Press the button again to continue. Press the SKIP+ – buttons for the next/ previous songs.

NOTE: When there is no music playing and no buttons have been pressed for 15 minutes, the device will automatically enter Standby mode.

Connect the 3.5mm Jack lead from your device to the AUX port if you want to listen wiredly from your (non

Bluetooth) music source device. Connect a USB Flash Drive or connect a USB audio input cable and press the MODE button until you will see “USB” Insert a MICRO SD card into the rear of the radio speaker at the SD/TF card slot and press the MODE button until you will see “SD”. Cards up till 32GB SDHC are supported. To adjust the LED display brightness, press and hold the ‘LIGHT’ button to select 1 of the 3 settings.

RADIO TELESCOPIC ANTENNA

When the signal is insufficient you can put it straight and make sure it is extended for better signal receptions. Near windows will improve the signal performance and battery use time.

USB disk (or micro SD card) playback

Turn on, insert USB / micro SD card, then press the MODE button to switch to USB / SD mode.

It will play music from USB/ micro SD automatically. (Largest capacity of USB/ micro SD the device can support: 64GB SDHC)

Rotate the VOLUME knob to adjust volume, press the VOLUME key to mute sound.

Press the SKIP left and right key to switch between up and down songs, long press the SKIP left and right key to rewind and fast forward. Press the ENTER key to play or pause. During playback, short press the MENU-INFO key to view the currently playing song information (current track/total track, current playing time/total current track time, date, etc.) Supports audio decoding format MP3/WAV/FLAC/WMA/APE.

DECLARATION OF CONFORMITY

Confinity NV, Dorp 16, 9830, Sint-Martens-Latem, Belgium declares the following device in sole responsibility:

Brand name: Vlectro

Product type: DAB+ radio

Item number: VL-DAB+

Complies with the following harmonization rules

EN 50663:2017

EN 624 79:2010

EN 62368-1:2014+A11:2017

EN 301 489-17 V3.2.4 (2020-09)

EN 301 489-1 V2.2.3 (2019-11)

EN 300 328 V2.2.2 (2019-07)

EN 303 345-1 V1 .1.1 (2019-06)

Draft EN 303 345-3 V1 .1.0 (2019-11)

Draft EN 303 345-4 V1 .1.0 (2019-11)

BS EN 55032:2015+A 11 :2020 BS

EN 55035:2017+A11:2020 BS

EN IEC 61000-3-2:2019 BS

EN 61000-3-3:2013+A1:2019

Documents / Resources

	<p>LECTRO VL-DAB Plus DAB Radio [pdf] Owner's Manual VL-DAB Plus, DAB Radio, VL-DAB Plus DAB Radio, Radio</p>
---	---