

LEDLENSER HF4R Core Rechargeable LED Head Torch Instruction Manual

Home » LEDLenser » LEDLENSER HF4R Core Rechargeable LED Head Torch Instruction Manual


Contents

- 1 HF4R Core Rechargeable LED Head **Torch**
- 2 HF4R Core Rechargeable LED Head **Torch**
- 3 Documents / Resources
 - 3.1 References


HF4R Core Rechargeable LED Head Torch




HF4R Core Rechargeable LED Head Torch

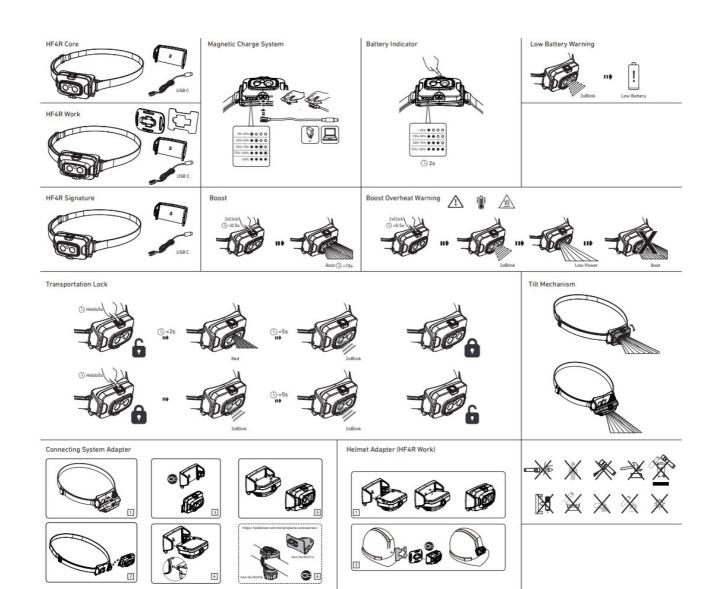


HF4R Core/HF4R Work

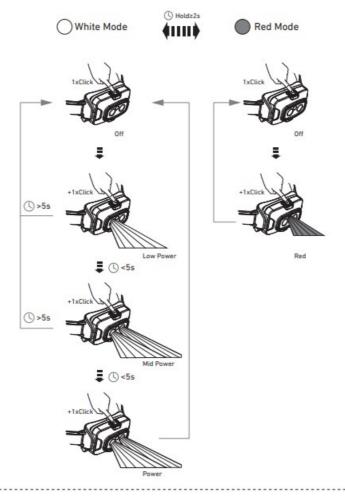


 Direct to Red Mode (HF4R Core/HF4R Work)



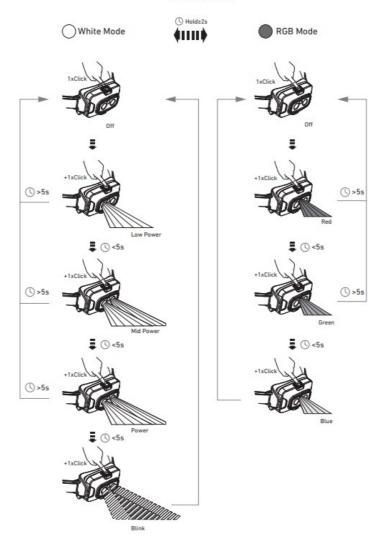

Direct to RGB Mode (HF4R Signature)

 


Ledlenser GmbH & Co. KG

Kronenstrasse 5-7 • 42699 Solingen • Germany Phone +49 212/5948-0 Fax +49 212/5948-200

 info@ledlenser.com





<u>LEDLENSER HF4R Core Rechargeable LED Head Torch</u> [pdf] Instruction Manual HF4R Core Rechargeable LED Head Torch, HF4R, Core Rechargeable LED Head Torch, Rechargeable LED Head Torch, LED Head Torch, Head Torch, Torch

References

- **Ledlenser**
- • Accessories for Ledlenser lamps
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.