



LEDLyskilder R14 Ultrathin Touch Slide RF Remote Controller Instruction Manual

[Home](#) » [LEDLyskilder](#) » LEDLyskilder R14 Ultrathin Touch Slide RF Remote Controller Instruction Manual 

Contents

- [1 LEDLyskilder R14 Ultrathin Touch Slide RF Remote Controller](#)
- [2 Features](#)
- [3 Technical Parameters](#)
- [4 Mechanical Structures and Installations](#)
- [5 Key function](#)
- [6 Safety information](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

LEDLyskilder

LEDLyskilder R14 Ultrathin Touch Slide RF Remote Controller



Touch color slide/RGB+W/Wireless remote 30m distance/CR2032 battery/Magnet stuck fix

Features

- Apply to RGB+W LED controller.
- Ultra sensitive color adjustment touch slide.
- Each remote can match one or more receivers.
- CR2032 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be easily stuck on back holder or any metal surfaces.


Technical Parameters

Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(CR2032)
Working current	5mA
Standby current	10μA
Standby time	1 year
Remote distance	30m(Barrier-free space)

Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED

Environment	
Operation temperature	Ta: -30 OC ~ +55 OC
IP rating	IP20

Mechanical Structures and Installations

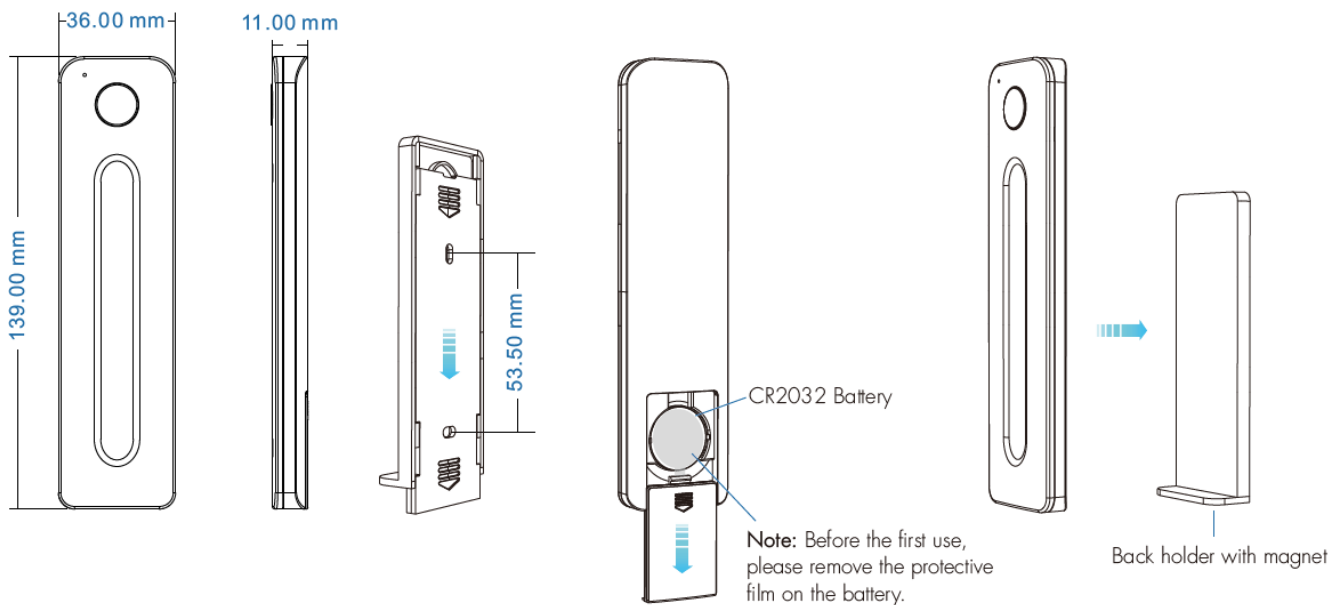

To fix the remote, three options are offered for selection:

- Option 1: stuck the remote on any metal surfaces directly.
- Option 2: fix the remote' back holder on the wall with two screws.
- Option 3: adhere the remote' back holder to the wall with a paster

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

• Match:

Short press the match key, and immediately press on/off key on the remote. The LED indicator fast flash a few times means the match is successful.

- **Delete:**

Press and hold the match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart


- **Match:**

Switch off the power, then switch on the power, and repeat again. An immediately short press on/off key 3 times on the remote. The light blinks 3 times means the match is successful.

Delete:

Switch off the power, then switch on the power, and repeat again. An immediately short press on/off key 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

Key function

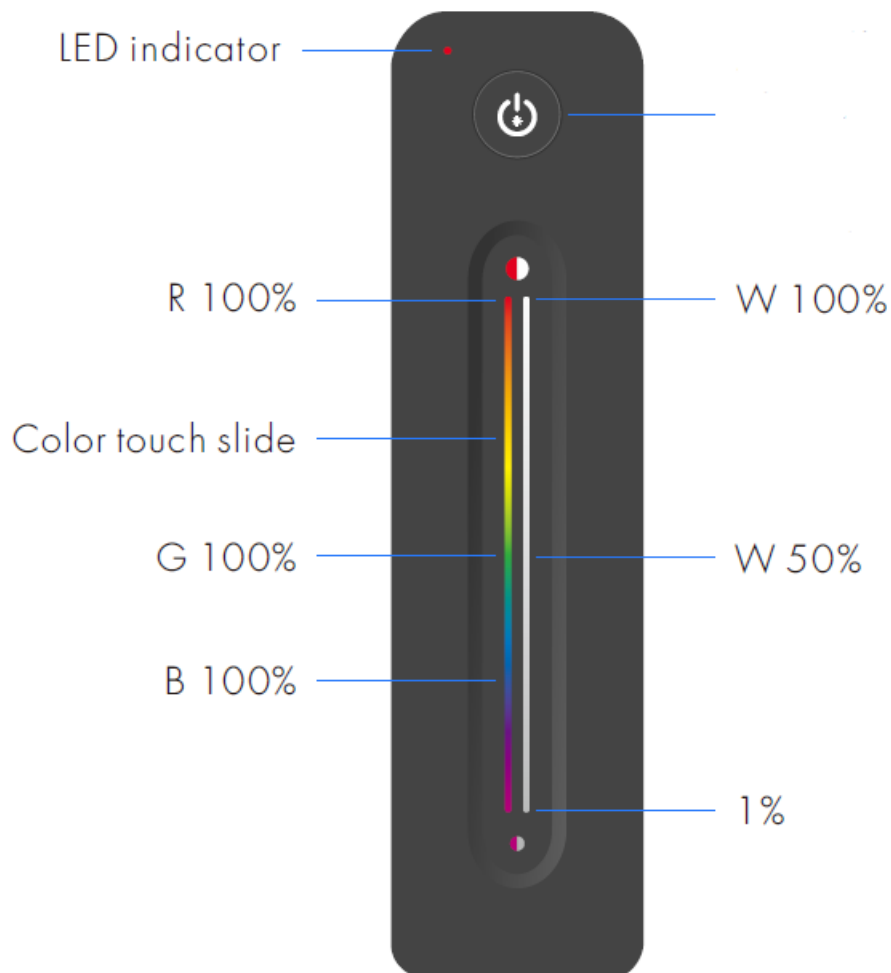

1. Short press for On/Off.
2. Press and hold 1-6s for RGB brightness dimming.
3. Fast press 2 times for shift between RGB, W, and RGB+W mode. In RGB or RGB+W mode, touch the slide to change the RGB color. In W mode, touch slide to change the white brightness.

Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing the battery, pay attention to the battery's positive and negative polarity. A long time without the remote control, remove the battery. When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle the remote, beware of falling.
5. For indoor and dry location use only.

Documents / Resources

	<p>LEDLyskilder R14 Ultrathin Touch Slide RF Remote Controller [pdf] Instruction Manual R14 Ultrathin Touch Slide RF Remote Controller, R14, Ultrathin Touch Slide RF Remote Controller</p>
---	---