



# LEDYi Lighting RT5/RT10 Touch Wheel RF Remote Controller Instruction Manual

[Home](#) » [LEDYi Lighting](#) » LEDYi Lighting RT5/RT10 Touch Wheel RF Remote Controller Instruction Manual 

## Contents

- [1 LEDYi Lighting RT5/RT10 Touch Wheel RF Remote Controller](#)
- [2 Touch Wheel RF Remote Controller](#)
- [3 Features](#)
- [4 Technical Parameters](#)
- [5 Mechanical Structures and Installations](#)
- [6 Match Remote Control \(two-match ways\)](#)
- [7 Key function](#)
- [8 Safety information](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)



**LEDYi Lighting RT5/RT10 Touch Wheel RF Remote Controller**



## Touch Wheel RF Remote Controller

**Model No.:** RT5/RT10

1 and 4 zone RGB+CCT/Touch color wheel/Wireless remote 30m distance/AAx2 battery/Magnet stuck fix



RT5  
1 Zone RGB+CCT



RT10  
4 Zone RGB+CCT

## Features

- Apply to RGB+CCT LED controller.
- Ultra sensitive color adjustment touch wheel.
- Each remote can match one or more receiver.
- AAx2 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be stuck on back holder.

## Technical Parameters

Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(AAAx2)
Working current	5mA
Standby current	10μA
Standby time	1 year
Remote distance	30m(Barrier-free space)


## Environment

- Operation temperature    Ta: -30OC ~ +55OC
- IP rating            IP20

Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED

Weight	
Net weight	48g
Gross weight	88g

## Mechanical Structures and Installations

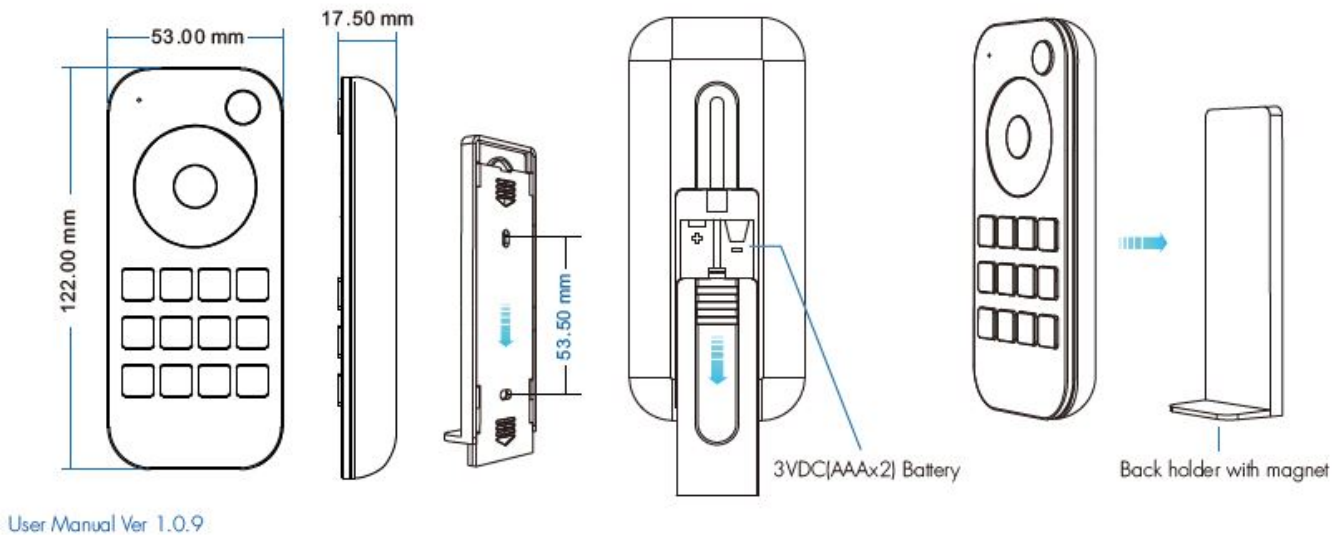

Tox the remote, three options are offered for selection: Option 1: stuck the remote on any metal surfaces directly. Option 2: fix the remote' back holder on the wall with two screws. Option 3: adhere the remote' back holder to the wall with paster.

### Operation

- When turn on light, the indicator display blue. when turn off light, the indicator display red.
- When touch the color wheel, the indicator will display the same color.
- When press or touch operation is invalid (If the light is off), the indicator display red.
- To extend battery life, no touch or press key operation after a few seconds, the touch wheel will enter sleep state, you need press any key to make touch wheel quit sleep state.

### Match Remote Control (two-match ways)

End-user can choose the suitable match/delete ways. Two options are offered for selection:

#### Use the controller's Match key

##### Match:

Short press match key, immediately press on/off key (single-zone remote) or zone key (multiple zone remote) of the remote.

The LED indicator fast flash a few times means the match is successful.

##### Delete:

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

#### Use Power Restart

##### Match:

Switch off the power, then switch on power, repeat again.

An immediately short press on/off key (single-zone remote) or zone key (multiple zone remote) 3 times on the remote. The light blinks 3 times means match is successful.

##### Delete:

Switch off the power, then switch on the power, repeat again.

An immediately short press on/off key (single-zone remote) or zone key (multiple zone remote) 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

## Key function

### RT5 1 zone RGB+CCT remote

#### • RT5 1 zone RGB+CCT remote



: Turn on/off light.



: Touch to change RGB color or color temperature.  
Press RGB or CCT key to switch between RGB wheel and CCT wheel.



: Adjust RGB or color temperature brightness,  
short press 10 levels, long press 1-6s for continuous 256 levels adjustment.



: Adjust color temperature by WW/CW channel,  
short press 11 levels, long press adjust WW+CW brightness continuously.



1  
Warm White  
WW 100%  
CW 0%

6  
Natural White  
WW 100%  
CW 100%

11  
Cool White  
WW 0%  
CW 100%



: Short press get 24 kinds static RGB color.



1 R 100%  
5 R 100% G 100%  
9 G 100%  
13 G 100% B 100%  
17 B 100%  
21 R 100% B 100%  
25(1) R 100%



: Short press run next dynamic mode, long press 2s run mode-cycle.



: For dynamic RGB mode, adjust speed,  
short press 10 levels, long press 2s get the default speed.  
For static RGB color, adjust saturation,  
namely change current static RGB color to mixed white slowly,  
short press 11 levels, long press 1-6s for continuous 256 levels adjustment.



: Short press get red, green or blue color directly.  
long press 1-6s to adjust R/G/B brightness continuously to achieve millions of colors.



: Short press turn on/off white(WW/CW),  
long press 1-6s to adjust white(WW+CW) brightness continuously,  
namely change saturation by adding white color slowly.



: Short press recall the scene, long press 2s save current color into S1/S2.  
the LED indicator display green when save OK.

### RT10 4 zone RGB+CCT remote



Each zone can match single color, dual color(WW/CW), RGB, RGBW, or RGB+CCT(WW/CW) controller or lamp.

- 1 2 3 4 + [Sun Icon] : Single color
- 1 2 3 4 + [CCT Icon] : Dual color(WW/CW)
- 1 2 3 4 + [RGB Icon] : RGB
- 1 2 3 4 + [RGBW Icon] : RGBW
- 1 2 3 4 + [RGB+CCT Icon] : RGB+CCT

For example, long press **1** + **RGB** key for 2s will set zone 1 as RGB light type. When remote type change OK, the green indicator go on a long time.




: Short press turn on/off all zone light.




: Touch to change current zone RGB color or color temperature. Press RGB or CCT key to switch between RGB wheel and CCT wheel.

**1 2 3 4** : Short press select and turn on zone light, long press 2s turn off zone light.


**[\*] [\*]** : Adjust RGB or color temperature brightness, short press 10 levels, long press 2s get min or max brightness.

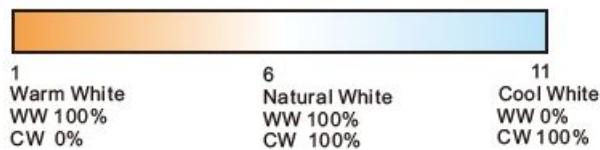


For RGB, adjust color temperature by mix R/G/B channel, 11 levels.

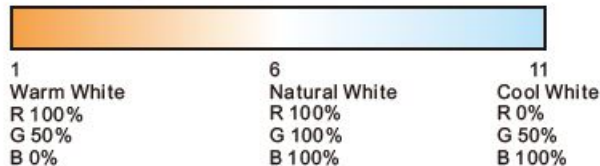

 For RGBW, adjust color temperature by adjust W channel brightness, 11 levels.



**RGB** : Short press get 24 kinds static RGB color.

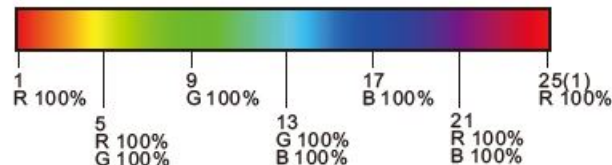

**[RGBW Icon]** : Short press run next dynamic mode, long press 2s run mode-cycle.

**[Play Icon]** : For dynamic RGB mode, adjust speed, short press 10 levels, long press 2s get the default speed. For static RGB color, adjust saturation, namely change current static RGB color to mixed white slowly, short press 11 levels, long press 1-6s for continuous 256 levels adjustment.

**S1 S2** : Short press recall the scene, long press 2s save current state into S1/S2. the LED indicator display green when save OK. 4 zone recall or save synchronously.

## Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity. A long time without the remote control, remove the battery. When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.

## Documents / Resources



[LEDYi Lighting RT5/RT10 Touch Wheel RF Remote Controller](#) [pdf] Instruction Manual  
RT5, RT10, Touch Wheel RF Remote Controller, RT5 Touch Wheel RF Remote Controller, RT10 Touch Wheel RF Remote Controller