


# ledyilighting R11 Ultrathin Touch Slide RF Remote Controller **Instruction Manual**

Home » ledyilighting » ledyilighting R11 Ultrathin Touch Slide RF Remote Controller Instruction Manual



ledyilighting **R11 Ultrathin Touch Slide RF Remote Controller Instruction Manual** 

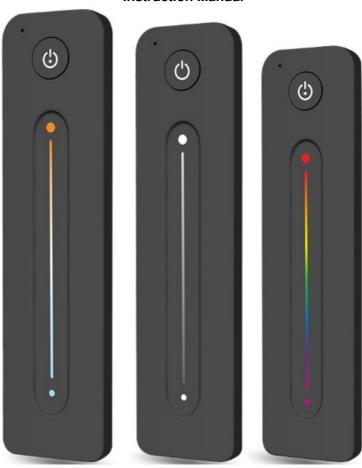

#### Contents

- 1 Ultrathin Touch Slide RF Remote
- Controller
- 2 Features
- **3 Technical Parameters**
- **4 Mechanical Structures and Installations**
- 5 Key function
- **6 Safety information**
- 7 Documents / Resources
- **8 Related Posts**

#### **Ultrathin Touch Slide RF Remote Controller**

Model No.: R11,R12,R13

Touch color slide/1-3 color/Wireless remote 30m distance/CR2032 batter y/Magnet stuck fix



## **Features**

- Apply to a single color, dual color or RGB LED controller.
- Ultra sensitive color adjustment touch slide.
- Each remote can match one or more receivers.
- CR2032 battery powered.
- · Operate with LED indicator light.
- Magnet on the back which can be easily stuck on back holder or any metal surfaces.

## **Technical Parameters**

Input and Output

Output signal	RF(2.4GHz)
Working voltage	3VDC(CR2032)
Working current	<5mA
Standby current	< 10A
Standby time	1 year
Remote distance	30m(Barrier-free space)


#### Environment

Operation temperature	Ta: -30 OC ~ +55 OC
IP rating	IP20

# Safety and EMC

EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED

#### **Mechanical Structures and Installations**

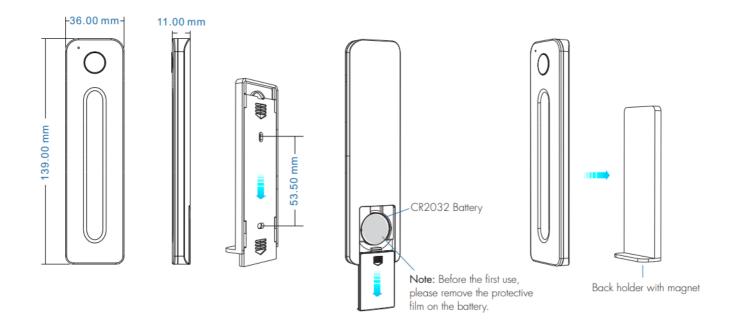

# To fix the remote, three options are offered for selection:

Option 1: stuck the remote on any metal surfaces directly.

Option 2: fix the remote' back holder on the wall with two screws.

Option 3: adhere the remote' back holder to the wall with a paster.

Match Remote Control (two match ways)

The end user can choose the suitable match/delete ways. Two options are offered for selection:

#### Use the controller's Match key

Match:

Short press the match key, and immediately press the on/off key on the remote.

The LED indicator fast flash a few times means the match is successful.

Delete:

Press and hold the match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

#### **Use Power Restart**

Match:

Switch off the power, then switch on the power, and repeat again.

An immediately short press on/off key 3 times on the remote.


The light blinks 3 times means the match is successful.

Delete:


Switch off the power, then switch on the power, and repeat again. An immediately short press on/off key 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

# **Key function**


## • R11 1 zone dimming remote

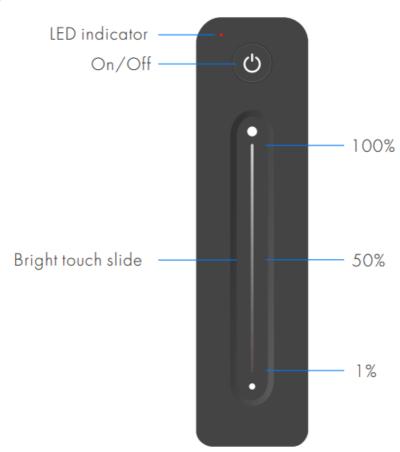

• R12 1 zone CCT remote

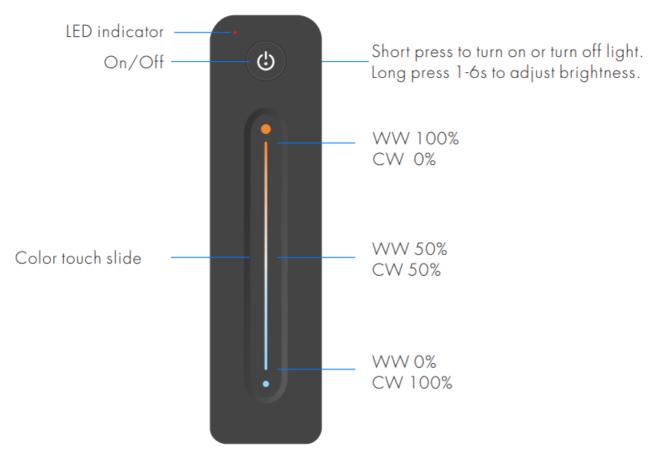

#### • R13 1 zone RGB remote

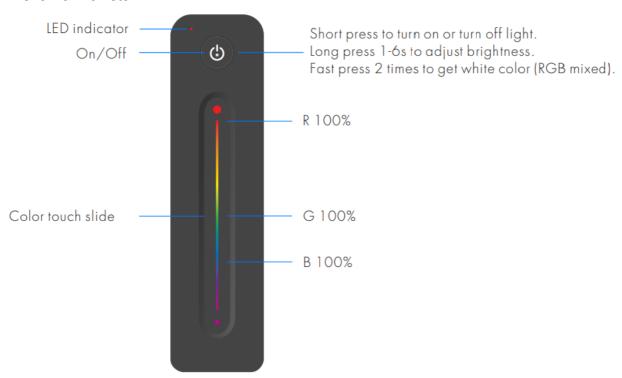

# Safety information

- 1. Read all instructions carefully before you begin this installation.
- 2. When installing the battery, pay attention to the battery's positive and negative polarity. A long time without the remote control, remove the battery. When remote distance becomes smaller and insensitive, replace the battery.
- 3. If no response from the receiver, please re-match the remote.

- 4. Gently handle the remote, beware of falling.
- 5. For indoor and dry location use only.

# R11,R12,R13

Ultrathin Touch Slide RF Remote Controller



# **Documents / Resources**



<u>ledyilighting R11 Ultrathin Touch Slide RF Remote Controller</u> [pdf] Instruction Manual R11, R12, R13, R11 Ultrathin Touch Slide RF Remote Controller, R11, Ultrathin Touch Slide RF Remote Controller

Manuals+,