



## LEFOO LF52 Differential Pressure Switch Instruction Manual

[Home](#) » [LEFOO](#) » LEFOO LF52 Differential Pressure Switch Instruction Manual 

# LEFOO

LF52 Differential Pressure Switch  
Instruction Manual



### Contents

- [1 Product introduction:](#)
- [2 Installation dimension mm](#)
- [3 Wiring diagram](#)
- [4 Specification](#)
- [5 Documents / Resources](#)

### Product introduction:

This adjustable differential pressure switch LF52 is developed for sparingly using in different differential value


requirements. It is widely applied for detecting the differential of water filter, pump, heat exchanger, chillers and its coil units. When the water flowing (differential) decrease or increase to the setting point, there will be an alarm or cut off output signal for the self-controlling system. It's also available for indicating the status of pump or water filter. Double differential settings pressure switch can take the replacement of the vane flow switch and avoid changing the vane flow switch from chillers each year.

A single set point is a high/low limit that controls the differential pressure between the front and rear ends of a section of pipeline. The double set point is to control the high and low limit of the pressure difference between the front and rear ends of a pipeline, and can also control the high/low limit of the pressure difference between the front and rear ends of the two pipelines.

#### Reference standard:

1. UI508
2. GB14048-2000 ( Low voltage switchgear and control equipment general provision )
3. GB14048.5-2000(Low voltageswitchgear and control equipment, part 5-1 Control equipment and switching elements )
4. ROHS certificate.

#### Installation dimension mm

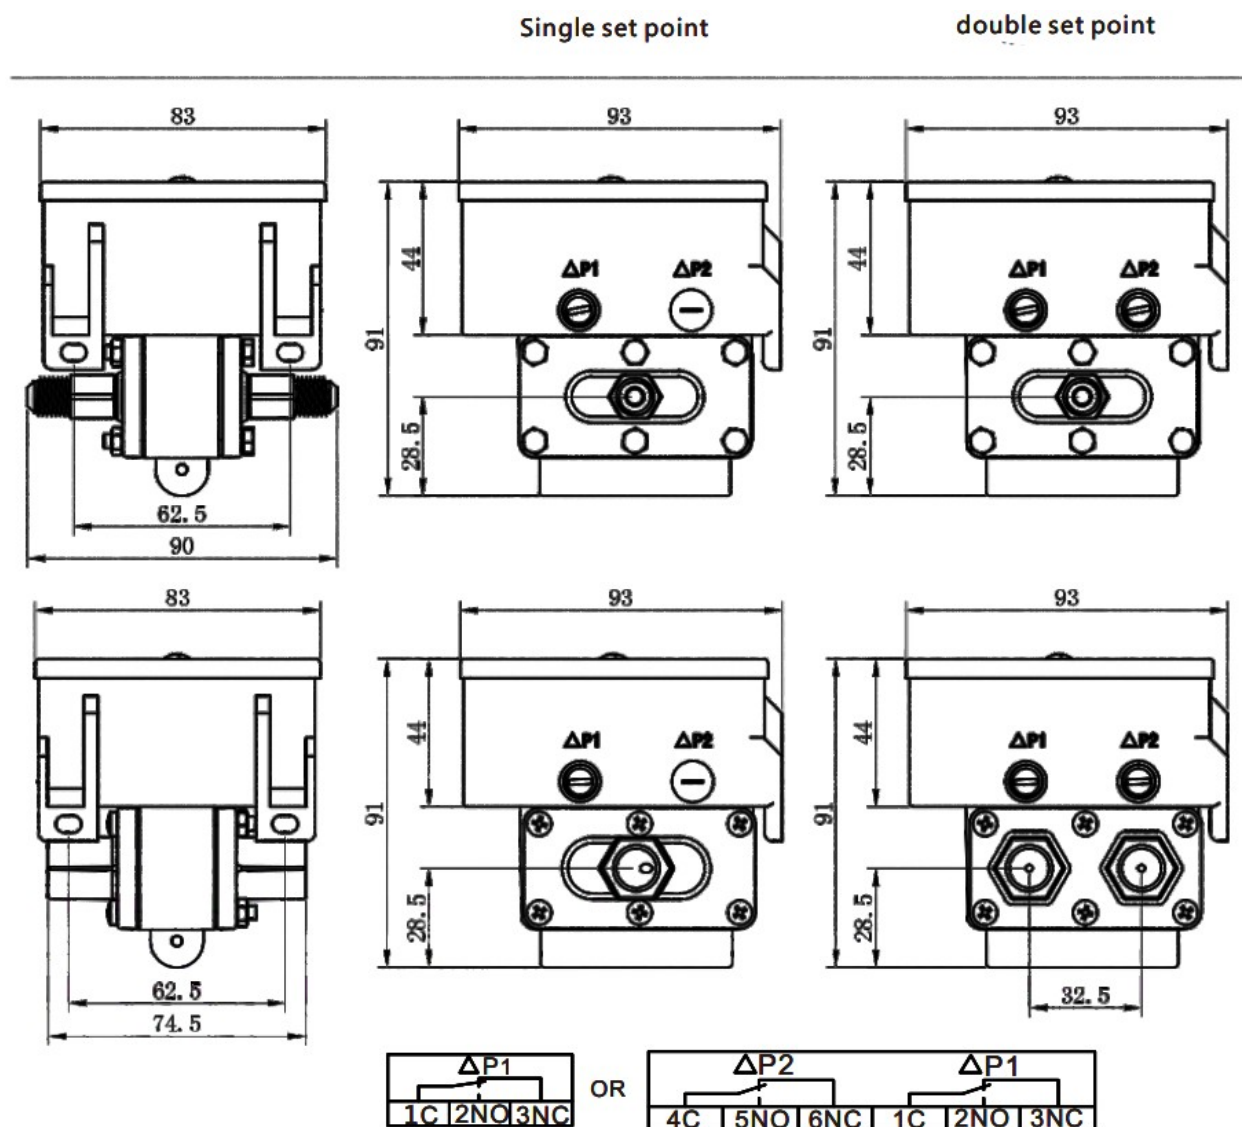

#### Wiring diagram

Adjustable	Model	Differential pressure adjustable range kPa	Differential	Lap increment
Single Set Point Working Pressure range	52-15	5—15	1—3	1
	52-30	5—30	1—3	2.2
	52-70	6—70	3—5	5.5
	52-100	6—100	3—5	6.5
	52-200	10—200	5—7	16
	52-300	20—300	6—9	25
	52-400	30—400	6—12	38
Dual Set Point Working Pressure range	52-30/100	5—30/6—100	1—3/3—5	2.2/6.5
	52-70/100	6—70/6—100	3—5/3—5	5.5/6.5
	52-100/100	6—100/6—100	3—5/3—5	6.5/6.5
	52-100/200	6—100/10—200	3—5/5—7	6.5/16
	52-200/200	10—200/10—200	5—7/5—7	16/16
	52-300/300	20—300/20—300	6—9/6—9	25/25
	52-400/400	30—400/30—400	6—12/6—12	38/38

**LF52Series Order Ref NO**  
**LE52-A-B-C-D**


A Product set point	B Joint thread	C Instructions	D Wiring protection
Single set point	7/16"Single set point male thread	Chinese/English	Rubber
Double set point	G1/4"Single set point female thread	Chinese	Plastic
		English	Metal

**Specification**

Contact arrangement	Non hazardous media such as water, air, oil etc...
Media	One/two sets of SPDT (microswitch)
Electrical rating	3A 250VAC 5A 12 VAC
Storage temperature	-29~82°C
Ambient temperature	-20~71°C
Media temperature	-20~93°C
High and low pressure connections	7/16"Single set point male thread 7/16"UNF double set point male thread G1/4"Single set point female thread G1/4"double set point female thread
Maximum static pressure	16bar
Maximum differential	10bar
Setting repeatability tolerance	lp54
Degree of protection	±1%
Accessories are optional (if there is no requirement, the default is selected)	Converted capillary, plastic/metal/rubber/line card, manual in Chinese/English

[www.lefoo.com](http://www.lefoo.com)

## Documents / Resources

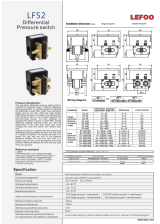	<p><a href="#">LEFOO LF52 Differential Pressure Switch</a> [pdf] Instruction Manual</p> <p>52-15, 52-30, 52-70, 52-100, 52-200, 52-300, 52-400, 52-30-100, 52-70-100, 52-100-100, 52-100-200, 52-200-200, 52-300-300, 52-400-400, LF52 Differential Pressure Switch, LF52, Switch, Pressure Switch, LF52 Pressure Switch, Differential Pressure Switch</p>
---	--