



legrand CS102 Network Interfaces Installation Guide

[Home](#) » [Legrand](#) » legrand CS102 Network Interfaces Installation Guide 

legrand CS102 Network Interfaces




Contents

- [1 Install the CS102 in a UPS and LAN \(Local Area Network\)](#)
- [2 Set a static IP address \(recommended\)](#)
- [3 Select the UPS connected to the CS102](#)
- [4 Connection to a Wi-Fi network](#)
- [5 Note](#)
- [6 Customer Support](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Install the CS102 in a UPS and LAN (Local Area Network)

- **A.** In case of Keor SPE UPS, replace the original metal bracket with the additional one (5) included in the CS102 package
- **B.** If the Wi-Fi dongle (4) is included in the package, insert it into the dedicated USB port (1) of the CS102
- **C.** Make sure both DIP switches (3) are in the OFF position
- **D.** Insert the CS102 into the dedicated UPS slot (it is not necessary to turn off the UPS)

- **E.** Connect the CS102 to the LAN using the appropriate port (2)
- **F.** If the UPS is turned off, turn it on now

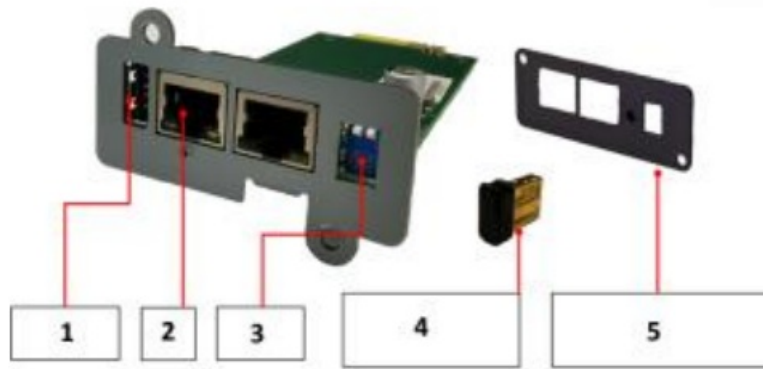

Set a static IP address (recommended)

- **A.** By default, CS102 is configured to use a dynamic IP address
- **B.** Download the “SNMP FITility” utility from <https://ups.legrand.com> and install it into your computer
- **C.** “SNMP FITility” will automatically search and list all CS102 cards found in the local network. Select the CS102 you want to configure, click the “Set IP” button and follow the on-screen instructions

Select the UPS connected to the CS102

- **A.** Enter the IP address of the CS102 in the web browser
- **B.** Select “English” from the drop-down menu located in the TOP bar (6) of the web page
- **C.** Enter your account details. The default is: Username = admin; Password = cs102snmp
- **D.** Click on the “UPS Management” item in the MAIN menu (7), then on the “UPS Settings” submenu item
- **E.** Select the UPS model from the “UPS Protocol” drop-down menu, then click the “Apply” button at the bottom of the web page

Connection to a Wi-Fi network

- **A.** Log in to CS102 (see previous paragraph)
- **B.** Click on the “Network” item in the MAIN menu (7), then the “Wi-Fi Settings” submenu item
- **C.** Enter the data according to the configuration of the Wi-Fi network you want to connect to
- **D.** Click on the “Apply” button, wait a few seconds, then refresh the web page by clicking again on the “Wi-Fi Settings” submenu item (7) to check if the CS102 has connected to the Wi-Fi network

Note

To set the other functions available in the CS102, refer to the user manual available on <https://ups.legrand.com>

Customer Support

LEGRAND
Pro and Consumer Service
BP 30076 – 87002
LIMOGES CEDEX FRANCE
www.legrand.com



Documents / Resources

A small thumbnail image of the 'legrand CS102 Quick Installation Guide' PDF document, showing the title page with the Legrand logo and some technical details.	legrand CS102 Network Interfaces [pdf] Installation Guide CS102, CS102 Network Interfaces, Network Interfaces, Interfaces
--	--

References

- [Welcome to Legrand - Legrand](#)
- [Home - Legrand](#)
- [Home - Legrand](#)