



LEICKE Bluetooth Speaker with Radio and MP3 Player User Manual

[Home](#) » [LEICKE](#) » LEICKE Bluetooth Speaker with Radio and MP3 Player User Manual 

Contents

- 1 LEICKE Bluetooth Speaker with Radio and MP3 Player User Manual
- 2 PACKAGE CONTENTS
- 3 TECHNICAL DETAILS
- 4 GETTING STARTED
 - 4.1 ESTABLISHING THE BLUETOOTH CONNECTION
- 5 MP3 PLAYER
- 6 RADIO
 - 6.1 HANDS-FREE FUNCTION
 - 6.2 CHARGING THE INTEGRATED BATTERY
 - 6.3 CONTROL ELEMENTS
- 7 TROUBLE SHOOTING
- 8 SAFETY NOTES
 - 8.1 FCC INTERFERENCE STATEMENT
 - 8.2 IMPORTANT NOTE:
- 9 DISPOSAL
 - 9.1 DECLARATION OF CONFORMITY
- 10 CONTACT
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

LEICKE
Bluetooth Speaker with Radio and MP3 Player
User Manual



Product number: EP18105/7

PACKAGE CONTENTS

Before attempting to use this device, please check the packaging and make sure the following items are contained in the package:

Number of Pieces	Name	Note
1	Bluetooth speaker	integrated battery
1	charging cable	micro USB
1	AUX cable	3.5 mm // 3.5 mm
1	user's manual	-

TECHNICAL DETAILS

TECHNICAL DETAILS	
Bluetooth version	V 4.0, up to 10 m range
Pairing mechanism	NFC or manual
Capacity of integrated battery	1500 mAh
Maximum output	2x5 Watts
Loudspeaker system	Stereo, two-way, 2 x 1.5" with Bass-Boost
Maximum playtime	5-6h, depending on volume and genre
Frequenzband	2402 MHz
Max. Sendeleistung	2,68 dBm
Supported audio formats	MP3, WMA files
Supported memory cards	TF / MicroSD up to 32 Gbyte
Power supply	USB 5V / 500 mA
Size (LxWxH)	68 x 68 x 181 mm
Weight	405 g

GETTING STARTED

Step 1: To switch the device on, press and hold the power button for 3 seconds. When switched on, the device will give acoustic feedback.

Step 2: After switching on, the device will be in Bluetooth mode ("Bluetooth mode has been on"). You can switch between Bluetooth, radio, line-in or MP3 player operation by pressing the mode button "M" shortly. If the speaker has been connected to a phone during prior usage, the connection will be automatically established in Bluetooth mode.

Step 3: Volume is controlled in all modes of operation by long pressing the forward (+) or backward (-) button for more than 2 seconds.

Step 4: Short press the forward and backward button to switch songs or radio channels depending on the mode the device is in.

Step 6: Switch the device off by pressing the power button for 3 seconds. The device will respond by playing a two-tone sequence.

Note: Before attempting to use the device for the first time, please charge the battery for at least two hours. Thereby the maximum life span will be ensured.

ESTABLISHING THE BLUETOOTH CONNECTION

Step 1: Switch the speaker on. Wait until you hear the acoustic response “Bluetooth mode has been on” from the device. During pairing, the status LED will blink fast.

Step 2: Open the settings menu of your device and look for the Bluetooth option. This must be activated. In the list of found devices you will now find “Bamboo BT008”. Connect. If a code is to be entered, please enter “0000”. If your phone is NFC-enabled and NFC as well as Bluetooth are activated, you can connect simply by holding your phone close to the connector side of the loudspeaker. If the connection is established successfully, the device will respond acoustically (“Paired”).

Step 3: Now the speaker is ready for use. Pairing will be saved and available when switching on the device the next time.

MP3 PLAYER

The MP3 function is activated by inserting a memory card and pressing the mode button until the speaker responds with “reader music mode”. To switch between songs short press the forward “+” or backward “-” buttons. Adjust volume by long pressing the “+” and “-” backward buttons.

RADIO

Before using the radio function, connect the charging cable to the speaker. The speaker must be switched off and the other end of the cable must not be connected to anything! It will work as antenna. Switch on the speaker and activate radio function pressing the mode button until you hear white noise.

Station scanning will be activated by pressing the mode and the Play button simultaneously. The scan is finished when the channels stop changing automatically. To change the channel short press + or – . Adjust volume by long pressing the + or – buttons.

To switch back to Bluetooth mode press the mode button.

HANDS-FREE FUNCTION

Receive and end incoming calls by short pressing the Play/Pause button. The integrated microphone will be activated automatically. The last dialed number can be called by a long press (more than 3 seconds) on the Play/Pause button.

CHARGING THE INTEGRATED BATTERY

When the battery is low (about 10 minutes run time left) the speaker alerts acoustically. In this case, charge the speaker as soon as possible. Use a 5V 1A

USB power supply to charge. Higher voltage may damage speaker and power supply. The red indicator light will stay on when the speaker is charging. Once it has finished charging, the indicator light will go out.

CONTROL ELEMENTS

TF-/Mini-SD-Kartenslot

TF/Mini SD card slot

Micro-USB-Ladeanschluss

Micro-USB charging interface

AUX-Anschluss

Aux port



Abspielen/Pause Anrufen/Auflegen

Play/pause/call/hang up

Lautstärke erhöhen/ Nächster Titel

Increase volume/next track

An-/Aus-Schalter

On/Off button

Modus-Umschalter

Mode button

Lautstärke senken/Nächster Titel

Decrease volume/previous track



TROUBLE SHOOTING

First check if the speaker is charged and switched on.

Problem	Possible Cause/Possible Solution
Playing via Bluetooth not possible	<ul style="list-style-type: none"> • Is pairing with your device successfully completed? • Try to connect again by switching off and on again. • Check if speaker is in radio mode. • Check if speaker is in range of your device. • Is volume high enough?
No playback from Micro SD / TF card	<ul style="list-style-type: none"> • Are there music files saved on the card? • Try going to the next song by short pressing the forward button. • Is the memory card intact?
Interrupted playback	<ul style="list-style-type: none"> • Is the speaker located within the maximum range? Try to place it in the immediate vicinity of your phone or tablet. • MP3 mode: Is the file corrupted? Try to switch to the next track.
No playback from radio	<ul style="list-style-type: none"> • Is the reception disturbed? Try switching the channel with backward or forward. • Is a USB or audio cable connected to the device to act as an antenna? The cable must not be connected to another device.

Our customer support will be glad to help you at info@leicke.com

SAFETY NOTES

For your own safety and for long enjoyment of our product, please follow the following safety instructions:

- Please use device as described in the manual.
- To protect your hearing and widen the life span of the speaker, maximum volume should not be adjusted over a longer period of time.
- Use 5V /1 A power supplies only. The connection of power supplies with higher voltage leads to irreparable damage.
- Please keep power adapter and speaker dry and use in dry environment only. Do not touch with wet hands.
- Keep away from damp, high temperature, dusty, erosive and oxidative environment.
- Keep safe from being hit or falling down.
- Turn off power when device is not in use for a longer time.

- Do not open cover and do not touch inner parts.

FCC INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE:

Radiation Exposure Statement:

1. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users should follow the specific instructions in the user's manual to comply with the FCC rules.
2. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

DISPOSAL

This device contains materials that must not be disposed of as household waste. Please check local laws concerning the applicable disposal regulations. Protect the environment by participating in recycling programs.

DECLARATION OF CONFORMITY

LEICKE GmbH herewith declares that the device complies with the RED 2014/53/EU und RoHS 2011/65/EU regulations. The declaration of conformity can be found at www.leicke.com. Go to the product you bought and look at downloads.

CONTACT


If you have any questions, please feel free to contact us.

PRODUCTION & WHOLESALE

LEICKE GmbH
Dohnanystr. 28
04103 Leipzig
Germany
Web: www.leicke.com
Mail: info@leicke.com



Documents / Resources

	<p>LEICKE Bluetooth Speaker with Radio and MP3 Player [pdf] User Manual Bluetooth Speaker with Radio and MP3 Player, EP18105</p>
---	--

References

- [E-Bikes, Smartwatch, Gesundheitsprodukte, Langlebige Netzteile, Notebook und Tablet-Taschen | LEICKE GmbH](#)