Lemokey X1 Tenkeyless Mechanical Keyboard





# Lemokey X1 Tenkeyless Mechanical Keyboard User Guide

Home » Lemokey » Lemokey X1 Tenkeyless Mechanical Keyboard User Guide 🖺



#### **Contents**

- 1 Lemokey X1 Tenkeyless Mechanical Keyboard
- 2 Quick Start Guide
- **3 X1 TENKEYLESS MECHANICAL KEYBOARD SPECIFICATIONS**
- **4 X1 TENKEYLESS MECHANICAL KEYBOARD OVERVIEW**
- **5 Key Description**
- 6 Documents / Resources
  - **6.1 References**
- **7 Related Posts**



Lemokey X1 Tenkeyless Mechanical Keyboard




#### IN THE BOX:

- Lemokey X1 Tenkeyless Mechanical Keyboard x 1
- Type-C Cable x 1
- Keycap-Switch Puller x 1
- Extra Keycaps Set x 1
- Manual x1

# **Quick Start Guide**

1. The keyboard's default layout is configured for Windows. To use it with MacOS, please remap it using VIA.

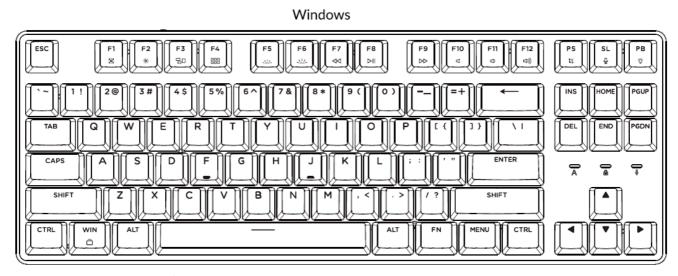

# 2. The VIA Key Remapping Software

Please visit use via.app to use the online VIA software to remap the keys. If the VIA cannot recognize your keyboard, please reach our support to get the instruction.



- The online VIA software can only run on the latest version of Chrome, Edge, and Opera browsers yet
- VIA only works when the keyboard is connected by wire to the computer.

#### 3. The Backlight

Press FN + Q to change the lighting effect



Press FN + TAB to turn the backlight on/off



# 4. Adjust The Backlight Brightness

Press FN + W to increase the backlight brightness




Press FN + S to decrease the backlight brightness




## 5. The Key Rollover

Press FN + N to switch between 6-key rollover and N-key rollover

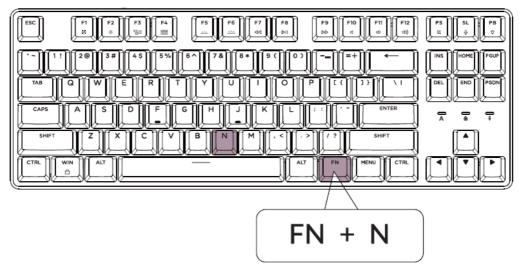

- 6-key rollover: the keyboard can detect up to 6 simultaneous key inputs.
- N-key rollover: the keyboard can detect all key inputs without limit to the number of key presses.
- The keyboard enables N-key rollover by default.

#### 6. Factory Reset

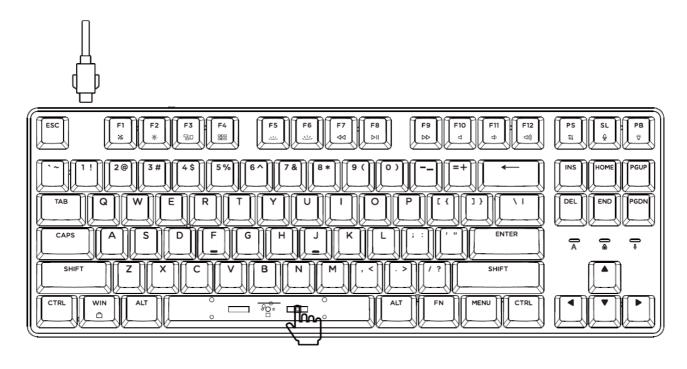

# Troubleshooting? Don't know what's going on with the keyboard?


- 1. Download the right firmware and QMK Toolbox from our website.
- 2. Unplug the power cable and remove the space bar keycap to find the reset button on the PCB.
- 3. Hold the reset key first, then plug in the power cable. Release the reset key, and the keyboard will now enter DFU mode.
- 4. Flash the firmware with the QMK Toolbox.
- 5. Factory reset the keyboard by pressing FN + J + Z (for 4 seconds). Step by step guide can be found on our website.

#### X1 TENKEYLESS MECHANICAL KEYBOARD SPECIFICATIONS

- · Layout TKL
- Switch type Mechanical
- Width 128.6 mm
- Length 356.7mm
- 16.5 mm (without keycaps)
- Front height 33.2 mm (with keycaps installed) 20 mm (without keycaps)
- Back height 37.4 mm (with keycaps installed)
- Keyboard feet height 1.3mm
- Angle 2/7 degree

### X1 TENKEYLESS MECHANICAL KEYBOARD OVERVIEW




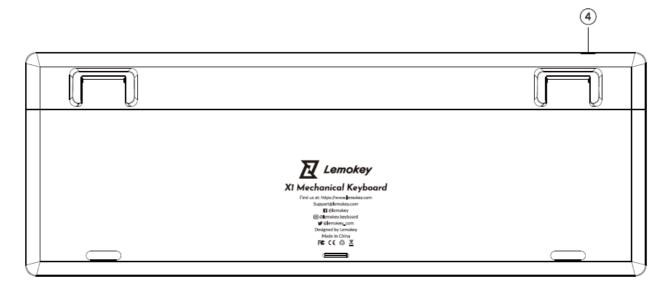

- 1. Caps Lock Indicator
- 2. Windows Lock Indicator
- 3. Scroll Lock Indicator
- 4. Type-C Port


# **DEFAULT KEY LAYOUT:**

LAYER 0: This is the default layer.

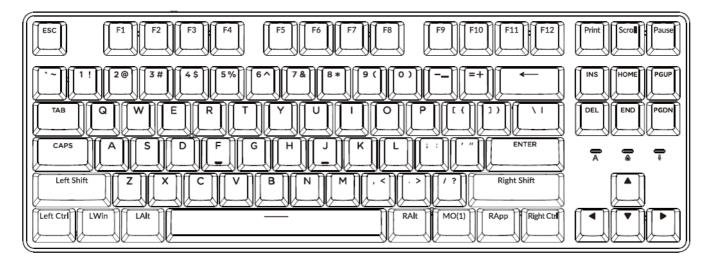


LWin=Left Windows LAlt=Left Alt RAlt=Right Alt

**LAYER 1**: This layer will be activated when you press the FN/M0(1) key.

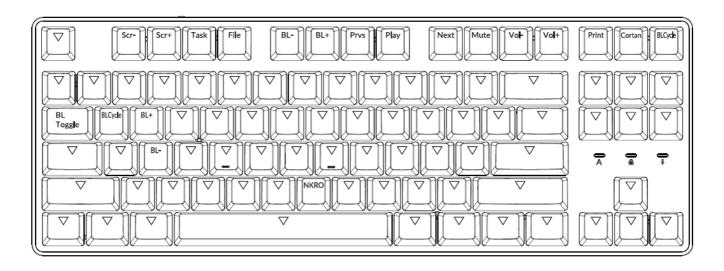

Layer 2/ Layer 3: This is a blank player.

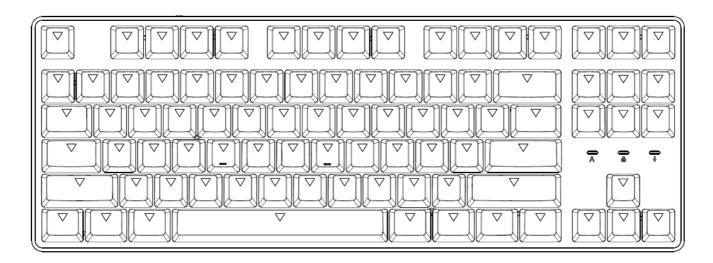

**Key Description** 

Ser-	Screen Brightness Decrease
Ser+	Screen Brightness Increase
Bright-	Backlight Decrease
Bright+	Backlight Increase
Prvs	Previous
Play	Play/Pause
Next	Next
Mute	Mute
Vol-	Volume Decrease
Vol+	Volume Increase
NKRO	N-key rollover

BL Toggle	Turn Backlight on/off
BL Cycle	Backlight Cycle
PS	Print Screen Sysrq
SL	Scroll Lock
РВ	Pause Break
M0(1)	layer 1 will be activated when holding this key
M0(2)	Layer 2 will be activated when holding this key
M0(3)	Layer 3 will be activated when holding this key
M0(4)	Layer 4 will be activated when holding this key
Reset	Reset the keyboard

## Third-party input tools are not compatible with the keyboard.

Due to compatibility, versions, brands and drivers of Windows/Android OS, functions of third-party input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

# Certain multimedia keys or function keys do not work.

Functions of certain multimedia keys may be disabled due to compatibility, versions, brands, and drivers of devices.

\*Multimedia keys: ※/※/ᇛ/嘂/シン/ヘヘ/▷॥/▷▷/ଘ/๗/呦

Function keys: F1/F2/F3/F4/F5/F6/F7/F8/F9/F10/F11/F12

**Safety Precaution:** 

- Keep the product, accessories and packaging parts out of the reach of children to prevent any accidents and choking hazards.
- Always keep the product dry to avoid corrosion.
- Do not expose the product to extreme temperatures below -10°C (S°F) or above 50°C (131 °F) to preserve the lifespan of the keyboard and battery.

Find us at:

https://www.lemokey.com Support@lemokey.com Facebook: @lemokey

Instagram: @lemokey.keyboard

**X** @lemokey\_com Designed by Lemokey Made in China.

## **Documents / Resources**

Lemokey X1.Tenkeyless Mechanical Keyboard Lemokey X1 Tenkeyless Mechanical Keyboard [pdf] User Guide

X1 Tenkeyless Mechanical Keyboard, X1, Tenkeyless Mechanical Keyboard, Mechanical Keyboard, Keyboard

## References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.