



## Lemokey X4 Mechanical Keyboard User Manual

[Home](#) » [Lemokey](#) » Lemokey X4 Mechanical Keyboard User Manual 



### Contents

- [1 IN THE BOX:](#)
- [2 Quick Start Guide](#)
- [3 X4 MECHANICAL KEYBOARD SPECIFICATIONS](#)
- [4 X4 MECHANICAL KEYBOARD OVERVIEW](#)
- [5 DEFAULT KEY LAYOUT:](#)
- [6 KEY DESCRIPTION](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)

### IN THE BOX:

Lemokey X4 Mechanical Keyboard x 1  
Type-C Cable x 1  
Keycap-Switch Puller x 1  
Extra Keycaps Set x 1  
Manual x 1

## Quick Start Guide

1. The keyboard's default layout is configured for Windows. To use it with MacOS, please remap it using VIA.



2. The VIA Key Remapping Software

Please visit [useviaapp](https://useviaapp.com) to use the online VIA software to remap the keys.

If the VIA cannot recognize your keyboard, please reach our support to get the instruction.

 


\* The online VIA software can only run on the latest version of Chrome, Edge, and Opera browsers yet.


\* VIA only works when the keyboard is connected by wire to the computer.

3. The Backlight

Press Fn + Q to change the lighting effect

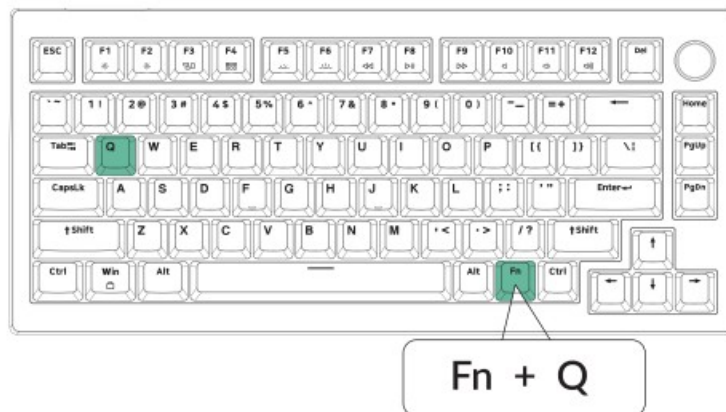


 Press Fn+Tab to turn the backlight on/off

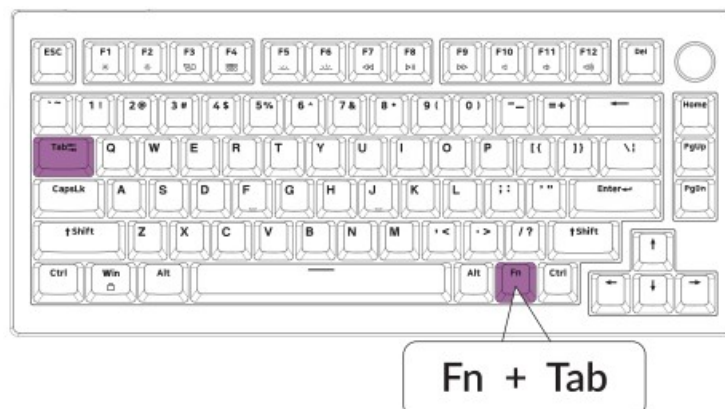


4. Adjust The Backlight Brightness

 Press Fn + W to increase the backlight brightness

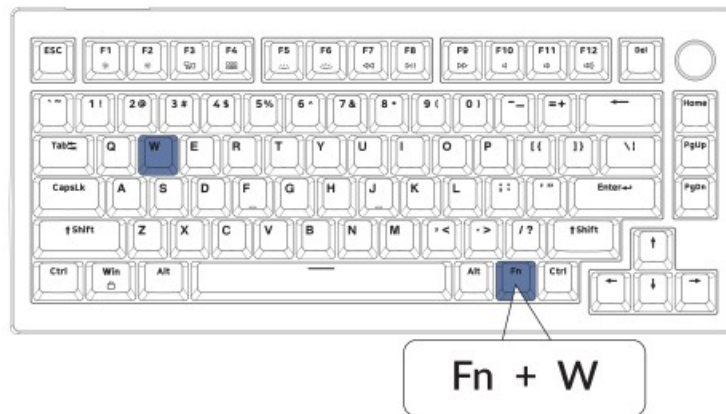


 Press Fn + S to decrease the backlight brightness

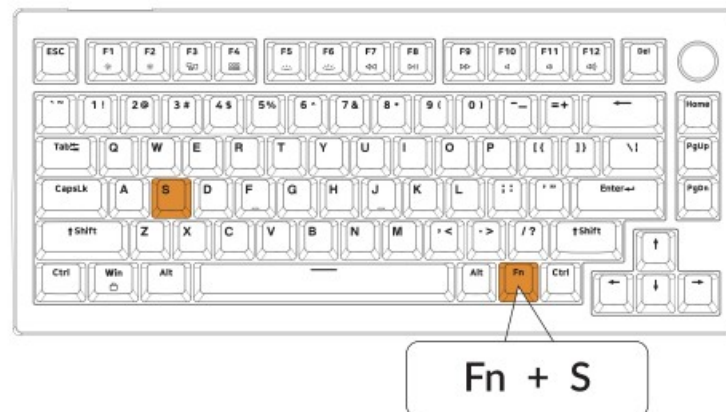

## 5. The Key Rollover

 Press Fn + N to switch between 6-key rollover and N-key rollover

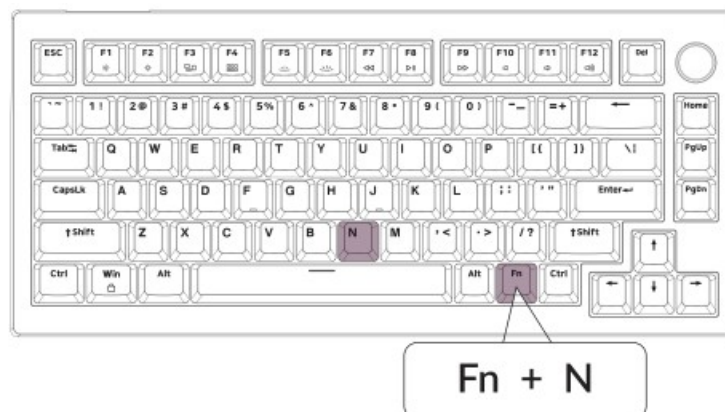


6-key rollover: the keyboard can detect up to 6 simultaneous key inputs.

N-key rollover: the keyboard can detect all key inputs without limit to the number of key presses.

\* The keyboard enables N-key rollover by default.

## 6. Factory Reset

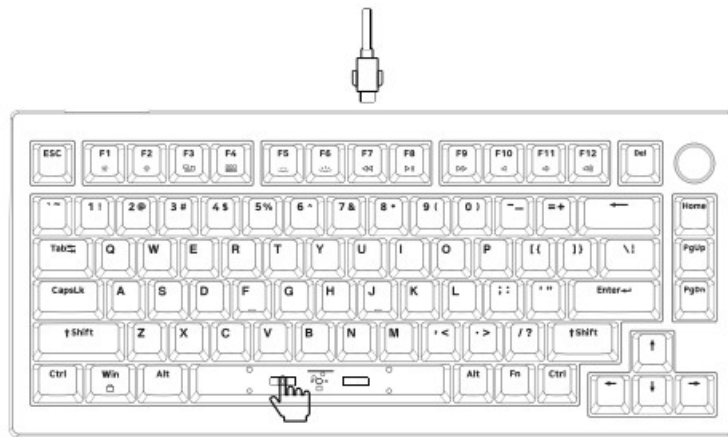 


Troubleshooting? Don't know what's going on with the keyboard?

- ① Download the right firmware and QMK Toolbox from our website.
  - ② Unplug the power cable and remove the space bar keycap to find the reset button on the PCB.
  - ③ Hold the reset key first, then plug in the power cable. Release the reset key, and the keyboard will now enter DFU mod.
  - ④ Flash the firmware with the QMK Toolbox.
  - ⑤ Factory reset the keyboard by pressing Fn + ) + Z for 4 seconds)
- \* Step by step guide can be found on our website.

## X4 MECHANICAL KEYBOARD SPECIFICATIONS

 Layout	75%
Switch type	Mechanical
Width	148 mm
Length	328.6 mm
Front height	19.7 mm (without keycaps) 291 mm (with keycaps installed)
Back height	30.1 mm (without keycaps) 409 mm (with keycaps installed)
Keyboard feet height	12 mm
Angle	4/8/10 degree

## X4 MECHANICAL KEYBOARD OVERVIEW

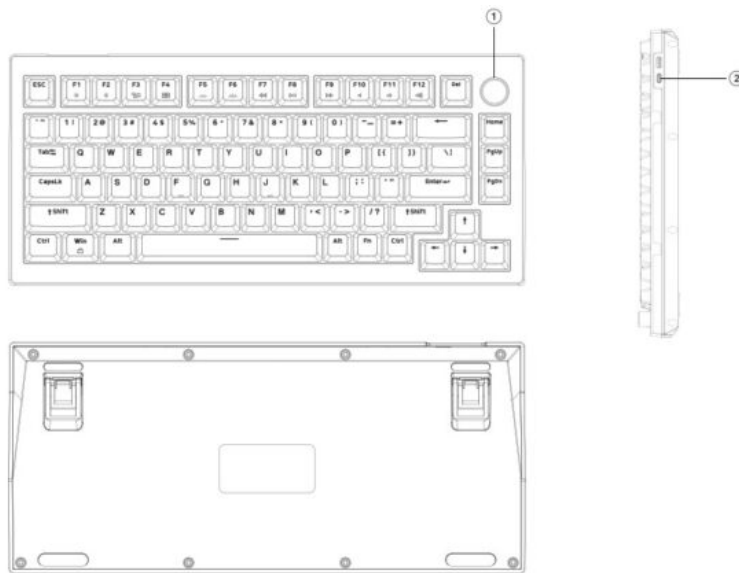

1. Knob
2. Type-C Port

## DEFAULT KEY LAYOUT:

LAYER 0: This is the default layer.




LWin=Left Windows LAlt=Left Alt RAlt=Right Alt RCtl=Right Ctrl

LAYER 1: This layer will be activated when you press the FN/MO(1) key.



 LAYER 2/LAYER 3: This is a blank layer.

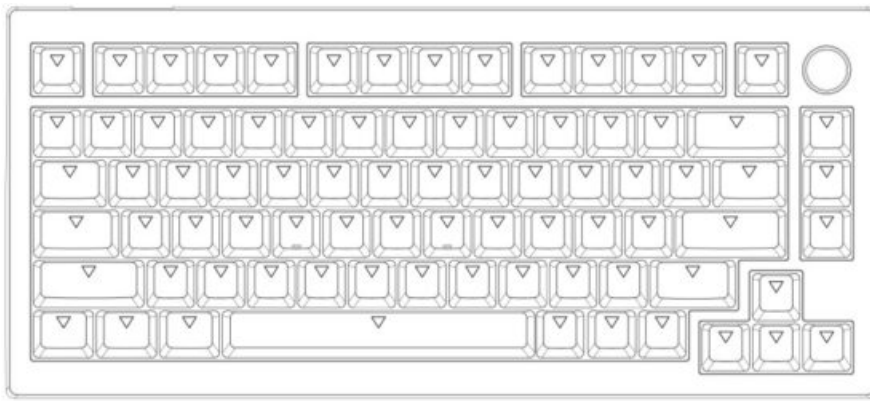

## KEY DESCRIPTION

Key Description	
Scr-	Screen Brightness Decrease:
Scr+	Screen Brightness Increase:
Bright-	Backlight Decrease
Bright+	Backlight Increase.
Prvs	Previous
Play	Play/Pause
Next	Next
Mute	Mute
Vol-	Volume Decrease
Vol+	Volume Increase
NKRO	Nekey rollover
BL Toggle	Turn Backlight on/off
BL Cycle	Backlight Cycle.
MO(1)	Layer 1 willbe activated when holding this key
MO(2)	Layer 2 willbe activated when holding this key
MO(3)	Layer 3 willbe activated when holding this key
MO(4)	Layer 4 willbe activated when holding this key
Reset	Reset the keyboard

### Third-party input tools are not compatible with the keyboard.

 
Due to compatibility, versions, brands and drivers of Windows/Android OS, functions of third-party input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

### Certain multimedia keys or function keys do not work.

Functions of certain multimedia keys may be disabled due to compatibility, versions, brands, and drivers of

devices.

\*Multimedia keys:



Function keys:



### Safety Precaution:

Keep the product, accessories and packaging parts out of the reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below -10°C (5°F) or above 50°C (131°F) to preserve the lifespan of the keyboard and battery.



Find us at:

<https://www.lemokey.com>

[Support@lemokey.com](mailto:Support@lemokey.com)

 @lemokey


 [@lemokey\\_keyboard](https://www.instagram.com/lemokey_keyboard)

 @lemokey\_com

Designed by Lemokey

Made in China

## Documents / Resources

	<a href="#">Lemokey X4 Mechanical Keyboard</a> [pdf] User Manual X4 Mechanical Keyboard, X4, Mechanical Keyboard, Keyboard
---	---

## References

- [User Manual](#)

[Manuals±](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.