



Lemokey X5 Mechanical Keyboard User Guide

[Home](#) » [Lemokey](#) » Lemokey X5 Mechanical Keyboard User Guide 



X5 Mechanical Keyboard

Contents

- 1 X5 Mechanical Keyboard
- 2 Quick Start Guide
- 3 X5 MECHANICAL KEYBOARD SPECIFICATIONS
- 4 X5 MECHANICAL KEYBOARD OVERVIEW
- 5 DEFAULT KEY LAYOUT:
- 6 KEY DESCRIPTION
- 7 Documents / Resources
 - 7.1 References

 
X5 Mechanical Keyboard

IN THE BOX:

Lemokey X5 Mechanical Keyboard x 1
Type-C Cable x 1
Keycap-Switch Puller x 1
Extra Keycaps Set x 1
Manual x 1

Quick Start Guide

1. The keyboard's default layout is configured for Windows. To use it with MacOS, please remap it using VIA.

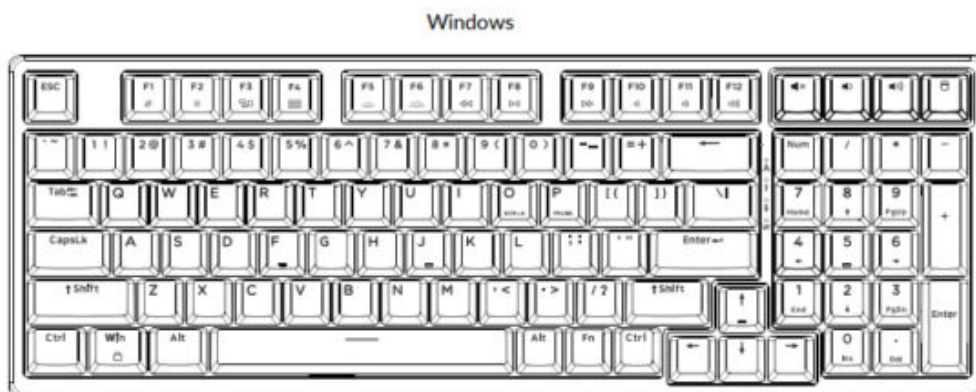

2. The VIA Key Remapping Software

Please visit usevia.app to use the online

VIA software to remap the keys.

If the VIA cannot recognize your keyboard, please reach our support to get the instruction.



*The online VIA software can only run on the latest version of Chrome, Edge, and Opera browsers yet.

 
*VIA only works when the keyboard is connected by wire to the computer.

3. The Backlight

Press Fn + Q to change the lighting effect




Press Fn+ Tab to turn the backlight on/off

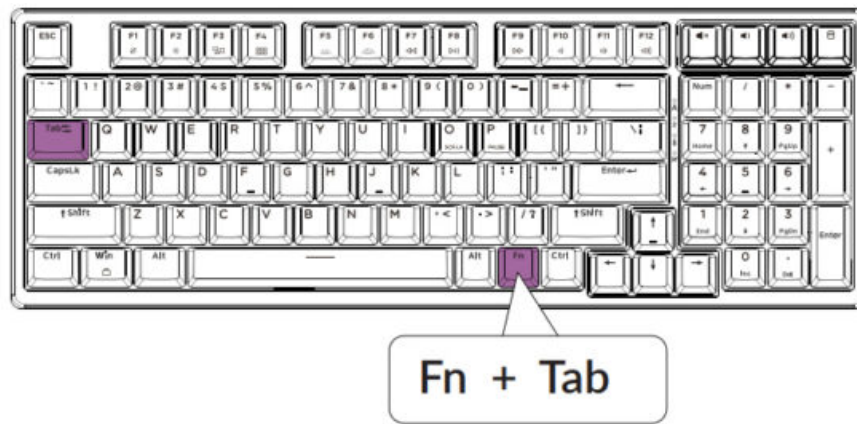


4. Adjust The Backlight Brightness

 Press Fn + W to increase the backlight brightness

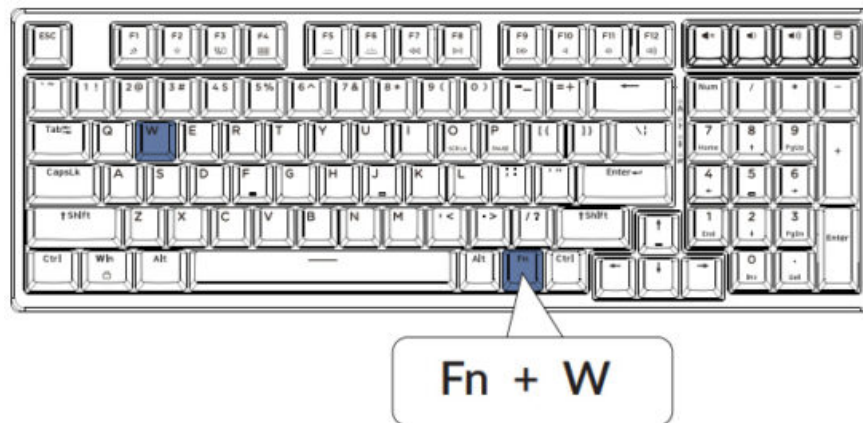


 Press Fn + S to decrease the backlight brightness

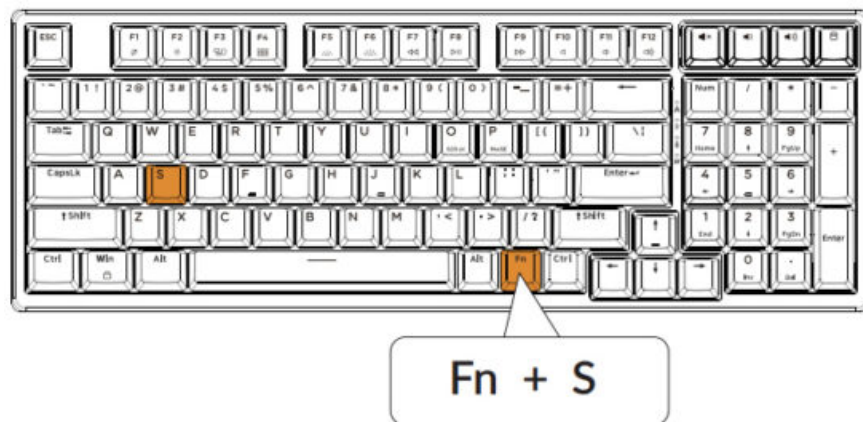

5. The Key Rollover

 Press Fn + N to switch 6-key rollover/N-key rollover

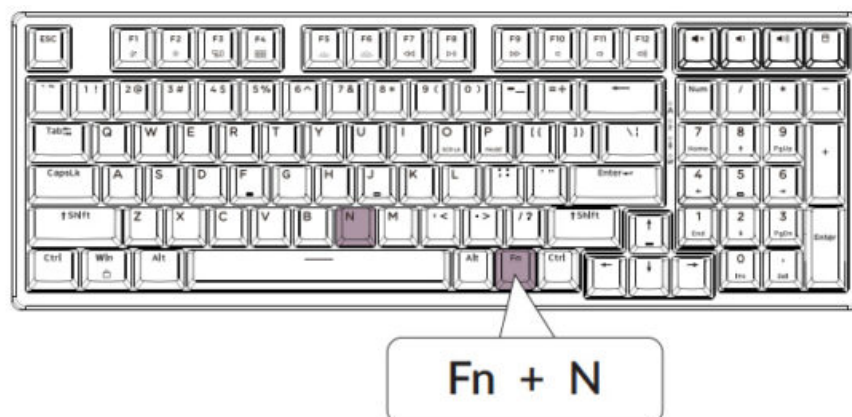

6-key rollover: the keyboard can detect up to 6 simultaneous key inputs.

N-key rollover: the keyboard can detect all key inputs without limit to the number of key presses.

*The keyboard turns on the N-key rollover by default.

6. Factory Reset



Troubleshooting? Don't know what's going on with the keyboard?

1. Download the right firmware and QMK Toolbox from our website.
2. Unplug the power cable and remove the space bar keycap to find the reset button on the PCB.
3. Hold the reset key first, then plug in the power cable. Release the reset key, and the keyboard will now enter DFU mode.
4. Flash the firmware with the QMK Toolbox.
5. Factory reset the keyboard by pressing Fn + J + Z (for 4 seconds).

*Step by step guide can be found on our website.

X5 MECHANICAL KEYBOARD SPECIFICATIONS

Specifications

Layout	96%
Switch type	Mechanical
Width	133.7 mm
Length	380.5 mm
Front height	17.4 mm (without keycaps) 26.6 mm (with keycaps installed)
Back height	27.4 mm (without keycaps) 38.6 mm (with keycaps installed)
Keyboard feet height	2.2 mm
Angle	4.5 / 7 / 9 degree

X5 MECHANICAL KEYBOARD OVERVIEW



1. Caps Lock Indicator
2. Num Lock Indicator
3. Scroll Lock Indicator
4. Windows Lock Indicator
5. Type-C Port

DEFAULT KEY LAYOUT:

LAYER 0: This is the default layer.



LWin=Left Windows LAlt=Left Alt RAlt=Right Alt RCtrl=Right Ctrl

LAYER 1: This layer will be activated when you press the Fn/MO(1) key.



LAYER 2 / LAYER 3: This is a blank layer.



KEY DESCRIPTION

Scr-	Screen Brightness Decrease
Scr+	Screen Brightness Increase
Task	Task View
File	File Explorer
BL-	Backlight Decrease
BL+	Backlight Increase
Prvs	Previous
Play	Play/Pause
Next	Next
Mute	Mute
Vol-	Volume Decrease
Vol+	Volume Increase
NKRO	N-key rollover
BL Toggle	Turn Backlight on/off
BL Cycle	Backlight Cycle
MO(1)	Layer 1 will be activated when holding this key
MO(2)	Layer 2 will be activated when holding this key
MO(3)	Layer 3 will be activated when holding this key
MO(4)	Layer 4 will be activated when holding this key

Third-party input tools are not compatible with the keyboard.

 
Due to compatibility, versions, brands and drivers of Windows/Android OS, functions of third-party input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

Certain function keys or multimedia keys do not work.

Functions of certain multimedia keys may be disabled due to compatibility, versions, brands, and drivers of devices.

Function keys: F1 / F2 / F3 / F4 / F5 / F6 / F7 / F8 / F9 / F10 / F11 / F12

*Multimedia keys:



Safety Precaution:

Keep the product, accessories and packaging parts out of the reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below -10°C (5°F) or above 50°C (131°F) to preserve the lifespan of the keyboard and battery.



Find us at:

<https://www.lemokey.com>

Support@lemokey.com



@lemokey



@lemokey.keyboard




@lemokey_com

Designed by Lemokey

Made in China

Documents / Resources

	Lemokey X5 Mechanical Keyboard [pdf] User Guide X5 Mechanical Keyboard, X5, Mechanical Keyboard, Keyboard
---	--

References

- [Lemokey | Designed for mechanical keyboards, switches, and more](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.