

Lemokey
X6
Mechanical
Keyboard



Lemokey X6 Mechanical Keyboard User Guide

[Home](#) » [Lemokey](#) » Lemokey X6 Mechanical Keyboard User Guide 

Contents

- [1 Lemokey X6 Mechanical Keyboard](#)
- [2 IN THE BOX](#)
- [3 Quick Start Guide](#)
- [4 X6 MECHANICAL KEYBOARD SPECIFICATIONS](#)
- [5 X6 MECHANICAL KEYBOARD OVERVIEW](#)
- [6 DEFAULT KEY LAYOUT](#)
- [7 KEY DESCRIPTION](#)
- [8 Safety Precaution](#)
- [9 Customer Service](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)



Lemokey X6 Mechanical Keyboard



 
IN THE BOX

- Lemokey X6 Mechanical Keyboard x 1
- Type-C Cable x 1
- Keycap-Switch Puller x 1
- Extra Keycaps Set x 1
- Manual x 1

Quick Start Guide

1. The keyboard's default layout is configured for Windows. To use it with MacOS, please remap it using VIA.

• Windows

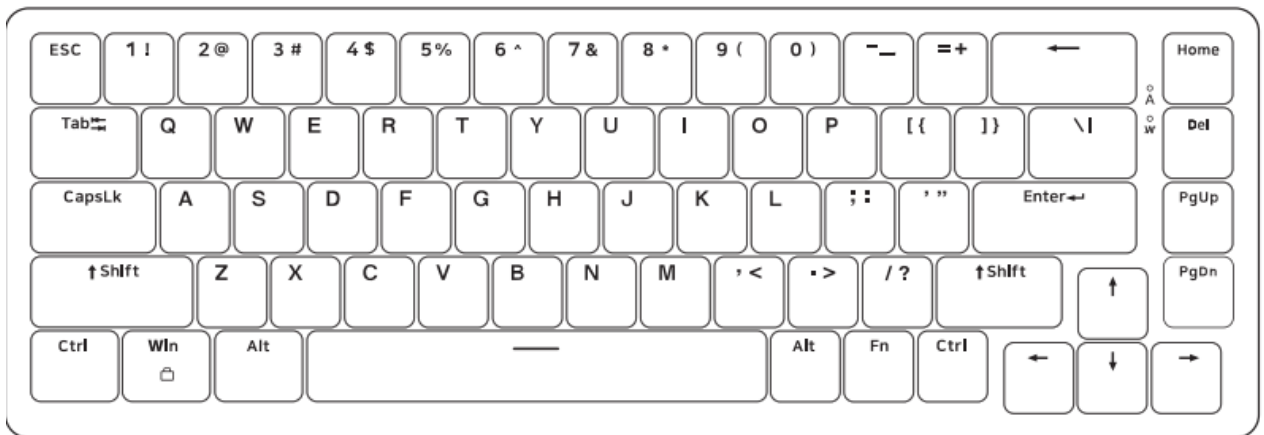

2. The VIA Key Remapping Software

- Please visit usevia.app to use the online VIA software to remap the keys.
- If the VIA cannot recognize your keyboard, please reach our support to get the instruction.
- The online VIA software can only run on the latest version of Chrome, Edge, and Opera browsers.
- VIA only works when the keyboard is connected by wire to the computer.



3. Function Key

• Function Keys

F1 / F2 / F3 / F4 / F5 / F6 / F7 / F8 / F9 / F10 / F11 / F12

 
- In order to get the Function Key, you need to press Fn and




the key.

4. The Backlight

- Press Fn + Q to change the lighting effect

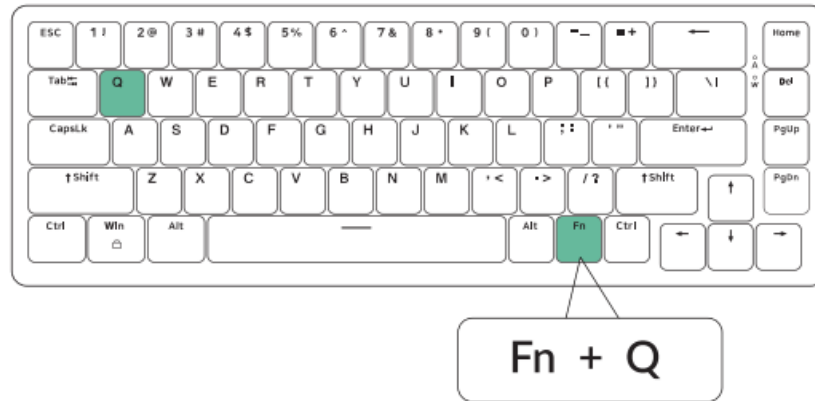


 - Press the Fn+ Tab to turn the backlight on/off

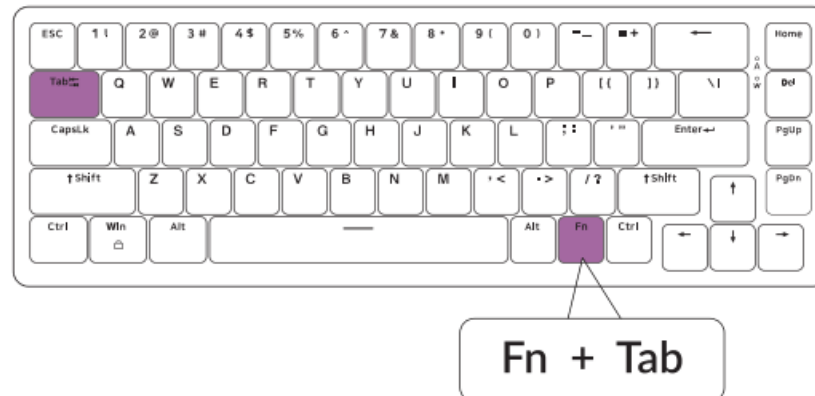


5. Adjust The Backlight Brightness

 - Press Fn + W to increase the backlight brightness

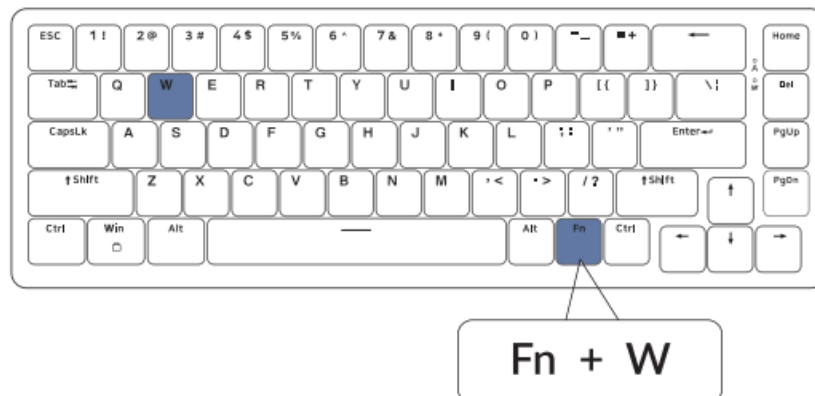


 - Press Fn + S to decrease the backlight brightness

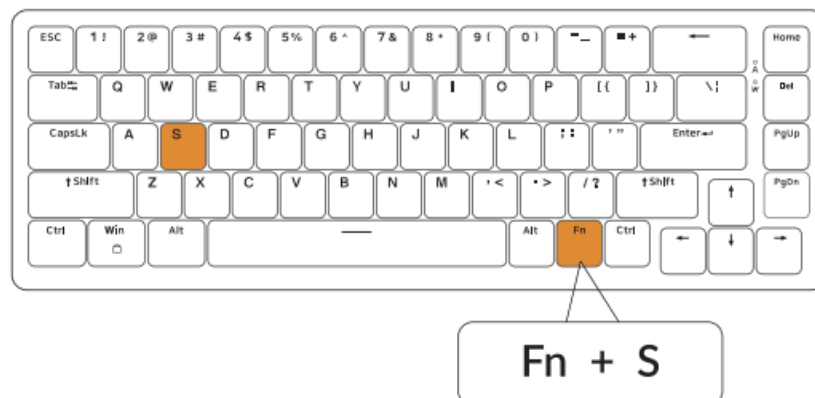


6. The Key Rollover

 - Press Fn + N to switch 6-key rollover/N-key rollover

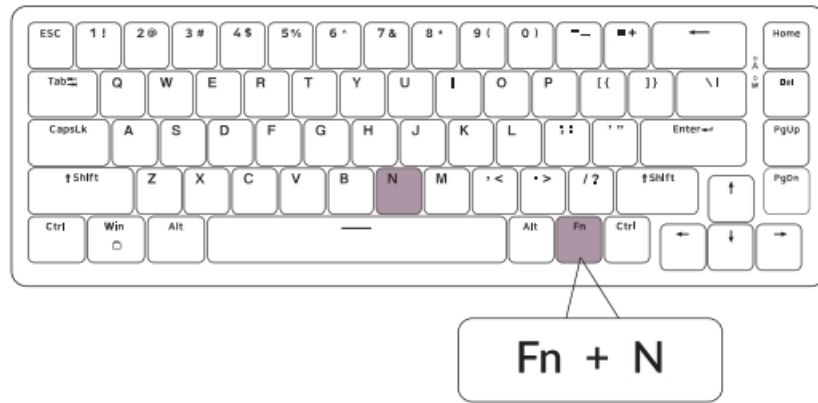

- **6-key rollover:** the keyboard can detect up to 6 simultaneous key inputs.
- **N-key rollover:** the keyboard can detect all key inputs without limit to the number of key presses.
- The keyboard turns on the N-key rollover by default.

 7. Factory Reset

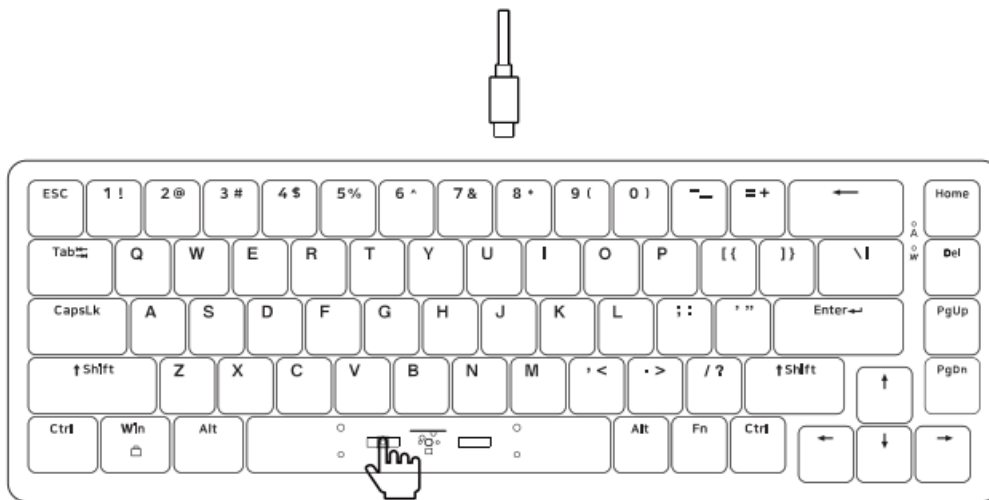

Troubleshooting? Don't know what's going on with the keyboard?

1. Download the right firmware and QMK Toolbox from our website.
2. Unplug the power cable and remove the space bar keycap to find the reset button on the PCB.
3. Hold the reset key first, then plug in the power cable. Release the reset key, and the keyboard will now enter DFU mode.
4. Flash the firmware with the QMK Toolbox.
5. Factory reset the keyboard by pressing Fn + J + Z (for 4 seconds).
 - Step by step guide can be found on our website.

X6 MECHANICAL KEYBOARD SPECIFICATIONS

 
Specifications

- **Layout** 65%
- **Switch** type Mechanical
- **Width** 110.7 mm
- **Length** 321.8 mm
- **Front height** 18.1 mm (without keycaps)

- 27.6 mm (with keycaps installed)
- **Back height** 27.8 mm (without keycaps)
 - 38.4 mm (with keycaps installed)
- **Keyboard feet height** 2.2 mm
- **Angle** 5 / 8 / 11 degree


X6 MECHANICAL KEYBOARD OVERVIEW

1. Caps Lock Indicator
2. Windows Lock Indicator
3. Type-C Port

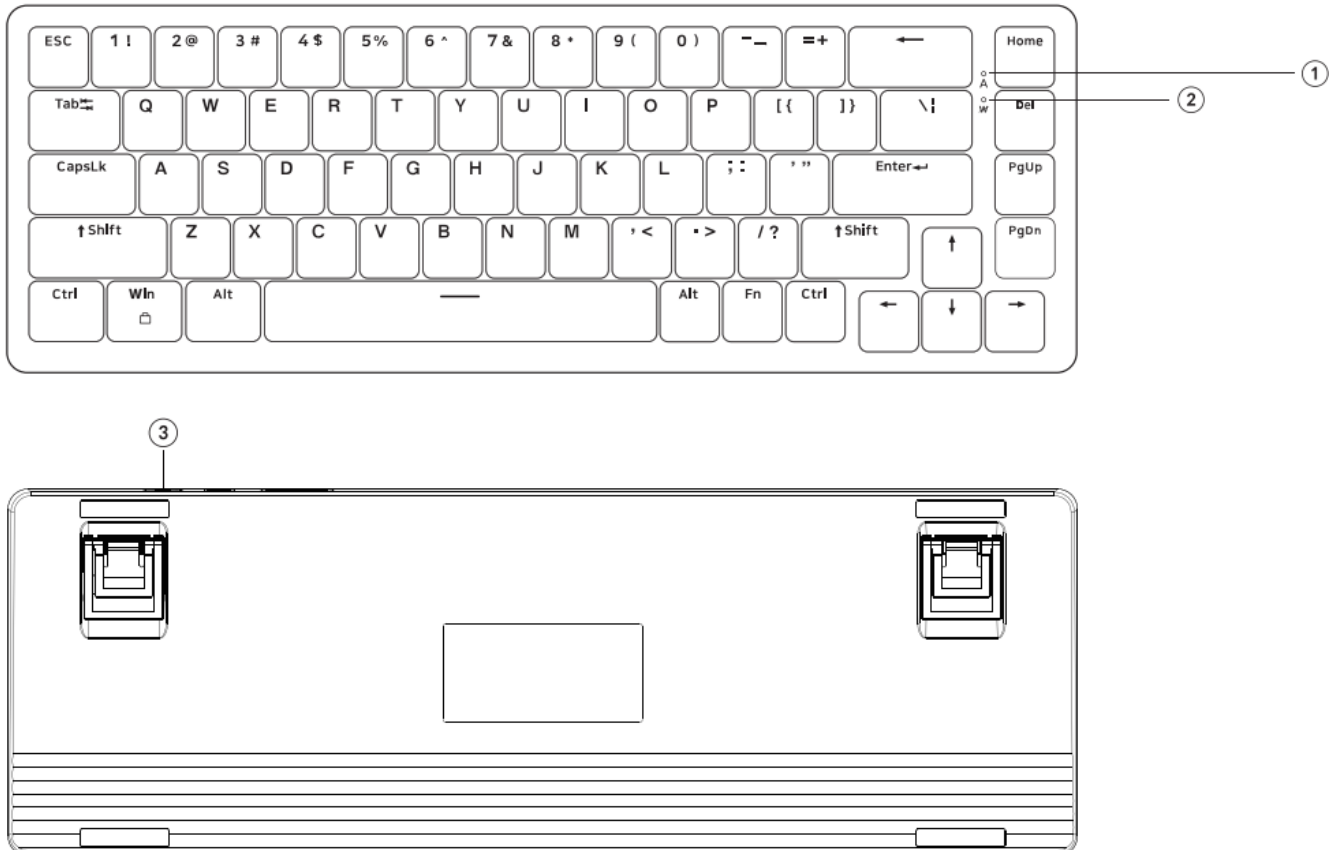


DEFAULT KEY LAYOUT

 
LAYER 0: This is the default layer.

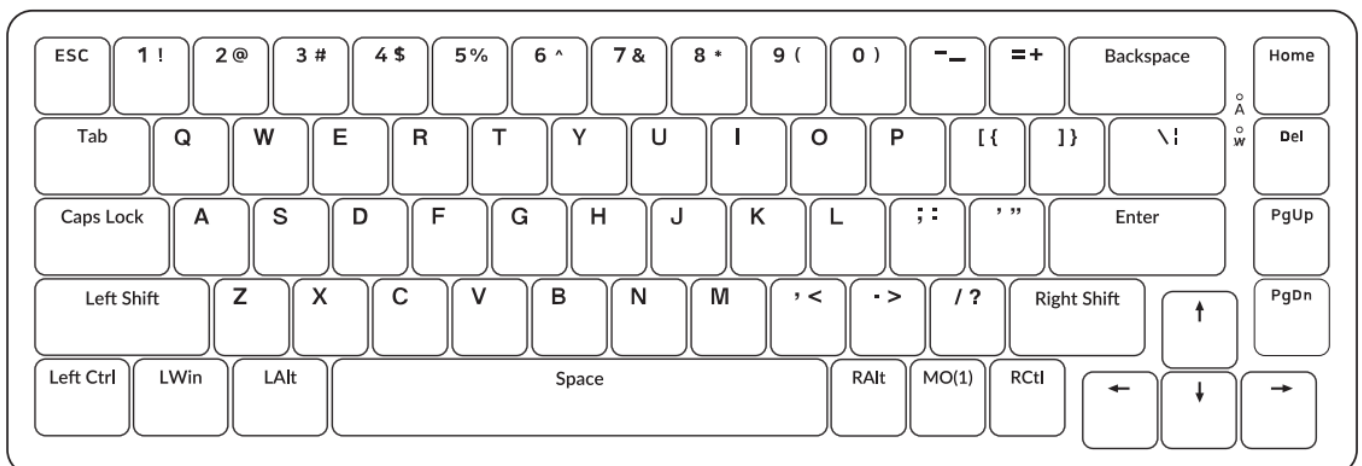

 - LWin=Left Windows LAlt=Left Alt RAlt=Right Alt RCtrl=Right Ctrl
- **LAYER 1:** This layer will be activated when you press the Fn/MO(1) key

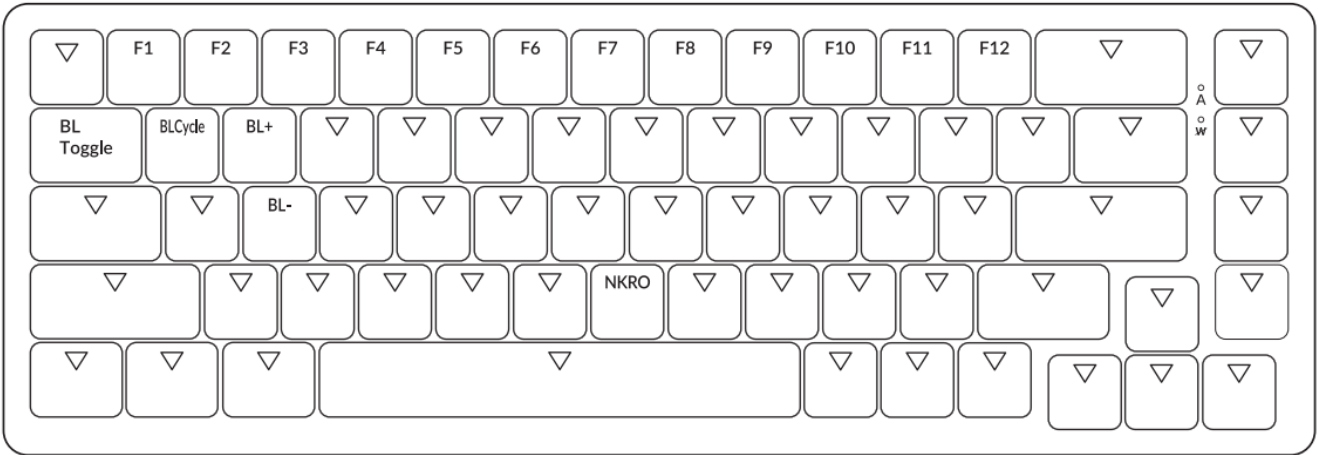

 - **LAYER 2 / LAYER 3:** This is a blank layer.

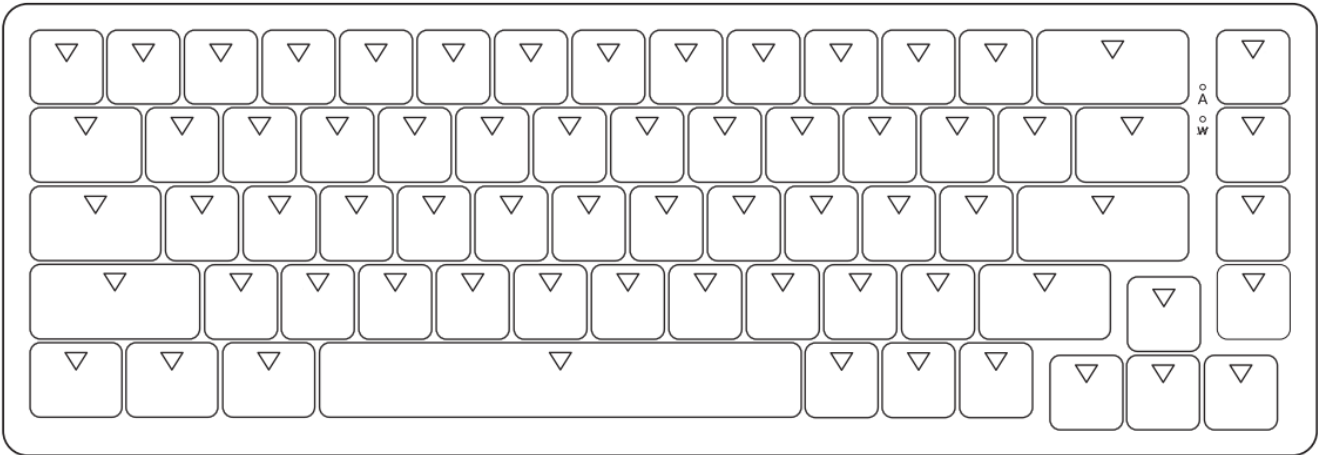

KEY DESCRIPTION

BL-	Backlight Decrease
BL+	Backlight Increase
NKRO	N-key rollover
BL Toggle	Turn Backlight on/off
BL Cycle	Backlight Cycle
MO(1)	Layer 1 will be activated when holding this key
MO(2)	Layer 2 will be activated when holding this key
MO(3)	Layer 3 will be activated when holding this key
MO(4)	Layer 4 will be activated when holding this key

- Third-party input tools are not compatible with the keyboard.
- Due to compatibility, versions, brands, and drivers of Windows/Android OS, functions of third-party input tools may be affected while using the keyboard.
- Please make sure your operating system and drivers are up to date.


Safety Precaution

- Keep the product, accessories, and packaging parts out of the reach of children to prevent any accidents and choking hazards.
- Always keep the product dry to avoid corrosion.
- Do not expose the product to extreme temperatures below -10°C (5°F) or above 50°C (131°F) to preserve the lifespan of the keyboard and battery.

Customer Service

- Find us at: <https://www.lemokey.com>
- Support@lemokey.com
- If @lemokey
- @lemokey.keyboard
- X @lemokey_com
- Designed by Lemokey
- Made in China

Documents / Resources

	<p>Lemokey X6 Mechanical Keyboard [pdf] User Guide X6, X6 Mechanical Keyboard, X6, Mechanical Keyboard, Keyboard</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.