

Lenco

**410 Turntable With 4
Speakers Built In And
Bluetooth Reception**



Lenco 410 Turntable With 4 Speakers Built In And Bluetooth Reception User Manual

[Home](#) » [Lenco](#) » Lenco 410 Turntable With 4 Speakers Built In And Bluetooth Reception User Manual 

Contents

- [1 Lenco 410 Turntable With 4 Speakers Built In And Bluetooth Reception](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions](#)
- [5 PRECAUTIONS BEFORE USE](#)
- [6 Product Description](#)
- [7 Included Items](#)
- [8 Rotating the Platter](#)
- [9 Main Power Connection](#)
- [10 Bluetooth Operation](#)
- [11 Care](#)
- [12 Replacing the Belt](#)
- [13 Troubleshooting](#)
- [14 Specifications](#)
- [15 Documents / Resources](#)
 - [15.1 References](#)
- [16 Related Posts](#)

Lenco

Lenco 410 Turntable With 4 Speakers Built In And Bluetooth Reception



Product Information

Specifications

- **Model:** LS-410
- **Version:** 6.0
- **Features:** Turntable with 4 built-in speakers and Bluetooth reception

Product Usage Instructions

Precautions Before Use

1. Do not cover or block any ventilation openings.
2. Avoid using the device in warm wet rooms to prevent condensation.
3. If you notice smoke, heat build-up, or any unexpected phenomena, disconnect the power immediately.
4. Operate the device on the specified power source as labeled.
5. Avoid contact with animals to prevent damage to power cords.
6. Clean the device with a soft dry cloth; avoid solvents or petrol-based fluids.
7. Avoid interrupting connections during formatting or file transfers to prevent data corruption.
8. If using USB playback, directly plug the USB memory stick into the unit without an extension cable.
9. Ensure the unit is stable to prevent damage from vibrations or shocks.
10. Never remove the device's casing or place it on other electrical equipment.
11. Avoid allowing children access to plastic bags.
12. Use only manufacturer-specified attachments and accessories.

13. Refer servicing to qualified personnel.

Frequently Asked Questions

Q: Can this device be used in commercial or industrial settings?

A: No, this product is intended for non-professional use only and not for commercial or industrial use.

Q: How should I clean the device?

A: Use a soft dry cloth for general cleaning. For severe stains, a damp cloth with dilute detergent can be used. Avoid solvents or petrol-based fluids.

Q: What should I do if I notice smoke or heat build-up?

A: Immediately disconnect the plug from the main power socket and contact qualified service personnel for assistance.

CAUTION: Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

PRECAUTIONS BEFORE USE

KEEP THESE INSTRUCTIONS IN MIND:

1. Do not cover or block any ventilation openings. When placing the device on a shelf, leave 5 cm (2") free space around the whole device.
2. Install in accordance with the supplied user manual.
3. Keep the device away from heat sources such as radiators, heaters, stoves, candles, and other heat-generating products or naked flame. The device can only be used in moderate climates. Extremely cold or warm environments should be avoided. Working temperature between 0° and 35°C.
4. Avoid using the device near strong magnetic fields.
5. Electrostatic discharge can disturb normal usage of this device. If so, simply reset and restart the device following the instruction manual. During file transmission, please handle it with care and operate in a static-free environment.
6. **Warning!** Never insert an object into the product through the vents or openings. High voltage flows through the product and inserting an object can cause electric shock and/or short circuit internal parts. For the same reason, do not spill water or liquid on the product.
7. Do not use in wet or moist areas such as bathrooms, steamy kitchens, or near swimming pools.
8. The device shall not be exposed to dripping or splashing and make sure that no objects filled with liquids, such as vases, are placed on or near the apparatus.
9. Do not use this device when condensation may occur. When the unit is used in a warm wet room with damp, water droplets or condensation may occur inside the unit and the unit may not function properly; let the unit stand in power OFF for 1 or 2 hours before turning on the power: the unit should be dry before getting any power.
10. Although this device is manufactured with the utmost care and checked several times before leaving the

factory, it is still possible that problems may occur, as with all electrical appliances. If you notice smoke, an excessive build-up of heat, or any other


11. unexpected phenomena, you should disconnect the plug from the main power socket immediately.
12. This device must operate on a power source as specified on the specification label. If you are not sure of the type of power supply used in your home, consult your dealer or local power company.
13. Keep away from animals. Some animals enjoy biting on power cords.
 - To clean the device, use a soft dry cloth. Do not use solvents or petrol-based fluids.
 - To remove severe stains, you may use a damp cloth with dilute detergent.
14. The supplier is not responsible for damage or lost data caused by malfunction, misuse, modification of the device, or battery replacement.
15. Do not interrupt the connection when the device is formatting or transferring files. Otherwise, data may be corrupted or lost.
16. If the unit has a USB playback function, the USB memory stick should be plugged into the unit directly. Don't use a USB extension cable because it can cause interference and failing data.
17. The rating label has been marked on the bottom or back panel of the device.
18. This device is not intended for use by people (including children) with physical, sensory, or mental disabilities, or a lack of experience and knowledge unless they're under supervision or have received instructions about the correct use of the device by the person who is responsible for their safety.
19. This product is intended for nonprofessional use only and not for commercial or industrial use.
20. Make sure the unit is adjusted to a stable position. Damage caused by using this product in an unstable position vibrations or shocks or by failure to follow any other warning or precaution contained within this user manual will not be covered by warranty.
21. Never remove the casing of this device.
22. Never place this device on other electrical equipment.
23. Do not allow children access to plastic bags.
24. Only use attachments/accessories specified by the manufacturer.
25. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as the power supply cord or the plug, when the liquid has been spilled or objects have fallen into the device when the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
26. Long exposure to loud sounds from personal music players may lead to temporary or permanent hearing loss.
27. If the product is delivered with power cable or AC power adaptor:
 - If any trouble occurs, disconnect the AC power cord and refer servicing to qualified personnel.
 - Don't step on or pinch the power adaptor. Be very careful, particularly near the plugs and the cable's exit point. Do not place heavy items on the power adaptor, which may damage it. Keep the entire device out of children's reach! When playing with the power cable, they can seriously injure themselves.
 - Unplug this device during lightning storms or when unused for a long period.
 - The socket outlet must be installed near the equipment and must be easily accessible.
 - Do not overload AC outlets or extension cords. Overloading can cause fire or electric shock.
 - Devices with class 1 construction should be connected to a main socket outlet with a protective earthed connection.
 - Devices with class 2 construction do not require an earthed connection.
 - Always hold the plug when pulling it out of the main supply socket. Do not pull the power cord. This can cause a short circuit.

- Do not use a damaged power cord or plug or a loose outlet. Doing so may result in fire or electric shock.
28. If the product contains or is delivered with a remote control containing coin/cell batteries:
- **Warning:** Do not ingest battery, Chemical Burn Hazard” or equivalent warning.
 - [The remote control supplied with] This product contains a coin/button cell battery. If the battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
 - Keep new and used batteries away from children.
 - If the battery compartment does not close securely, stop using the product and keep it away from children.
 - If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
29. **Caution about the use of Batteries:** Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.
- A battery cannot be subjected to high or low extreme temperatures, or low air pressure at high altitudes during use, storage, or transportation.
 - Replacement of a battery with an incorrect type can result in an explosion or the leakage of flammable liquid or gas.
 - Disposal of a battery into a fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
 - Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or that leakage of flammable liquid or gas.
 - A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
 - Attention should be drawn to the environmental aspects of battery disposal.

INSTALLATION

- Unpack all parts and remove protective material.
- Do not connect the unit to the mains before checking the mains voltage and before all other connections have been made.
- Those instructions are related only to products using power cables or AC power adaptors.

Product Description

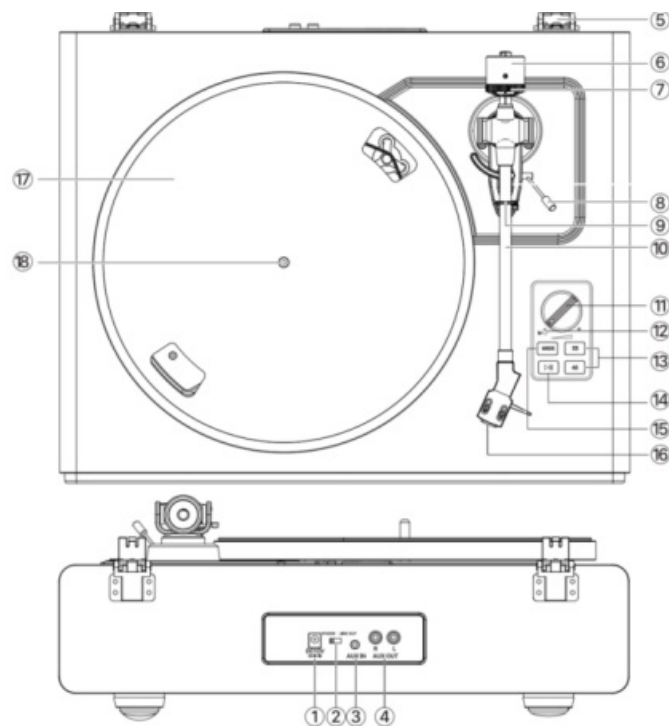

1. DC INPUT Jack
2. Phono & Line Out Switch
3. AUX IN Jack
4. Phono & Aux Out Jacks
5. Lid Hinge
6. Counterweight
7. Tracking Force Dial
8. Tonearm Lift Lever
9. Tonearm Clip
10. Tonearm
11. Volume Control
12. Indicator
13. Speed Selector Button
14. Play/Stop Button
15. ON/OFF/Function Button
16. Stylus Cartridge
17. Turntable platter
18. Turntable spindle

Included Items


Before installing the turntable, check the package contents to ensure all parts below are included and free of visible damage. Please retain the original packaging materials for exchange or return purposes.

1. Turntable Unit
2. Power Adapter
3. Turntable Lid
4. Slip Mat

5. Platter with Belt
6. Counterweight
7. Cartridge Alignment Protractor
8. 45 RPM Adapter
9. Instruction Manual


Installing the turntable

- Mount the turntable on a level surface.
- To avoid the effects of vibrations and acoustic pressure, do not mount the turntable next to items such as speakers.
- The turntable may pick up radio static if placed next to a radio.
- Therefore, try to keep the turntable away from radios.
- If the turntable is near equipment (cell phone, etc.) that emits strong radio waves, noise may occur.

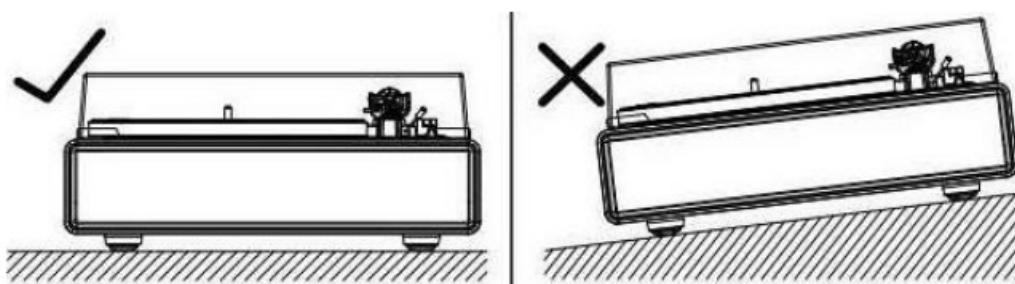

Installing the Lid

- Insert the hinge pockets of the lid onto the hinges of the turntable.

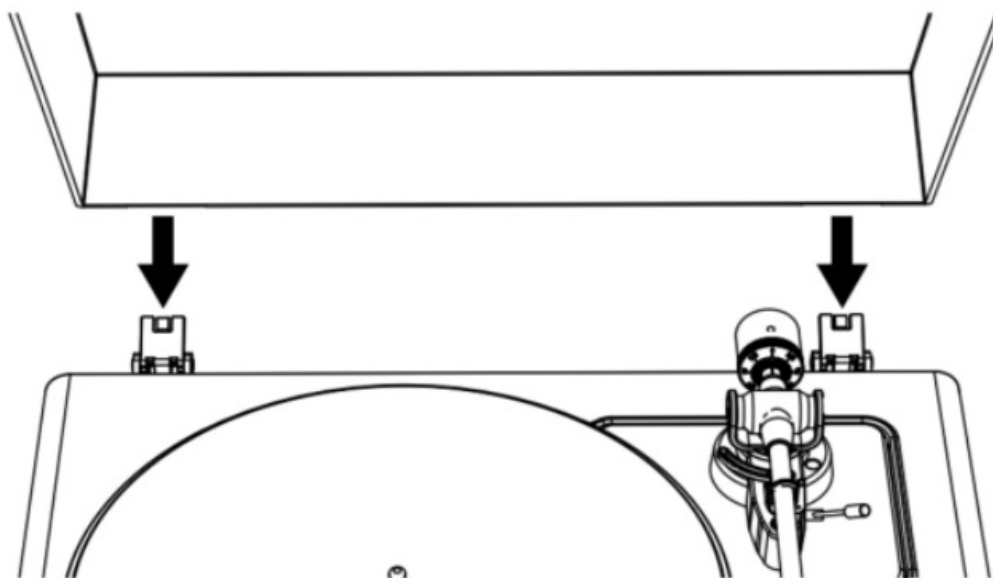


Turntable Platter and Belt Setup


1. Turn the platter over and check the belt position. Make sure that the drive belt is looped in the middle of the circle. The drive belt located too high or too low in this circle may cause the drive belt to fall off or the speed to be unstable.
2. Set the platter on the spindle.
 - Make sure the platter is fully seated on the spindle.




3. Place the belt on the motor pulley.

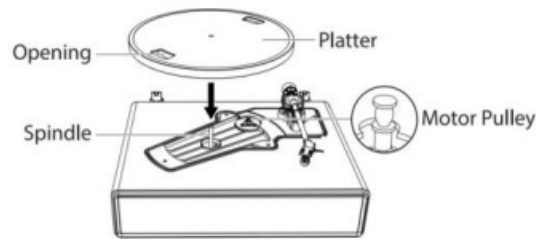

- Align one of the platter openings with the motor pulley, and while pulling both ends of the red ribbon that comes attached to the belt, place the belt on the motor pulley, as per the diagram. When doing this, be careful not to twist the belt.

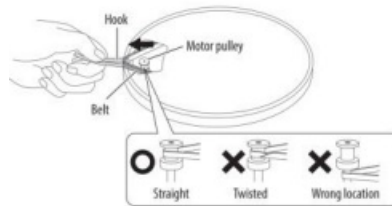


4. Remove the red ribbon from the belt.

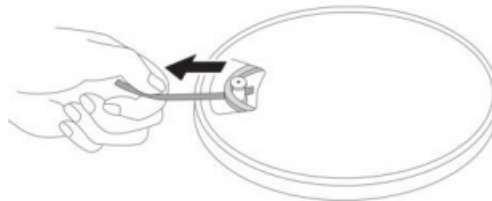


Rotating the Platter

1. Using your hands, slowly rotate the platter ten times in a clockwise direction (Figure 1).
2. This step is for resetting the auto mechanism, getting rid of any twists in the belt, and making sure the belt rides smoothly along the drive rim on the underside of the platter.
3. Place the slip mat on top of the platter. Make sure the logo on the mat is facing up (Figure 2).

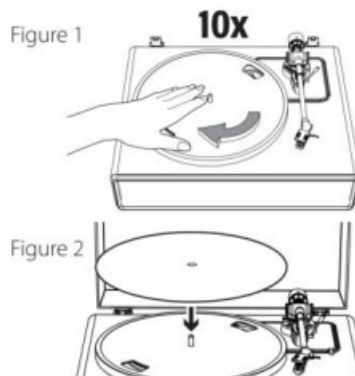


Cartridge Tracking Force Adjustment

The supplied Counterweight is suitable for cartridges weighing between 3.0 and 6.0g.

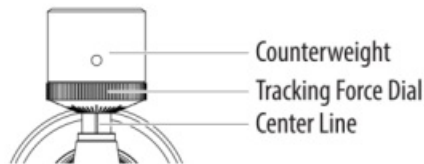


1. Gently push and turn the counterweight onto the rear of the tonearm (with the dial facing toward the front of the turntable).
2. Pull the protector straight forward to remove it.

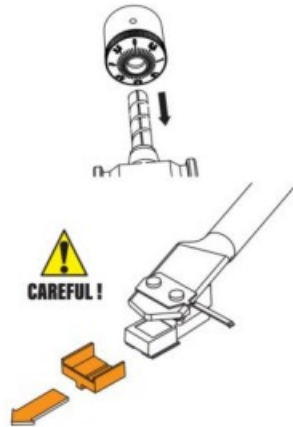


- **NOTE:** Applying a downward force may cause the stylus to come off the body. Only low volume is output if the stylus has come off, or is about to come off, so refer to "Replacing the stylus" to reattach the stylus correctly.
- CAREFUL!


3. Remove the tie-wrap and unlock the tonearm.
4. Lower the tonearm lift lever and position the cartridge in the space between the tonearm rest and the platter.
5. Carefully rotate the counterweight until the tonearm achieves a neutral balance. The tonearm should return to this balanced position if it is moved up or down. This adjustment must be done carefully.

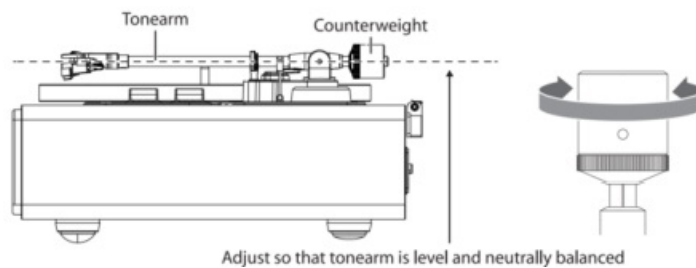

6. Once the tonearm is correctly balanced, return the tonearm to its rest.
 - Without moving the position of the counterweight, gently rotate the tracking force dial until the zero is in line with the black center line on the rear of the tonearm. Check to make sure the tonearm is still neutrally balanced.

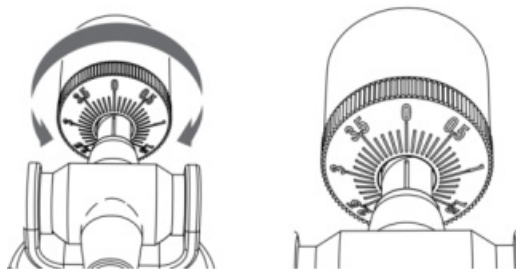


7. Finally, rotate the counterweight and tracking force dial together counterclockwise (as seen from the front) to adjust the tracking force according to the cartridge manufacturer's recommendations.

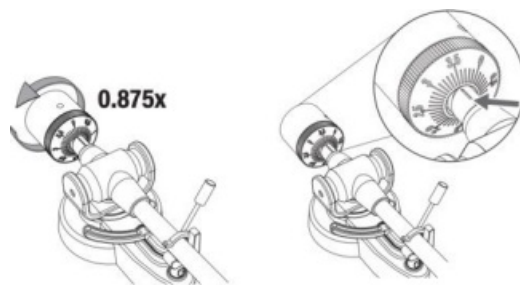

- **Note:** Each mark on the scale represents 0.1g. The recommended tracking force for the factory-installed cartridge is $3.5\text{g} \pm 0.5\text{g}$.
- Carefully rotate the tracking force dial. When “3.5” is centered over the black line on the top of the tonearm please stop.

Connection to External Speaker with RCA Audio Cable

- This turntable includes 4 built-in speakers and a built-in phono amplifier.
- If you wish to use your amplifier or speakers, please follow the instructions below.

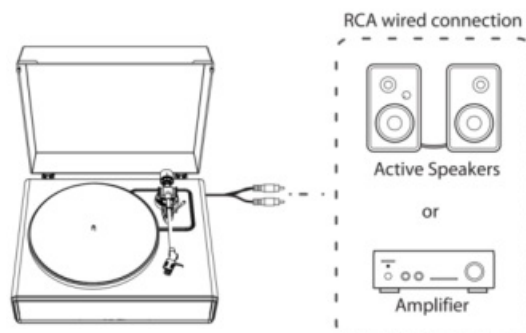

- **NOTE:** In order to achieve the best sound, it is advised to set the turntable volume to a minimal level. Then the turntable's audio will be played back through your amplifier, speakers, etc.

Setting pre-amplifier selector switch


- This product has a built-in phono amplifier function.
- You can use the product even if you do not have a phono amplifier or connectable equipment with a built-in phono amplifier.
- Use the pre-amplifier selector switch to set the output, as shown below.

Connectable equipment being used	Position of pre-amplifier selector switch	Where to connect RCA audio cable
Device with phono input	PHONO	Phono input jack and ground (earth) terminal of connectable equipment
Device without phono input	LINE	AUX or line input jack of connectable equipment

NOTE: The RCA Jacks are not designed to be connected directly to the passive/unpowered speakers on LINE mode. If connected to the passive speakers, there will be no sound.

Connecting the device

- Align the settings for the pre-amplifier selector switch and connect the RCA audio cable to an input jack that is compatible with the connectable equipment you are using (amplifier, active speakers, etc.).
- The RCA audio cable's red jack is for the right (R) channel, and the white jack is for the left (L) channel.

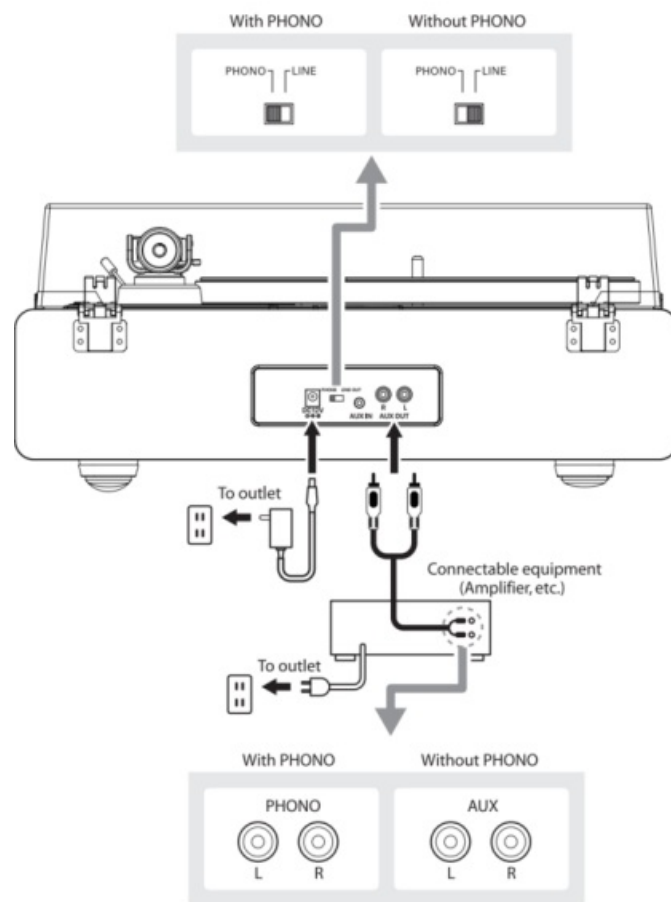

Main Power Connection

1. Insert the DC plug of the AC adapter cord into the DC INPUT Jack at the back of the turntable.
2. Plug the AC adapter into a normal power outlet.

- **NOTE:** Do not plug the AC power adapter into a power outlet before all turntable assembly is completed.
- Before turning on turntable power, recheck all connections to make sure they are correct and secure.
- Always turn off the turntable before connecting or disconnecting from power.


Power Management Function

- The turntable will automatically power off after 20 minutes of inactivity.
- The indicator light will turn off.
- To resume operation, press the ON/OFF button again.

Playing a Record

1. **Before playing a record**
 - Pull the protector straight forward to remove it.

- **NOTE:** Applying a downward force may cause the stylus to come off the body. Only low volume is output if the stylus has come off, or is about to come off, so refer to “Replacing the stylus” to reattach the stylus correctly.

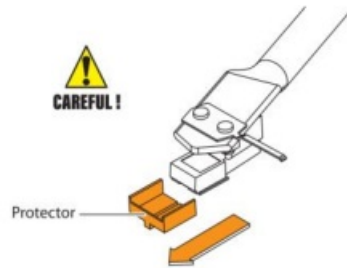

- Place the record on the felt mat so that the center hole aligns with the spindle.



2. Turntable Operation

- Sufficiently lower the volume of the amplifier and speakers first.
- Connect the included power adapter to the turntable, and press the mode button. The turntable will turn on. The indicator will light in red.
- Remove the stylus protector from the stylus.
- Place the record on the slip mat.
- Press the Speed Selector button to switch between 33 and 45 RPM speeds according to the type of record.
- Press the START/Stop button once and the platter will play or pause.
- Unlock the tonearm clip and set the tonearm lift lever to the up position.
- Position the tonearm over the desired location (groove) on the record.
- Carefully lower the tonearm on the record by setting the tonearm lift lever to the down position.
- Turn up the volume of the turntable as needed.
- When you are finished playing the record, raise the tonearm, return it to rest on the arm clip, and long-press the mode button to turn off the turntable.

NOTE:

1. If the silent pause time between each track is longer than 3 minutes, the platter will stop spinning automatically to avoid damaging the record. The indicator light will be red. To resume operation, press the START button.
2. If the felt mat gets dirty, it can easily scratch the record, so remove the felt mat periodically and wipe off any dust.
3. To prevent the record from scratches and warping, remove it after use.
4. Do not use a disk stabilizer.

AUX-IN Operation

This turntable includes an auxiliary audio signal input jack for connecting external audio devices like MP3 players, CD players, and older, non-dockable iPods so you can listen to your external source through the turntable's speakers.

1. Use an audio cable (not included) with one 3.5 mm stereo connection on each end of the cable.
2. Plug one end into the AUX-IN jack on the turntable and the other end to the line-out jack of the audio device.
3. Power on the turntable and audio device. The indicator light of the turntable is red.
4. Press the MODE button again, and the indicator light of the turntable turns green. It's AUX-IN mode.
5. The volume level can be controlled through the turntable. Operate all the functions on the auxiliary device as usual.

NOTE:

1. Make sure the tone arm is securely locked to avoid any damage.
2. When you are done, don't forget to turn off the power on the turntable and your external device.

Bluetooth Operation

1. Connect the included power adapter to the turntable and press the mode button, the indicator will light in red.
2. Press the mode button twice to Bluetooth mode. The indicator light turns blue and flashes quickly. You will hear an activation sound from the turntable.
3. Turn on the Bluetooth feature of your media device and search for and select "Lenco LS-410" to pair the media device and turntable.
4. Once your media device is successfully paired with the turntable, the turntable will play a short confirmation sound.
5. Play and stream music from your media device to the turntable. The indicator light will become solid.

Note: Bluetooth version: 5.0 This product has a bluetooth reception function, you can not transmit any bluetooth sound with it: this means that you can receive wirelessly a bluetooth sound signal from an external source like a smartphone.


Care

Turntable Body

- When the turntable body is dirty or dusty, first disconnect the AC adapter and then wipe off the dirt and dust with a soft, dry cloth.
- Do not use benzenes, thinners, etc.
- When storing the product for a long time, disconnect the AC adapter from the outlet and wrap the product in plastic; do not allow it to become damp; the drive belt should be removed to prevent unequal stretching.

Stylus Tip

- If dirt and grime are stuck to the stylus tip, clean it with a commercially sold brush.
- We recommend using a stylus cleaner (not included) if the stylus tip is considerably dirty. Clean the stylus tip by moving the brush from the rear to the front of the stylus tip.

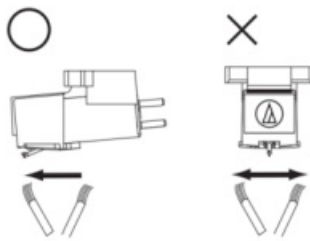


Replacing the Stylus

- It's suggested to replace the stylus after 400 hours of use.


Removing the Stylus

- In addition to the deterioration of sound quality, records may also be damaged as the cartridge's stylus tip wears down.
- Be sure to disconnect the product's AC adapter from the outlet.
- When replacing the stylus, hold the headshell and the cartridge body tightly. Rotate the front of the stylus in a forward and down motion.

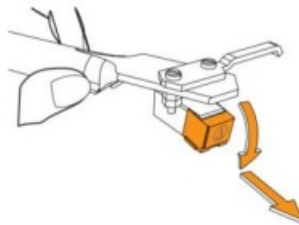


Installing a New Replacement Stylus


1. Mount the new replacement stylus to the cartridge.

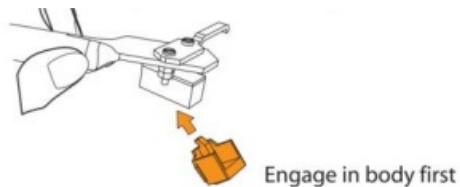

2. Lift the stylus up until you hear a click.

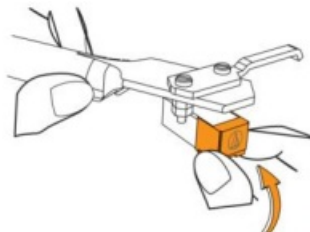

3. Make sure there is no gap between the headshell and the cartridge.

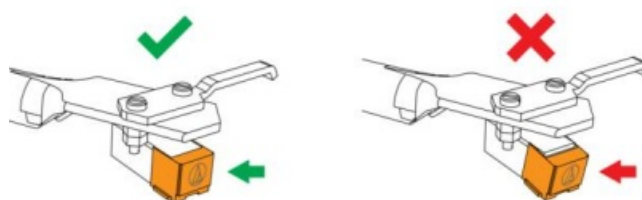

Replacing the Belt

- The belt is a consumable part. Replace the belt if the speed of playback slows down or irregular rotation occurs. As a rule of thumb, we suggest replacing the belt once a year.
- Before replacing the belt, be sure to disconnect the product's AC adapter from the outlet.


1. Remove the slip mat.



2. Remove the belt from the motor pulley.



3. Remove the main platter and then remove the old belt.

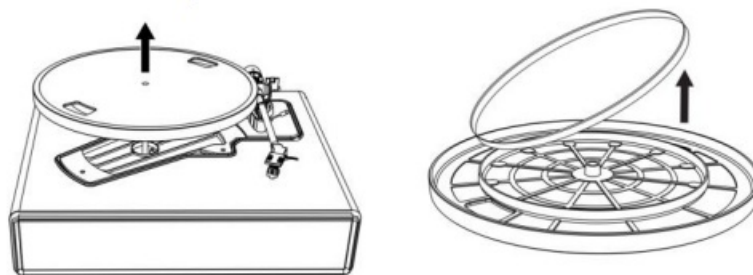


4. Turn the platter over and you will see a raised circle. Loop the new belt along the middle circle.




5. Attach the platter.

- Align one of the openings with the position of the brass-colored motor pulley.

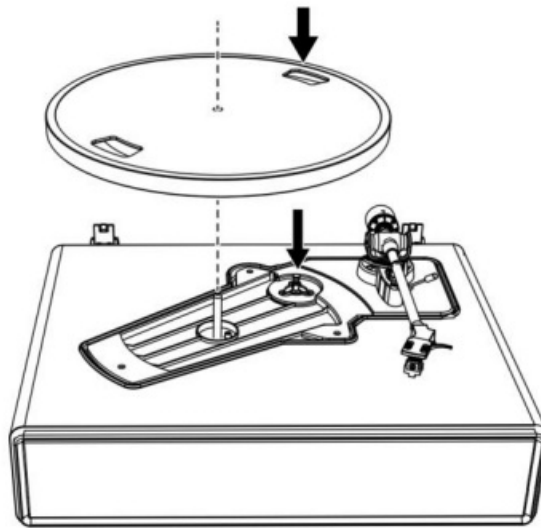


6. Place the belt on the brass-colored motor pulley

- Grasp the belt that was attached in step 4 and, while pulling it, place it on the brass motor pulley.

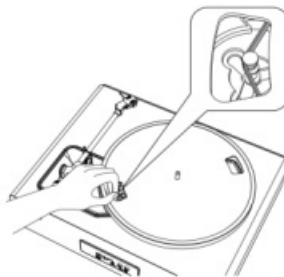

7. Using your hands, slowly rotate the platter ten times in a clockwise direction as shown by the arrow below.

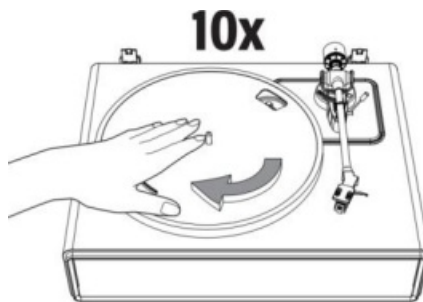

When the Turntable is Moved

- Using the product's original packing materials, wrap the turntable in the reverse order from when you unwrapped it.

If you do not have the packaging materials, take the following measures:

- After disconnecting the AC adapter from the outlet, remove the felt mat and platter, and then wrap them so that they do not get damaged.
- Attach the protector to the cartridge.
- Use a string or something similar to tie the tonearm to the rest so that it does not become dislodged.
- Wrap the turntable body with paper or a soft cloth so that it does not get damaged.

Troubleshooting

Problem	Solution
The platter does not spin.	• Is the AC adapter connected to the outlet? – Connect the AC adapter to the outlet. • What's the status of the indicator light? – The indicator light is green. That means the turntable is in AUX IN mode. Please press the mode button twice to switch to Turntable mode. – The indicator light is blue. That means the turntable is in Bluetooth mode. Please press the mode button once to switch to Turntable mode. – The red indicator light will indicate Turntable mode. • Has the belt slipped from the platter? – Correctly place the belt on the platter. • Is the belt placed on the motor pulley? – Check that the belt is placed on the motor pulley (brass-colored) correctly. • Has the belt been damaged? – Replace it with a new belt.
The platter spins, but there is no sound from the turntable.	• Is the stylus damaged? – Check the stylus and replace it, if necessary. It's suggested to replace the stylus after 400 hours of use. • Is the stylus placed correctly on the body of the cartridge? – Check the cartridge and adjust it, if necessary.
The stylus skips.	• Is the record warped? – Check the record. • Is the record scratched? – Check the record. • Is the stylus pressure correct? – Refer to "Cartridge Tracking Force Adjustment" to readjust the tracking force.
The turntable is making a strange 'howling' sound.	• Is the product picking up excessive vibrations from the floor, surfaces of the walls, or nearby speakers? – Decrease the vibrations or mount the product on a surface that is not subject to the effects of vibrations. • Is the product mounted on an unstable surface? – Check whether the surface on which the product is mounted is suitable.

There is noise when the record is playing.	• Is there dust on the cartridge's stylus tip? – If dust is stuck to the stylus tip, clean it with a commercially sold brush.
The sound when the record is playing is either too fast or too slow.	• Are the speed settings for this product correct? – Please select the correct speed for the type of record being played.
Playback speed slows down or there is irregular rotation.	• Is the belt stretched out? – Replace with a new belt. • Is the belt installed correctly? – Refer to "Turntable Platter and Belt Setup" to set up the belt.

Specifications

Turntable

Power Supply	AC100-240V, DC output 12V 1500mA
Power Consumption	35W
Turntable Speed	33 1/3, 45 RPM
Output Power (RMS)	40W on Bluetooth mode
Speakers Rating	2 x 15W + 2 x 10W
Dimensions (LxWxH)	17.32"x 14.57"x 7.56"(440 x 370 x 192mm) (lid closed), 15.75"x 16.73"x 18.19" (400 x 425 x 462mm) (lid open)
Weight	13,3lb (6,05kg)

Stylus

Model	Audio-Technica AT3600
Frequency Response	20Hz-20kHz
Channel Balance	<2.5dB
Channel Separation	>18dB
Output Voltage	2.5mV
Recommended Load Resistance	47kΩ
Amplifier Connection	MM (Moving Magnet) – input
Recommended Tracking Force	3.5±0.5g
Weight	0.18oz (5.1 g)

- **Note:** Design and specifications are subject to change without notice.

Power supply adaptor

- **Manufacturer:** BRIGHTPOWER OPTOELECTRONIC TECHNOLOGY CO., LTD
- **Model number:** SW1201500-NM
- Use only the power supply listed in the user instructions

Information	
Manufacturer name or trade mark, commercial registration , and address	RIGHT POWER OPTOELECTRONIC TECHNOLOGY CO., LTD
Model Identifier	SW1201500-NM
Input voltage	100-240V
Input AC frequency	50-60Hz
Output voltage	DC 12V
Output current	1500mA
Output Power	18W
Average active efficiency	85.00%
Efficiency at low load (10%)	83.20%
No load Power consumption	0.1W

1. Guarantee

- Commaxx B.V. offers service and warranty under European law, which means that in case of repairs (both during and after the warranty period) you should contact your local dealer.
- **Important note:** It is not possible to send products that need repairs to Commaxx B.V. directly.
- **Important note:** If this unit is opened or accessed by a non-official service center in any way, the warranty expires.
- This device is not suitable for professional use. In case of professional use, all warranty obligations of the

manufacturer will be voided.

2. Disclaimer

- Updates to Firmware and/or hardware components are made regularly. Therefore some of the instructions, specifications, and pictures in this documentation may differ slightly from your particular situation.
- All items described in this guide are for illustration purposes only and may not apply to particular situations. No legal right or entitlements may be obtained from the description made in this manual.

3. Disposal of the Old Device

- This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe.
- To ensure the correct waste treatment of the product and battery, please dispose of them per any applicable local laws of requirement for disposal of electrical equipment or batteries.
- In so doing, you will help to conserve natural resources and improve standards of environmental protection in the treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).

4. DECLARATION OF CONFORMITY

- Hereby, Commaxx declares that the radio equipment type [Lenco LS-410] complies with directive 2014/53/EU.
- The full text of the EU Declaration of Conformity is available at the following internet address:

https://commaxx-certificates.com/doc/ls-410_doc.pdf.

Type RF	Frequency range (MHz)	Power (dBm)
Bluetooth	2402-2480	<6

5. Service

- For more information and helpdesk support, please visit www.lenco.com
- Commaxx B.V. Wiebachstraat 37, 6466 NG Kerkrade, The Netherlands.

Documents / Resources

 Lenco Model LS-410 LS-410 is a turntable with 4 speakers built in and Bluetooth reception. It is a compact and stylish device that can be used as a desk or bedside table. It features a clear dust cover and a remote control. The turntable is powered by a rechargeable battery and can be used without a power cord. It is compatible with all Bluetooth-enabled devices and can be used to play music from your phone, tablet, or computer. The turntable is also compatible with Lenco's LS-410 turntable with 4 speakers built in and Bluetooth reception. It is a compact and stylish device that can be used as a desk or bedside table. It features a clear dust cover and a remote control. The turntable is powered by a rechargeable battery and can be used without a power cord. It is compatible with all Bluetooth-enabled devices and can be used to play music from your phone, tablet, or computer. The turntable is also compatible with Lenco's LS-410 turntable with 4 speakers built in and Bluetooth reception.	Lenco 410 Turntable With 4 Speakers Built In And Bluetooth Reception [pdf] User Manual 410 Turntable With 4 Speakers Built In And Bluetooth Reception, 410, Turntable With 4 Speaker s Built In And Bluetooth Reception, Speakers Built In And Bluetooth Reception, In And Bluetooth Reception, And Bluetooth Reception, Bluetooth Reception, Reception
---	--

References

- [L Lenco.com](http://Lenco.com) | [Officiële Lenco Webshop](#)

- [!\[\]\(83eb2aa26b610eb6a9dca7cf4702d681_img.jpg\) **Lenco.com | Officiële Lenco Webshop**](#)
- [!\[\]\(94dfacbf937cdd7da4837a6fcd8fc785_img.jpg\) **Интернет-магазин lenco.ru - удобный способ приобрести электронные музыкальные устройства Lenco**](#)
- [!\[\]\(dae8c3c5fa7c80febd6526a5e8a853bf_img.jpg\) **Интернет-магазин lenco.ru - удобный способ приобрести электронные музыкальные устройства Lenco**](#)
- [**User Manual**](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.