

Lenco CR-07 FM Alarm Clock Radio with With Sleep Timer



Lenco CR-07 FM Alarm Clock Radio with With Sleep Timer User Manual

[Home](#) » [Lenco](#) » Lenco CR-07 FM Alarm Clock Radio with With Sleep Timer User Manual 

Contents

- [1 Lenco CR-07 FM Alarm Clock Radio with With Sleep Timer](#)
- [2 Product Usage Instructions](#)
- [3 PRECAUTIONS BEFORE USE](#)
- [4 INSTALLATION](#)
- [5 Setting the Alarm](#)
- [6 Setting the Clock](#)
- [7 Specifications](#)
- [8 Guarantee](#)
- [9 DECLARATION OF CONFORMITY](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

Lenco

Lenco CR-07 FM Alarm Clock Radio with With Sleep Timer



Product Specifications:

- Brand: Lenco
- Model: CR-07
- Manufacturer: Commaxx B.V.
- Warranty: European Law compliant

Product Usage Instructions

Setting up the Lenco CR-07:

To set up the Lenco CR-07, follow these steps:

1. Unbox the product and remove all packaging materials.
2. Place the CR-07 on a flat, stable surface.
3. Connect the power adapter to the CR-07 and plug it into a power outlet.
4. Adjust the settings as per your preference using the control buttons or remote (if included).

Operating the Lenco CR-07:

Operating the CR-07 is simple:

1. Turn on the device using the power button.
2. Use the control panel or remote to select your desired function (radio, alarm, etc.).
3. Adjust volume and settings as needed.

Maintenance and Care:

To ensure optimal performance and longevity:

- Keep the CR-07 clean by wiping it with a soft, dry cloth.

- Avoid exposing the device to extreme temperatures or moisture.
- Regularly check and replace batteries if applicable.

Frequently Asked Questions (FAQ):

- **Q: How can I claim warranty service for my Lenco CR-07?**

A: In case of repairs or warranty claims, contact Commaxx B.V. directly following the guidelines provided in the user manual.

- **Q: What should I do if my Lenco CR-07 stops working suddenly?**

A: Check the power source, connections, and batteries. If the issue persists, contact Commaxx B.V. for assistance.

USER'S MANUAL

Lenco CR-07

Clock radio with PLL FM and LED display

For more information : www.lenco.com

Read this instruction manual carefully before operating the appliance and save it for future reference.

CAUTION:

Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

PRECAUTIONS BEFORE USE

KEEP THESE INSTRUCTIONS IN MIND:

1. Do not cover or block any ventilation openings. When placing the device on a shelf, leave 5 cm (2") free space around the whole device.
2. Install in accordance with the supplied user manual.
3. Keep the device away from heat sources such as radiators, heaters, stoves, candles and other heat-generating products or naked flame. The device can only be used in moderate climates. Extremely cold or warm environments should be avoided. Working temperature between 0° and 35°C.
4. Avoid using the device near strong magnetic fields.
5. Electrostatic discharge can disturb normal usage of this device. If so, simply reset and restart the device following the instruction manual. During file transmission, please handle with care and operate in a static-free environment.
6. **Warning!** Never insert an object into the product through the vents or openings. High voltage flows through the product and inserting an object can cause electric shock and/or short circuit internal parts. For the same reason, do not spill water or liquid on the product.
7. Do not use in wet or moist areas such as bathrooms, steamy kitchens or near swimming pools.
8. The device shall not be exposed to dripping or splashing and make sure that no objects filled with liquids, such as vases, are placed on or near the apparatus.
9. Do not use this device when condensation may occur. When the unit is used in a warm wet room with damp, water droplets or condensation may occur inside the unit and the unit may not function properly; let the unit stand in power OFF for 1 or 2 hours before turning on the power: the unit should be dry before getting any

power.

10. Although this device is manufactured with the utmost care and checked several times before leaving the factory, it is still possible that problems may occur, as with all electrical appliances. If you notice smoke, an excessive build-up of heat or any other unexpected phenomena, you should disconnect the plug from the main power socket immediately.
11. This device must operate on a power source as specified on the specification label. If you are not sure of the type of power supply used in your home, consult your dealer or local power company.
12. Keep away from animals. Some animals enjoy biting on power cords.
13. To clean the device, use a soft dry cloth. Do not use solvents or petrol based fluids. To remove severe stains, you may use a damp cloth with dilute detergent.
14. The supplier is not responsible for damage or lost data caused by malfunction, misuse, modification of the device or battery replacement.
15. Do not interrupt the connection when the device is formatting or transferring files. Otherwise, data may be corrupted or lost.
16. If the unit has USB playback function, the USB memory stick should be plugged into the unit directly. Don't use an USB extension cable because it can cause interference resulting in failing of data.
17. The rating label has been marked on the bottom or back panel of the device.
18. This device is not intended for use by people (including children) with physical, sensory or mental disabilities, or a lack of experience and knowledge, unless they're under supervision or have received instructions about the correct use of the device by the person who is responsible for their safety.
19. This product is intended for non professional use only and not for commercial or industrial use.
20. Make sure the unit is adjusted to a stable position. Damage caused by using this product in an unstable position vibrations or shocks or by failure to follow any other warning or precaution contained within this user manual will not be covered by warranty.
21. Never remove the casing of this device.
22. Never place this device on other electrical equipment.
23. Do not allow children access to plastic bags.
24. Only use attachments/accessories specified by the manufacturer.
25. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as the power supply cord or the plug, when liquid has been spilled or objects have fallen into the device, when the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
26. Long exposure to loud sounds from personal music players may lead to temporary or permanent hearing loss.
27. **If the product is delivered with power cable or AC power adaptor:**
 1. If any trouble occur, disconnect the AC power cord and refer servicing to qualified personnel.
 2. Don't step on or pinch the power adaptor. Be very careful, particularly near the plugs and the cable's exit point.
 3. Do not place heavy items on the power adaptor, which may damage it. Keep the entire device out of children's reach! When playing with the power cable, they can seriously injure themselves. Unplug this device during lightning storms or when unused for a long period.
 4. The socket outlet must be installed near the equipment and must be easily accessible.
 5. Do not overload ac outlets or extension cords. Overloading can cause fire or electric shock. Devices with class 1 construction should be connected to a main socket outlet with a protective earthed connection. Devices with class 2 construction do not require a earthed connection. Always hold the plug when pulling

it out of the main supply socket.

6. Do not pull the power cord. This can cause a short circuit. Do not use a damaged power cord or plug or a loose outlet. Doing so may result in fire or electric shock.

28. If the product contains or is delivered with a remote control containing coin/cell batteries:

Warning:

1. "Do not ingest battery, Chemical Burn Hazard" or equivalent warning.
2. [The remote control supplied with] This product contains a coin/button cell battery.
3. If the battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
4. Keep battery used areas as not clash severe. If the battery compartment does not close securely, stop using the product and keep it away from children.
5. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.


29. Caution about the use of Batteries:

1. Danger of explosion if battery is incorrectly replaced.
2. Replace only with the same or equivalent type. Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
3. Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
4. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
5. Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or that leakage of flammable liquid or gas.
6. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
7. **Attention** should be drawn to the environmental aspects of battery disposal.

INSTALLATION

- Unpack all parts and remove protective material.
- Do not connect the unit to the mains before checking the mains voltage and before all other connections have been made.

*Those instructions are related only to products using power cable or AC power adaptor.

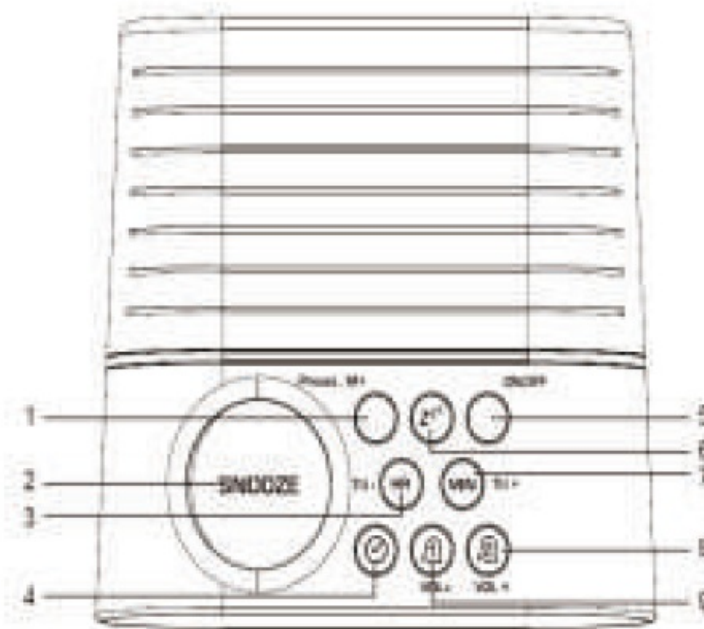

1. Preset Memory Selection
2. Snooze Button
3. Tuning – Button/Hour Button
4. Time Set
5. On Off/Alarm Off Button
6. Sleep Button
7. Tuning + Button/Minute Button
8. Volume Increase/Alarm 2 Set
9. Volume Decrease/Alarm 1 Set

Radio

1. Press the “ON/OFF” button to turn the clock radio on or off.
2. Adjust the “TUNING+” or “TUNING-” to select the desired station.
3. Press the “VOLUME+” or “VOLUME-” button to adjust the volume.
4. Press and hold the “PRE/M+” button until the preset memory display, for example “P01”, is blinking. Then you can select the desired preset memory by “VOLUME+” or “VOLUME-” button and press “PRE/M+” button again to store the desired station.
5. Now you can recall the preset station by pressing the “PRE/M+” button to select the preset memory.

Setting the Alarm

1. You must switch off the radio before you set the alarm time.
2. Press and hold the “AL1” button until the Hour display begins to blink.
3. You can set the alarm time: Press the “Hour” to adjust the hour and press “Minute” button to adjust the Minute.
4. Press the “AL1” button now to store the alarm time.
5. Now you can enable the alarm and select to wake up by radio or buzzer by pressing “AL1” in toggle.
6. The LED with music note logo and bell logo stands for waking up by radio or by buzzer respectively. Both LEDs

with music note logo and bell logo are off representing to disable the alarm.

7. Use the same method to set Alarm 2.

Canceling the Daily Alarm

Press the “ON/OFF” button to stop the alarm. The alarm will operate 24 hours later as per alarm time set.

Disabling the Alarm

Press the “AL1” or “AL2” button in toggle until both LEDs with music note logo and bell logo are switched off, the alarm is disabled now.

Setting the Clock

1. You must switch off the radio before you set the clock time.
2. Press and hold the “TIME” button until the display begins to blink, then release the button.
3. Press the “HOUR” and “MIN” button to adjust the hour and minute.
4. Press the “TIME” button to save time.

Setting the Sleep Time

Press the “SLEEP” button repeatedly to set the sleep time (90, 80, 70, 60, 50, 40, 30, 20, 10 min or OFF). When the timer is up, the radio will be switched off automatically.

Snooze

To use the snooze, press the “SNOOZE” Button when the alarm is sounding. The alarm will stop temporarily, but will resume sounding after 9 minutes.

Battery Back Up

Battery back up function will operate when AC power is suspended. This back up function is only maintain the clock running in memory but cannot light up the LED display normally. You can press any buttons to make the LED light on for checking current time. Please note the time accuracy for this DC back up function depends on the battery life time and capacity left.

Specifications

- Frequency Range: FM 87.5-108 MHz
- Power Source: AC 230V ~ 50 Hz, 3W
 - DC 2 x AAA batteries (For back-up)
- Power Output: 300 mW

Guarantee

- Commaxx B.V. offers service and warranty in accordance to European law, which means that in case of repairs (both during and after the warranty period) you should contact your local dealer. Important note: It is not possible to send products that need repairs to Commaxx B.V. directly.
- **Important note:** If this unit is opened or accessed by a non-official service center in any way, the warranty expires.
- This device is not suitable for professional use. In case of professional use, all warranty obligations of the manufacturer will be voided.

Disclaimer

Updates to Firmware and/or hardware components are made regularly. Therefore some of the instruction, specifications and pictures in this documentation may differ slightly from your particular situation. All items described in this guide for illustration purposes only and may not apply to particular situation. No legal right or entitlements may be obtained from the description made in this manual.

Disposal of the Old Device

This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose them in accordance to any applicable local laws of requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).



DECLARATION OF CONFORMITY

Hereby, Commaxx declares that the radio equipment type [Lenco CR-07] is in compliance with directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:


<https://commaxx-certificates.com/doc/cr-07doc.pdf>

Type RF	Frequency range (MHz)	Power (dBm)
FM	87.5-108	-

Service

- For more information and helpdesk support, please visit www.lenco.com
- Commaxx B.V. Wiebachstraat 37, 6466 NG Kerkrade, The Netherlands.

Documents / Resources

	Lenco CR-07 FM Alarm Clock Radio with With Sleep Timer [pdf] User Manual CR-07 FM Alarm Clock Radio with With Sleep Timer, CR-07, FM Alarm Clock Radio with With Sleep Timer, Alarm Clock Radio with With Sleep Timer, Radio with With Sleep Timer, Sleep Time r
---	---

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.