



# Lenco CR-525 Clock Radio with USB Player and USB Charger User Manual

[Home](#) » [Lenco](#) » Lenco CR-525 Clock Radio with USB Player and USB Charger User Manual 

## Contents

- [1 Lenco CR-525 Clock Radio with USB Player and USB Charger](#)
- [2 PRECAUTIONS BEFORE USE](#)
- [3 INSTALLATION](#)
- [4 Packing content](#)
- [5 OVERVIEW](#)
- [6 Operating the PLL Radio](#)
- [7 Setting the Alarm](#)
- [8 Canceling the Daily Alarm](#)
- [9 Setting the Clock](#)
- [10 SPECIFICATIONS](#)
- [11 Guarantee](#)
- [12 Disclaimer](#)
- [13 Disposal of the Old Device](#)
- [14 Service](#)
- [15 Documents / Resources](#)
  - [15.1 References](#)
- [16 Related Posts](#)

# Lenco

**Lenco CR-525 Clock Radio with USB Player and USB Charger**



**CAUTION:** Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This unit should not be adjusted or repaired by anyone except qualified service personnel.

## **PRECAUTIONS BEFORE USE**

### **KEEP THESE INSTRUCTIONS IN MIND:**

1. Do not use this device near water.
2. Clean only with a slightly damp cloth.
3. Do not cover or block any ventilation openings. When placing the device on a shelf, leave 5 cm (2") free space around the whole device.
4. Install in accordance with the supplied user manual.
5. Don't step on or pinch the power adaptor. Be very careful, particularly near the plugs and the cable's exit point. Do not place heavy items on the power adaptor, which may damage it. Keep the entire device out of children's reach! When playing with the power cable, they can seriously injure themselves.
6. Unplug this device during lightning storms or when unused for a long period.
7. Keep the device away from heat sources such as radiators, heaters, stoves, candles and other heat-generating products or naked flame.
8. Avoid using the device near strong magnetic fields.
9. Electrostatic discharge can disturb normal usage of this device. If so, simply reset and restart the device following the instruction manual. During file transmission, please handle with care and operate in a static-free environment.
10. Warning! Never insert an object into the product through the vents or openings. High voltage flows through the product and inserting an object can cause electric shock and/or short circuit internal parts. For the same reason, do not spill water or liquid on the product.
11. Do not use in wet or moist areas such as bathrooms, steamy kitchens or near swimming pools.
12. Do not use this device when condensation may occur.

13. Although this device is manufactured with the utmost care and checked several times before leaving the factory, it is still possible that problems may occur, as with all electrical appliances. If you notice smoke, an excessive build-up of heat or any other unexpected phenomena, you should disconnect the plug from the main power socket immediately.
14. This device must operate on a power source as specified on the specification label. If you are not sure of the type of power supply used in your home, consult your dealer or local power company.
15. The socket outlet must be installed near the equipment and must be easily accessible.
16. Do not overload ac outlets or extension cords. Overloading can cause fire or electric shock.
17. Devices with class 1 construction should be connected to a main socket outlet with a protective earthed connection.
18. Devices with class 2 construction do not require a earthed connection.
19. Keep away from rodents. Rodents enjoy biting on power cords.
20. Always hold the plug when pulling it out of the main supply socket. Do not pull the power cord. This can cause a short circuit.
21. Avoid placing the device on any surfaces that may be subject to vibrations or shocks.
22. To clean the device, use a soft dry cloth. Do not use solvents or petrol based fluids. To remove severe stains, you may use a damp cloth with dilute detergent.
23. The supplier is not responsible for damage or lost data caused by malfunction, misuse, modification of the device or battery replacement.
24. Do not interrupt the connection when the device is formatting or transferring files. Otherwise, data may be corrupted or lost.
25. If the unit has USB playback function, the usb memory stick should be plugged into the unit directly. Don't use an usb extension cable because it can cause interference resulting in failing of data.
26. The apparatus shall not be exposed to dripping or splashing and make sure that no objects filled with liquids, such as vases, are placed on or near the apparatus.
27. To completely disconnect the power input, the mains plug of the apparatus shall be disconnected from the mains, as the disconnect device is the mains plug of apparatus.
28. If the unit works with battery, Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
29. Attention should be drawn to the environmental aspects of battery disposal.
30. The apparatus can only be used in moderate extremely cold or climates warm environments should be avoided.
31. The rating label has been marked on the bottom or back panel of the apparatus.
32. This device is not intended for use by people (including children) with physical, sensory or mental disabilities, or a lack of experience and knowledge, unless they're under supervision or have received instructions about the correct use of the device by the person who is responsible for their safety.
33. This product is intended for non-professional use only and not for commercial or industrial use.
34. Make sure the unit is adjusted to a stable position. Damage caused by using this product in an unstable position or by failure to follow any other warning or precaution contained within this user manual will not be covered by warranty.
35. Never remove the casing of this apparatus.
36. Never place this apparatus on other electrical equipment.
37. Do not use or store this product in a place where it is subject to direct sunlight, heat, excessive dust or vibration.

38. Do not allow children access to plastic bags.
39. Only use attachments/accessories specified by the manufacturer.
40. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power supply cord or the plug, when liquid has been spilled or objects have fallen into the apparatus, when the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
41. Do not use a damaged power cord or plug or a loose outlet. Doing so may result in fire or electric shock.
42. Prolonged exposure to loud sounds from personal music players may lead to temporary or permanent hearing loss.

## **INSTALLATION**

- Unpack all parts and remove protective material.
- Do not connect the unit to the mains before checking the mains voltage and before all other connections have been made.
- These instructions are related only to products using power cable or AC power adaptor.

### **Warning**

 
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have swallowed or placed inside any part of the body, seek immediate medical attention.
- Batteries not included.

### **Caution**


- Danger of explosion if battery is incorrect replaced.
- Replace only with the same or equivalent type.

## **Packing content**


- User manual

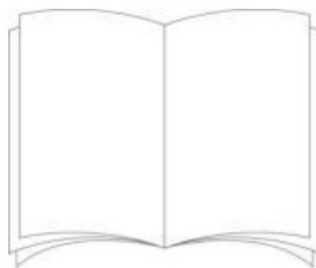

- Power adaptor

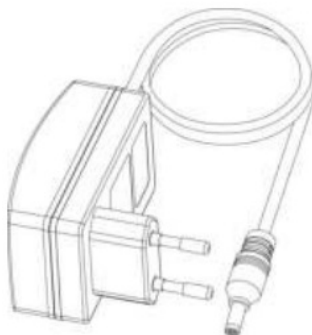 

## OVERVIEW

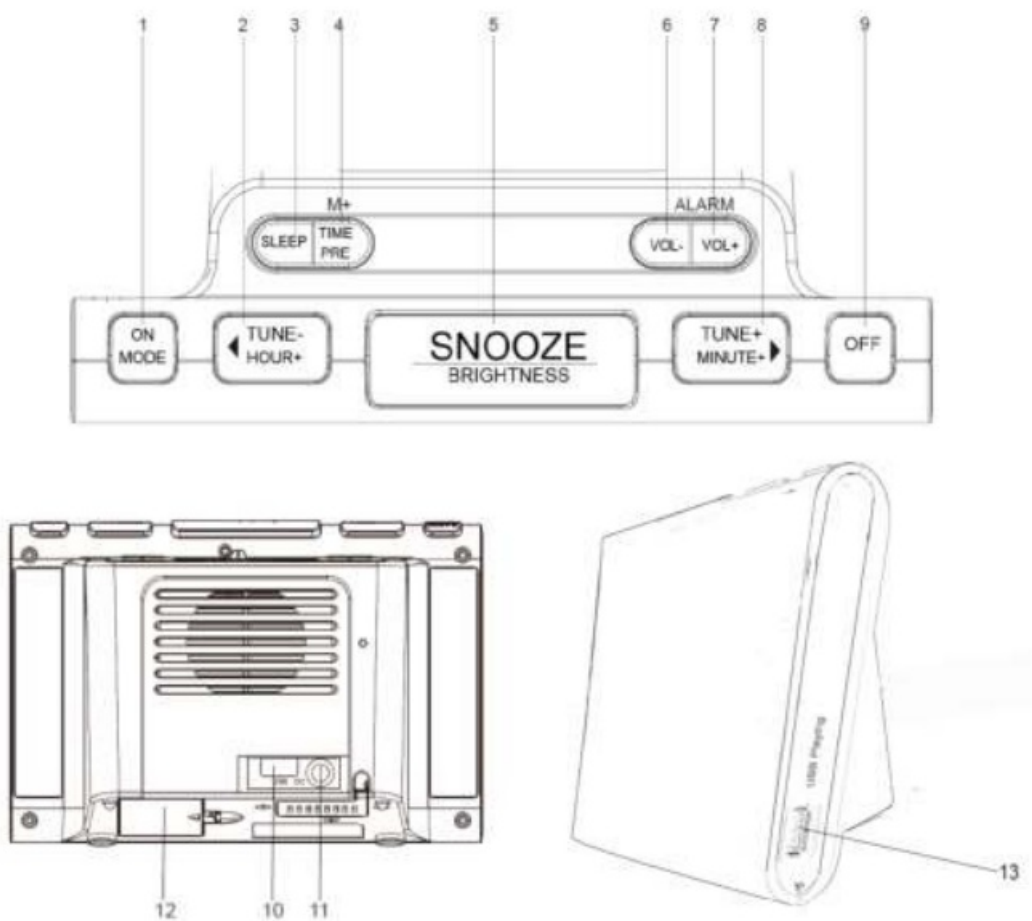 

1. Radio On/Mode
2. Hour/Tune <</USB backward
3. Sleep
4. Time/Preset M+
5. Snooze/Brightness/USB play & pause
6. Volume –
7. Volume +/Alarm
8. Minute/Tune >>/USB forward
9. Radio Off/Alarm Off
10. USB Charging Port
11. DC Input
12. Battery compartment (2x AA/LR6 type battery- not included)




## 13. USB Playing Port

### Operating the PLL Radio

- Press the “ON” or “OFF” button to turn the clock’s radio/USB function on or off.
- Multi press the “ON” button to switch between RADIO and USB (if inserted). Select Radio (clock display will show the radio frequency).
- Adjust the “TU+” or “TU-” to select the desired station.
- Press the “VOL +” or “VOL -” button to adjust the volume.
- Long press the “M+” button to store your desired station. The display will show the “P01” and then press M+ button to save on the first pre-set. If it displays “P02” this means the station is saved in the second preset by default, but you can change the preset number with the “HOUR” and “MINUTE” buttons.

**NOTE:** you can store up to 10 preset channels.

### Setting the Alarm

1. You must switch off the radio before you set the alarm time.
2. Press and hold the “ALARM” button until the time display starts to blink.
3. Now you can set the alarm time by short pressing the “HOUR” button to adjust the hour and pressing the “MINUTE” button to adjust the Minute.
4. Press the “ALARM” button again now to confirm the alarm time.
5. Now select the wake up sound, buzzer /radio  or usb  by short pressing the “ALARM” button.

**NOTE:** if usb is selected but no usb memory stick is inserted when the alarm is triggered, the wakeup sound will automatically change to buzzer.

### Canceling the Daily Alarm

When the alarm is triggered press the “ALARM OFF” button to stop the alarm for 24 hours. The alarm will be triggered again 24 hours later.

### Turning off the Alarm

Short press the “ALARM” button until, the display will show no , or symbols which means the alarm setting is OFF. No alarm will be triggered.

### Setting the Clock

- You must switch off the radio before you can set the clock time.
- Press and hold the “TIME SET” button until the display begins to blink, and then release the button.
- Press the “HOUR” and “MINUTE” button to adjust the hour and minute.
- Press the “TIME PRE” button to store time.

### Setting the Sleep timer

1. Short press the mode button to select radio or USB (if inserted).
2. Now press the Sleep button repeatedly to set the sleep time (90, 80, 70, 60, 50, 40, 30, 20, 10 min or OFF).

### **Snooze and Alarm Reset**

To use the snooze, press the SNOOZE bar when the alarm is sounding. The alarm will then stop temporarily, and will be triggered again after 9 minutes. Press the "OFF" button to stop the alarm for 24 hours. (See the section "Turning off the Alarm" how to disable the alarm.)

### **USB Charging**

Use the USB charging port to charge your smartphone or to power USB-powered devices such as a USB-type lamp or fan.

Use a USB cable (not included) to connect your cell phone to the USB connector of the unit. Your cell phone should start charging.

**NOTE:** Charging function may not be supported for all phones or electronic devices.

### **USB music play**

Insert USB memory stick into the "USB Playing" port on the right side of the clock. Multi press "Mode" and select "USB". The music will start/resume play automatically.

**Note:** The clock will only play MP3 files.

### **Clock time/memory backup**

To keep the current time and radio presets on mains power failure, Insert 2 AA/LR6 batteries (not included) by opening the Battery compartment (nr 12) and insert the batteries. Check the correct polarity when inserting the batteries.

## **SPECIFICATIONS**

- **Frequency Range:** FM 87.5 –108 MHz
- **Power Source:** AC 230V ~50Hz, 3W DC 3V (For back-up)
- **Power Output:** 400 mW

#### **Power adaptor**

- **Model:** YLJXA-E053150
- **Input** 100-240Vac
- **Output:** 5.3V 1.5A

## **Guarantee**

Lenco offers service and warranty in accordance to European law, which means that in case of repairs (both during and after the warranty period) you should contact your local dealer.

**Important note:** It is not possible to send products that need repairs to Lenco directly.

**Important note:** If this unit is opened or accessed by a non-official service center in any way, the warranty expires.

This device is not suitable for professional use. In case of professional use, all warranty obligations of the manufacturer will be voided.

## **Disclaimer**

Updates to Firmware and/or hardware components are made regularly. Therefore some of the instructions, specifications, and pictures in this documentation may differ slightly from your particular situation. All items described in this guide are for illustration purposes only and may not apply to particular situations. No legal right or entitlements may be obtained from the description made in this manual.


## Disposal of the Old Device

This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose them in accordance to any applicable local laws of requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).

## Service

For more information and helpdesk support, please visit [www.lenco.com](http://www.lenco.com) Lenco Benelux BV, Thermiekstraat 1a, 6361 HB Nuth, The Netherlands.

## Documents / Resources

 <p>MANUAL CR-525</p> <p>Use manual: Clock radio with USB player and USB charger Bedieningshandleiding: Wekkersysteem met USB-speler en USB-lader Bedienungsanleitung: Wekkersystem mit USB-Player und USB-Ladegerät Manuale d'uso: Radio-orecchino con lettore USB e caricatore USB Manuel de l'utilisateur: Radio réveil avec reproducteur USB et chargeur USB</p>	<p><a href="#">Lenco CR-525 Clock Radio with USB Player and USB Charger</a> [pdf] User Manual CR-525 Clock Radio with USB Player and USB Charger, CR-525, Clock Radio with USB Player and USB Charger, Clock Radio, Clock Radio with USB Player, Clock Radio with USB Charger, Clock, Radio, Clock with USB Play and USB Charger, Radio with USB Play and USB Charger, YLJXA-E053150</p>
---	--

## References

- [L Lenco.com | Officiële Lenco Webshop](#)
- [L Lenco.com | Officiële Lenco Webshop](#)