

Lenco
CR-625BK DAB
Plus FM Clock
Radio with Color
Display



Lenco CR-625BK DAB Plus FM Clock Radio with Color Display User Manual

[Home](#) » [Lenco](#) » Lenco CR-625BK DAB Plus FM Clock Radio with Color Display User Manual 

Contents

- [1 CR-625BK DAB Plus FM Clock Radio with Color Display](#)
- [2 Product Specifications](#)
- [3 Product Instructions](#)
- [4 Installation](#)
- [5 Guarantee](#)
- [6 FAQs](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

Lenco

CR-625BK DAB Plus FM Clock Radio with Color Display



Product Specifications

- **Model No:** CR-625BK
- **Version:** 1.0
- **Power Supply:** 5V 1A Adapter
- **Display:** LCD
- **Power Source:** AC Adaptor
- **Antenna:** Extendable
- **Audio Input:** Aux-in Jack

Product Instructions

CAUTION

Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Precautions Before Use

1. Do not cover or block any ventilation openings. When placing the device on a shelf, leave 5 cm (2") free space around the whole device.
2. Install by the supplied user manual.
3. Keep the device away from heat sources such as radiators, heaters, stoves, candles, and other heat-generating products or naked flame. The device can only be used in moderate climates. Extremely cold or warm environments should be avoided. Working temperature between 0° and 35°C.
4. Avoid using the device near strong magnetic fields.
5. Electrostatic discharge can disturb normal usage of this device. If so, simply reset and restart the device following the instruction manual. During file transmission, please handle it with care and operate in a static-free

environment.

6. Warning! Never insert an object into the product through the vents or openings. High voltage flows through the product and inserting an object can cause electric shock and/or short circuit internal parts. For the same reason, do not spill water or liquid on the product.
7. Do not use in wet or moist areas such as bathrooms, steamy kitchens, or near swimming pools.
8. The device shall not be exposed to dripping or splashing and make sure that no objects filled with liquids, such as vases, are placed on or near the apparatus.
9. Do not use this device when condensation may occur. When the unit is used in a warm wet room with damp, water droplets or condensation may occur inside the unit and the unit may not function properly; let the unit stand in power OFF for 1 or 2 hours before turning on the power: the unit should be dry before getting any power.
10. Although this device is manufactured with the utmost care and checked several times before leaving the factory, it is still possible that problems may occur, as with all electrical appliances. If you notice smoke, an excessive build-up of heat, or any other unexpected phenomena, you should disconnect the plug from the main power socket immediately.
11. This device must operate on a power source as specified on the specification label. If you are not sure of the type of power supply used in your home, consult your dealer or local power company.
12. Keep away from animals. Some animals enjoy biting on power cords.
13. To clean the device, use a soft dry cloth. Do not use solvents or petrol-based fluids.
14. To remove severe stains, you may use a damp cloth with dilute detergent.
15. The supplier is not responsible for damage or lost data caused by malfunction, misuse, modification of the device, or battery replacement.
16. Do not interrupt the connection when the device is formatting or transferring files. Otherwise, data may be corrupted or lost.
17. If the unit has a USB playback function, the USB memory stick should be plugged into the unit directly. Don't use a USB extension cable because it can cause interference and failing data.
18. The rating label has been marked on the bottom or back panel of the device.
19. This device is not intended for use by people (including children) with physical, sensory, or mental disabilities, or a lack of experience and knowledge unless they're under supervision or have received instructions about the correct use of the device by the person who is responsible for their safety.
20. This product is intended for nonprofessional use only and not for commercial or industrial use.
21. Make sure the unit is adjusted to a stable position. Damage caused by using this product in an unstable position vibrations or shocks or by failure to follow any other warning or precaution contained within this user manual will not be covered by warranty.
22. Never remove the casing of this device.
23. Never place this device on other electrical equipment.
24. Do not allow children access to plastic bags.
25. Only use attachments/accessories specified by the manufacturer.
26. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as the power supply cord or the plug, when the liquid has been spilled or objects have fallen into the device when the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
27. Long exposure to loud sounds from personal music players may lead to temporary or permanent hearing loss.
28. If the product is delivered with a power cable or AC power adaptor:

- If any trouble occurs, disconnect the AC power cord and refer servicing to qualified personnel.
- Don't step on or pinch the power adaptor. Be very careful, particularly near the plugs and the cable's exit point. Do not place heavy items on the power adaptor, which may damage it. Keep the entire device out of children's reach! When playing with the power cable, they can seriously injure themselves.
- Unplug this device during lightning storms or when unused for a long period.
- The socket outlet must be installed near the equipment and must be easily accessible.
- Do not overload AC outlets or extension cords. Overloading can cause fire or electric shock.
- Devices with class 1 construction should be connected to a main socket outlet with a protective earthed connection.
- Devices with class 2 construction do not require an earthed connection.
- Always hold the plug when pulling it out of the main supply socket. Do not pull the power cord. This can cause a short circuit.
- Do not use a damaged power cord or plug or a loose outlet. Doing so may result in fire or electric shock.

29. If the product contains or is delivered with a remote control containing coin/cell batteries: Warning:

- "Do not ingest battery, Chemical Burn Hazard" or equivalent warning.
- [The remote control supplied with] This product contains a coin/button cell battery. If the battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

30. Caution about the use of Batteries:

- Take the danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.
- The battery cannot be subjected to high or low extreme temperatures, or low air pressure at high altitudes during use, storage, or transportation.
- Replacement of a battery with an incorrect type can result in an explosion or the leakage of flammable liquid or gas.
- Disposal of a battery into a fire or a hot oven, or mechanically crushing or cutting of a battery, can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
- Attention should be drawn to the environmental aspects of battery disposal.

Installation


- Unpack all parts and remove protective material.
- Do not connect the unit to the mains before checking the mains voltage and before all other connections have been made.

CONTENTS

LOCATION OF CONTROLS

1. Speaker
2. LCD Display
3. Volume/Scroll -/+
4. Dimmer
5. P1
6. P2
7. P3
8. P4
9. Preset
10. Power/Mode
11. Scan
12. Menu/Info/Back
13. P+/TU+
14. P-/TU-
15. Alarm
16. Antenna
17. Aux in Jack
18. DC in

LOCATION OF CONTROLS

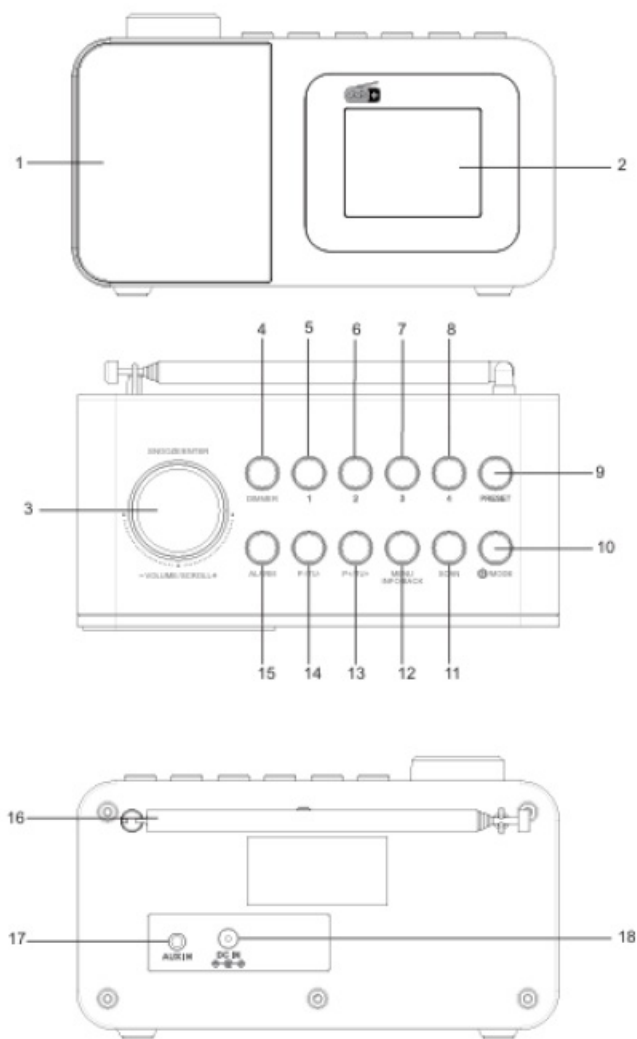

CONTENTS

ACCRSSORIES

AC adaptor



User Manual



Power Supply

- Connect the 5V 1A Adapter power cable to the DC jack on the radio.
- Press the “POWER” button to turn the device on from standby mode.
- Press the “MODE” button to DAB, FM, or Aux modes.
- Hold the “POWER” button back to standby mode.

Dimmer

- Press the “DIMMER” button to choose the backlight level: High, Medium, or Low.

Volume Control

- Tune the “VOLUME+/-” knob to choose the volume level.
<<DAB OR FM RADIO CONTROL>>

Antenna

- Extend and adjust the position of the antenna for the best reception.

Full Scan

- Press the “SCAN” button to do a full scan in FM or DAB mode.
- Some suitable signal stations are stored.
- The first stored station will be broadcast automatically after completing the full scan.

MANUAL SCAN

- Hold the “ TU+ or TU-“ button to open the manual tune menu. Turn the “VOLUME+/-” knob to select the frequency.

PRESET RECALL

- Press the “P+ or P-” button to recall the saved stations
- Press the “PRESET” button to recall the station from 1 to 30 (FM = 30 stations, DAB = 30 stations)

PRESET STORE

- Hold the “PRESET” button to save the station from 1 to 30 (FM = 30 stations, DAB = 30 stations)

QUICK PRESET STORE & RECALL

- Hold the “P1, P2, P3, or P4” button to save the station.
- Press the “P1, P2, P3, or P4” button to recall the station.

FM INFORMATION

- Press the “INFO” button to show some information: Radio text, PTY, Name, Mono, or Today’s Date.

DAB INFORMATION

- Press the “INFO” button to show some information: Radio Text scrolling, Signal strength, Program type, Multiplex Name, Bit rate, Frequency, or Today’s Date.

AUX-IN

- Collect the Aux-in jack on the device and the external audio player through the 3.5mm jack Aux-in cable (not included)

Volume control by the device and external audio player.

Other music controls are managed by the external audio source only.

GENERAL MENU CONTROL

- Hold the “MENU” button in the menu in Standby, DAB, FM, or Aux mode.
- Press the “BACK” button back to the last page.
- Tune the “SCROLL+/-” knob to choose the selection.
- Press the “ENTER” button to confirm the selection.
- Different menu options in Standby, DAB, FM, or Aux mode.
- The asterisk behind the option indicates the current setting

SYSTEM

- Select the option: Sleep, Alarm, Time, Backlight, Language, Factory Reset, or SW version.

SLEEP

- Select the option: Off, 15, 30, 45, 60 or 90 minutes.

ALARM

- Moreover, press the “ALARM” button to activate the alarm setting. Select the option in the process:
- Alarm 1 or 2
- On-Time
- Duration Time: 15, 30, 45 60, or 90 minutes
- Source: DAB, FM, or Buzzer
- Cycle: Daily, Once, Weekends or Weekdays
- Date: DD-M-YYYY (*Once only)
- Volume Level
- On or OF
- Alarm 1 and Alarm 2 icons will be displayed once the alarm on
- The volume will gradually increase until the set volume level.
- The corresponding alarm icon will be flashing on display.

SNOOZE/ALARM OFF

1. Press the “SNOOZE” button to stop the alarm temporarily.
2. The alarm will be active again after 9 minutes.
3. Press the “POWER” or “ALARM” button to cancel the snooze and alarm function.

Time/Date

- Auto update: Any, DAB, FM, or No update
- 12/24 hour
- Date format: DD-MM-YYY or MM-DD-YYYY
- BACKLIGHT
- Select the option:
- Timeout: 10, 20, 30, 45, 60, 90, 120, 180 sec or On
- On level: High, Medium, Low
- Dim level: High, Medium, Low

LANGUAGE

- Select the option: English, German, Italian, French, Dutch, Spanish or Polish.

FACTORY RESET

- Select “YES or No” to back the default setting.

SW VERSION

- Check the software version.

<<DAB MENU>>

Select the option: Full scan, Manual tune, DRC, Prune, Announcement, or system.

FULL SCAN

- Auto-scan and save radio stations
- MANUAL TUNE
- Scan the specific radio frequency manually

DRC (Dynamic Range Control)

- Select the option to do radio compensation: DRC off, DRC low, DRC high

PRUNE

- Select “YES or No” to remove invalid “?” stations after auto scan.

ANNOUNCEMENT

- Select the option: Off, On, No TA, or Only TA.
- <<FM MENU>>
- Select options: Scan setting, Audio setting, n g, or system.

SCAN SETTING

- Select the option: All Stations or StroStationion only

AUDIO SETTING

- Select the option: Stereo allowed or Forced mono

TECHNICAL SPECIFICATIONS

- Frequency range:
- FM 88 -108 MHz
- DAB / DAB +: 174.928 ~ 239.200 MHz
- 30 memory preset station = DAB
- 30 memory preset station = FM
- AC Adaptor: Input: AC 100-240V ~ 50 / 60Hz 0.3A Max Output: DC 5V 1A
- Power consumption: 5W
- Unit dimensions: 155 (L) x 80 (D) x 75 (H) cm Weight: 0.32Kg (excluding adapter)

Power Adaptor Specification

Information	Value and precision
Manufacturer name or trademark, commercial registration, and address	DongGuan Obelieve Electronic Co., Ltd
	Huazhaoxin Industrial Park B-4/F, Golden Phoenix Industrial Zone, Fenggan Town, Donggyan, Guangdong
	Province, People's Republic of China
Model Identifier	OBL-0501000E
Input voltage	100V-240V
Input AC frequency	50/60HZ
Output voltage	5.0V
Output current	1A
Output Power	5.0W
Average active efficiency	73.62
Efficiency at low load (10%)	76.52
No load Power consumption	0.081W

Guarantee

Commaxx B.V. offers service and warranty by European law, which means that in case of repairs (both during and after the warranty period) you should contact your local dealer.

Important note: It is not possible to send products that need repairs to Commaxx B.V. directly.

This device is not suitable for professional use. In case of professional use, all warranty obligations of the manufacturer will be voided.

Disclaimer

Updates to Firmware and/or hardware components are made regularly. Therefore some of the instructions in this guide are for illustration purposes only and may not apply to particular situations.

No legal right or entitlements may be obtained from the description made in this manual.



Disposal of the Old Device

This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose of them according to applicable local laws of the requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in the treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).

DECLARATION OF CONFORMITY

Hereby, Commaxx declares that the radio equipment type [Lenco CR-625] complies with directive 2014/53/EU.

The full text of the EU Declaration of Conformity is available at the following internet address:

https://commaxx-certificates.com/doc/cr-625_doc.pdf

Type RF	Frequency range (MHz)	Power (dBm)
DAB	174-240	–
FM	87.5-108	–

Service

For more information and helpdesk support, please visit www.lenco.com Commaxx B.V. Wiebachstraat 37, 6466 NG Kerkrade, The Netherlands.

FAQs

Q: What should I do if the device is not turning on?

Ensure that the power cable is properly connected and try using a different power outlet. If the issue persists, contact qualified service personnel.

Q: How do I save my favorite radio stations for quick access?

Press and hold the PRESET button to save a station. Use the P+ or P- button to recall saved stations quickly.

Documents / Resources

	<p>Lenco CR-625BK DAB Plus FM Clock Radio with Color Display [pdf] User Manual CR-625BK, CR-625BK DAB Plus FM Clock Radio with Color Display, CR-625BK, DAB Plus FM Clock Radio with Color Display, FM Clock Radio with Color Display, Radio with Color Display, Color Display, Display</p>
---	---

References

- [L Lenco.com | Officiële Lenco Webshop](#)
- [L Lenco.com | Officiële Lenco Webshop](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.