

Lenco DAR-051 DAB Plus FM Radio with CD Player



Lenco DAR-051 DAB Plus FM Radio with CD Player Instruction Manual

[Home](#) » [Lenco](#) » Lenco DAR-051 DAB Plus FM Radio with CD Player Instruction Manual 

Contents

- 1 Lenco DAR-051 DAB Plus FM Radio with CD Player
- 2 Product Information
- 3 Product Usage Instructions
- 4 FAQ
- 5 PRECAUTIONS BEFORE USE
- 6 INSTALLATION
- 7 Accessories
- 8 Description of Parts
- 9 Remote
- 10 BATTERY INSTALLATION
- 11 Power
- 12 DAB Radio mode
- 13 Technical Specifications
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts

Lenco

Lenco DAR-051 DAB Plus FM Radio with CD Player



Product Information

Specifications

- **Model:** DAR-051/DAR-251
- **Radio Type:** DAB+/FM with CD player, USB, and Bluetooth
- **Accessories:** Remote control, RCA cable, 3.5mm Line-in cable, Indoor antenna

Description of Parts

- Info/Alarm setting button
- Menu/Time setting button
- Prev/Down button
- Play/Pause/Setup/Enter button
- Next/Up button
- Stop button
- CD tray open/close button
- Left speaker
- USB charge port
- USB jack
- CD door
- Display
- Earphone jack
- Line in jack
- Right speaker
- Wireless induction charging
- Antenna
- AUX in jack
- Power cable
- Volume knob

Battery Installation

The battery must be inserted correctly to avoid damaging the remote control. Always remove the battery when the remote control will not be used for a long period of time to prevent leakage and damage.

1. Push the release clip on the battery compartment downwards and lift to remove the cover.
2. Insert 2 x 1.5 V AAA batteries (not supplied) observing the polarity (+ and -) indicated on the battery compartment.
3. Place the cover in position on top of the battery compartment and press until it clicks firmly into place.

Product Usage Instructions

Precautions Before Use

1. Do not cover or block ventilation openings. Leave space around the device.
2. Install according to the user manual.
3. Keep away from heat sources.

Usage Guidelines

4. Ensure all connections are secure before use.
5. Avoid interrupting connections during file transfers to prevent data loss.
6. If using USB playback, plug the memory stick directly into the unit without an extension cable.

Safety Warnings

- Avoid touching the lens as it is a Class 1 Laser Product.
- Avoid using damaged power cords or plugs to prevent fire or electric shock risks.

FAQ

Q: Can I use the radio without an antenna?

A: While an antenna is recommended for optimal reception, you can still use the radio without it, although reception quality may be affected.

Q: How do I reset the device?

A: To reset the device, press and hold the power button for a few seconds until it shuts off. Then, power it back on to complete the reset process.

CAUTION: Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

PRECAUTIONS BEFORE USE

KEEP THESE INSTRUCTIONS IN MIND

1. Do not cover or block any ventilation openings. When placing the device on a shelf, leave 5 cm (2") free space around the whole device.
2. Install in accordance with the supplied user manual.

3. Keep the device away from heat sources such as radiators, heaters, stoves, candles and other heat-generating products or naked flame. The device can only be used in moderate climates. Extremely cold or warm environments should be avoided. Working temperature between 0° and 35°C.
4. Avoid using the device near strong magnetic fields.
5. Electrostatic discharge can disturb normal usage of this device. If so, simply reset and restart the device following the instruction manual. During file transmission, please handle with care and operate in a static-free environment.
6. **Warning!** Never insert an object into the product through the vents or openings. High voltage flows through the product and inserting an object can cause electric shock and/or short circuit internal parts. For the same reason, do not spill water or liquid on the product.
7. Do not use in wet or moist areas such as bathrooms, steamy kitchens or near swimming pools.
8. The device shall not be exposed to dripping or splashing and make sure that no objects filled with liquids, such as vases, are placed on or near the apparatus.
9. Do not use this device when condensation may occur. When the unit is used in a warm wet room with damp, water droplets or condensation may occur inside the unit and the unit may not function properly; let the unit stand in power OFF for 1 or 2 hours before turning on the power: the unit should be dry before getting any power.
10. Although this device is manufactured with the utmost care and checked several times before leaving the factory, it is still possible that problems may occur, as with all electrical appliances. If you notice smoke, an excessive build-up of heat or any other unexpected phenomena, you should disconnect the plug from the main power socket immediately.
11. This device must operate on a power source as specified on the specification label. If you are not sure of the type of power supply used in your home, consult your dealer or local power company.
12. Keep away from animals. Some animals enjoy biting on power cords.
13. To clean the device, use a soft dry cloth. Do not use solvents or petrol-based fluids. To remove severe stains, you may use a damp cloth with dilute detergent.
14. The supplier is not responsible for damage or lost data caused by malfunction, misuse, modification of the device or battery replacement.
15. Do not interrupt the connection when the device is formatting or transferring files. Otherwise, data may be corrupted or lost.
16. If the unit has USB playback function, the USB memory stick should be plugged into the unit directly. Don't use an USB extension cable because it can cause interference resulting in failing of data.
17. The rating label has been marked on the bottom or back panel of the device.
18. This device is not intended for use by people (including children) with physical, sensory or mental disabilities, or a lack of experience and knowledge, unless they're under supervision or have received instructions about the correct use of the device by the person who is responsible for their safety.
19. This product is intended for non-professional use only and not for commercial or industrial use.
20. Make sure the unit is adjusted to a stable position. Damage caused by using this product in an unstable position vibrations or shocks or by failure to follow any other warning or precaution contained within this user manual will not be covered by warranty.
21. Never remove the casing of this device.
22. Never place this device on other electrical equipment.
23. Do not allow children access to plastic bags.

24. Only use attachments/accessories specified by the manufacturer.
25. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as the power supply cord or the plug, when liquid has been spilled or objects have fallen into the device, when the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
26. Long exposure to loud sounds from personal music players may lead to temporary or permanent hearing loss.
27. If the product is delivered with power cable or AC power adaptor:
 - If any trouble occurs, disconnect the AC power cord and refer servicing to qualified personnel.
 - Don't step on or pinch the power adaptor. Be very careful, particularly near the plugs and the cable's exit point. Do not place heavy items on the power adaptor, which may damage it. Keep the entire device out of children's reach! When playing with the power cable, they can seriously injure themselves.
 - Unplug this device during lightning storms or when unused for a long period.
 - The socket outlet must be installed near the equipment and must be easily accessible.
 - Do not overload ac outlets or extension cords. Overloading can cause fire or electric shock.
 - Devices with class 1 construction should be connected to a main socket outlet with a protective earthed connection.
 - Devices with class 2 construction do not require an earthed connection.
 - Always hold the plug when pulling it out of the main supply socket. Do not pull the power cord. This can cause a short circuit.
 - Do not use a damaged power cord or plug or a loose outlet. Doing so may result in fire or electric shock.
28. If the product contains or is delivered with a remote control containing coin/cell batteries:

Warning:

- "Do not ingest battery, Chemical Burn Hazard" or equivalent warning.
- [The remote control supplied with] This product contains a coin/button cell battery. If the battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

29. Caution about the use of Batteries:

- The danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.
- The battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitudes during use, storage or transportation.
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or that leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

 
- Attention should be drawn to the environmental aspects of battery disposal.

INSTALLATION

- Unpack all parts and remove protective material.
- Do not connect the unit to the mains before checking the mains voltage and before all other connections have been made.


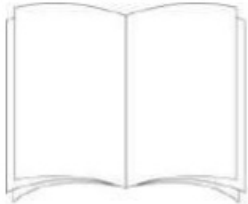 



WARNING

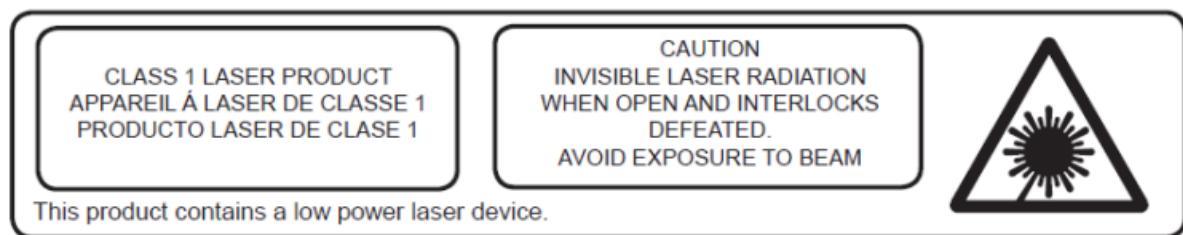Class 1 Laser Product




Warning: Do not touch the lens.

Accessories

Remote control	User manual	RCA cable
		
3.5mm Line in cable	Indoor antenna	
		

 
Description of Parts

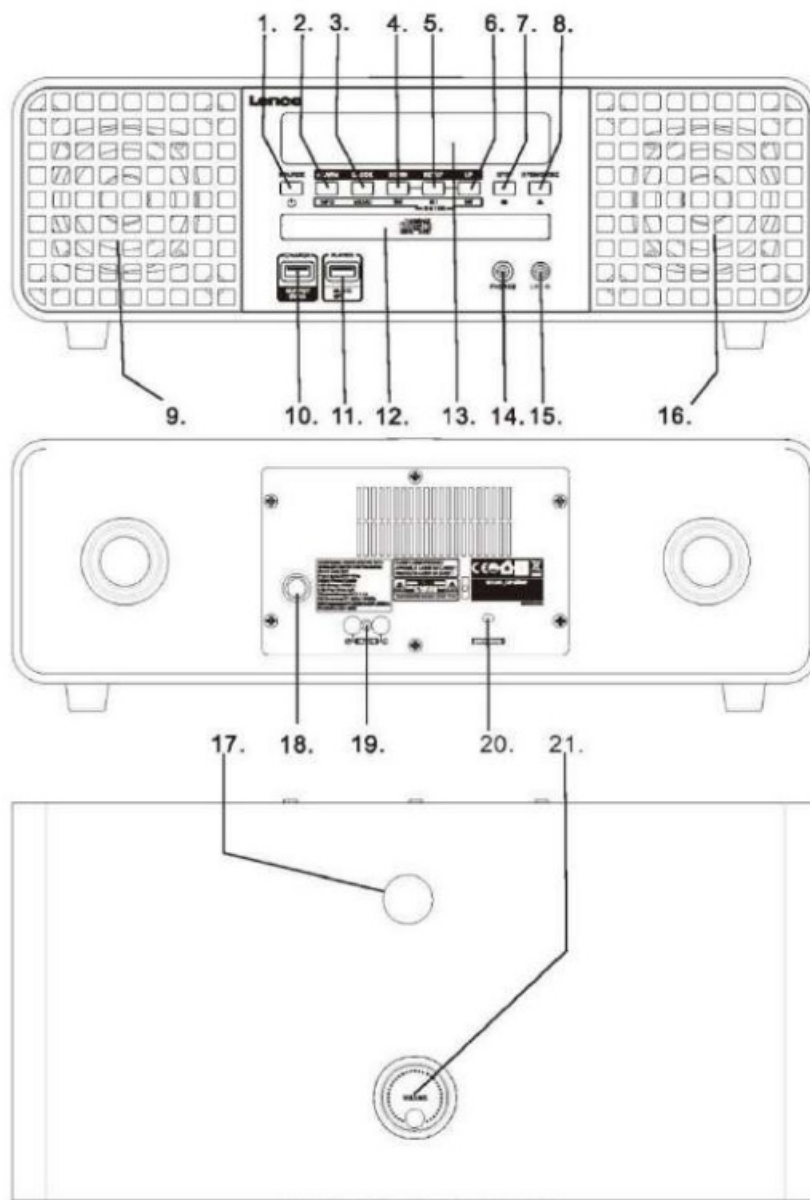

1. Power ON/OFF and SOURCE-MODE button
 - press to Power on
 - Press and hold to Power off
 - Select the audio source: DAB-FM- CD- USBBT-LINE-AUX
2. Info/Alarm setting button
3. Menu/Time setting button
4. Prev/Down button
5. Play/Pause/Setup/Enter button
6. Next/Up button
7. Stop button
8. CD tray open/close button
9. Left speaker
10. USB charge port
11. USB jack
12. CD door
13. Display
14. Earphone jack

15. Line in jack
16. Right speaker
17. Wireless induction charging
18. Antenna
19. AUX in jack
20. Power cable
21. Volume knob

 Remote

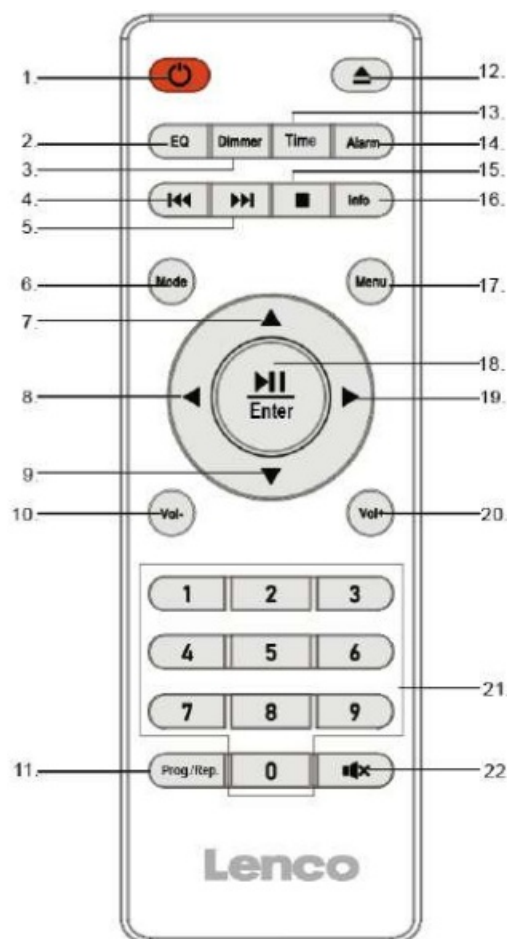

1. Power on/off
2. EQ setting
3. Dimmer
4. Go back one track
5. Go forward one track
6. MODE/SOURCE
7. Up cursor button
8. Left cursor button
9. Down cursor button
10. Volume -
11. Program for CD/USB Repeat for CD/USB
12. CD open /close
13. Time setting

 
14. Alarm setting
15. Stop
16. Info
17. Menu
18. Enter/Play /pause
19. Right cursor button
20. Volume +
21. 0...9 for selection of the CD or USB song number
22. Mute

BATTERY INSTALLATION

A battery must be inserted correctly to avoid damaging to the remote control. Always remove the battery when the remote control will not be used for a long period of time, as this may cause leakage of the battery and subsequently damage the remote.

Inserting the remote control batteries

1. Push the release clip on the battery compartment downwards and lift to remove the cover.
2. Insert 2 x 1.5 V AAA batteries (not supplied) the correct way around, by observing the polarity (+ and -) indicated on the battery compartment.
3. Place the furthest end of the cover in position on top of the battery compartment. Then press the nearest end of the cover until you hear it click firmly into place.

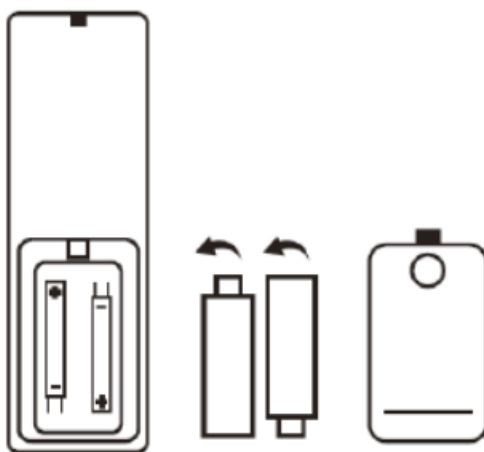

If the distance required between the remote control and the appliance decreases, the batteries are exhausted.

 
In this case replace the batteries with new ones.

Power

CAUTION

- Risk of product damage! Make sure that the power voltage corresponds to the voltage printed on the back label.
- Risk of electric shock! When you unplug the AC power cord always pull the plug from the socket. Never pull the cord

- Before connecting the AC power cord, ensure you have completed all other connections

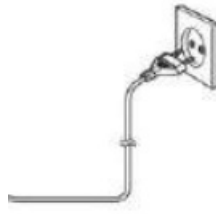

Place the unit in the desired position and unravel the mains cable. Insert the cable into the supply socket and switch on if applicable.

Auto standby

When playing media from a connected device, the device automatically switches to standby if:

- No button is pressed for 10 minutes,
- No audio from a connected device for 10 minutes.

Unit power supply (mains 230V/50Hz)

Connect the power cable plug to the (230V) wall outlet.

Warning

- Before using the unit, check that your local mains power is compatible with the unit: 230V (50Hz).
- Do not plug or unplug the power cable when your hands are wet.
- When planning not to use this unit for long periods of time (i.e., Vacation etc.), disconnect the plug from the wall outlet.
- When disconnecting the power cord from the wall outlet, grasp the plug; do not pull the cord in order to avoid shock risks caused by damaging the cable.

Operation

Press the POWER button once to turn ON and hold the button to power OFF the unit.

Adjusting the volume

Rotate the Volume knob clockwise to increase the volume. Rotate the Volume knob counter-clockwise to decrease the volume. The display will show the volume setting.

Mute function

Pressing the MUTE button on the remote control will mute the volume. "Volume Muted" will appear on the display. Press this button again to cancel the mute function.

Setting Time

Setting the clock and date

After the unit is plugged into a mains supply or after a power failure, the time and date on the LCD display will blink. The unit should be in standby mode to set the clock.

1. Press the TIME button, "Time setup" is displayed, press ENTER to confirm.
2. Press ▲/▼ to select "24H" or "12H", Press ENTER to confirm, the hour digits on the display will blink.
3. Press ▲/▼ to set the hour, and press ENTER to confirm, the minutes' digits on the display will blink.
4. Press ▲/▼ to set the minutes, press ENTER to confirm, the Year digits on the display will blink
5. Press to ▲/▼ set the Year, press ENTER confirm, the Month digits on the display will blink.
6. To set the Month, press ENTER confirm, the Day digits on the display will blink.
7. Press ▲/▼ to set the Day, and press ENTER to confirm. Press ▲/▼ the select save "YES/NO"

Setting Alarm

Note: Check that the radio has the correct time and date before you set an alarm. This unit may be used as an alarm clock. The CD/USB device or DAB/FM radio/Buzzer is activated to play at a preset time

1. Press POWER to switch the unit to standby mode.
2. Make sure that you have set the clock correctly.
3. Press the ALARM button to set alarm 1; press the ALARM button twice to set alarm 2
4. "Alarm 1 (or 2) Setup" is displayed. Press the ENTER button to select.
5. "Alarm 1 (or 2) Setup On time" is displayed and the hour digits for the alarm will flash.
6. Press ▲/▼ repeatedly to set the hour. Press ENTER to confirm.
7. Press to ▲/▼ set the minute, and Press ENTER to confirm.
8. Press ▲/▼ select the Alarm volume from 03 to 30. Press ENTER to confirm.
9. Press ▲/▼ to scroll to choose OFF/USB/CD/FM/DAB/BUZZER. Press ENTER to confirm.
10. Press ▲/▼ to choose the duration of the alarm. You can choose from 10 to 60 minutes. Press the ENTER button to confirm. Use ▲/▼ to select YES and press ENTER to save the alarm setting.
11. The display will show the current time and Alarm 1 (or Alarm 2 or at the same time)

Warning:

When the alarm is set to DAB mode and there is no DAB signal, the alarm clock is silent. When the alarm source CD is selected and there is no CD inserted, there will be no alarm sound

Note: Choose Alarm source OFF if the alarm shouldn't activate the next day

Display Backlight

You can press the DIMMER button to adjust the display backlight brightness, there are 3 options available, High, Medium, and Low.

 
DAB Radio mode

Carefully extend the telescopic antenna.

Press the POWER button to turn on the unit, it will start up in DAB mode.



Auto Scan

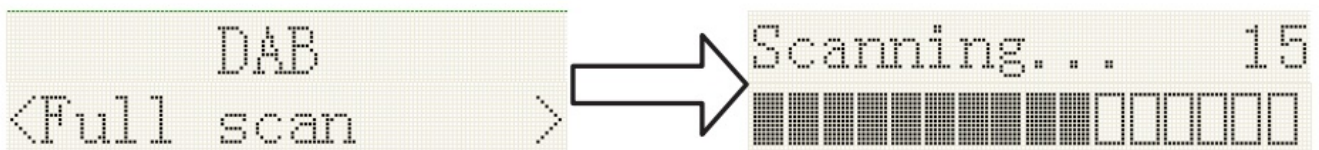

1. If this is the first time the unit has entered DAB Mode, it will automatically start an 'Auto Scan' to search for available stations. (Once DAB Mode has been used before, the unit will automatically select the previously played station)
2. Hold the ENTER button to automatically start auto scan to search for available stations. During the scanning process, the lower line of the display shows a bar graph indicating the progress of the scan.




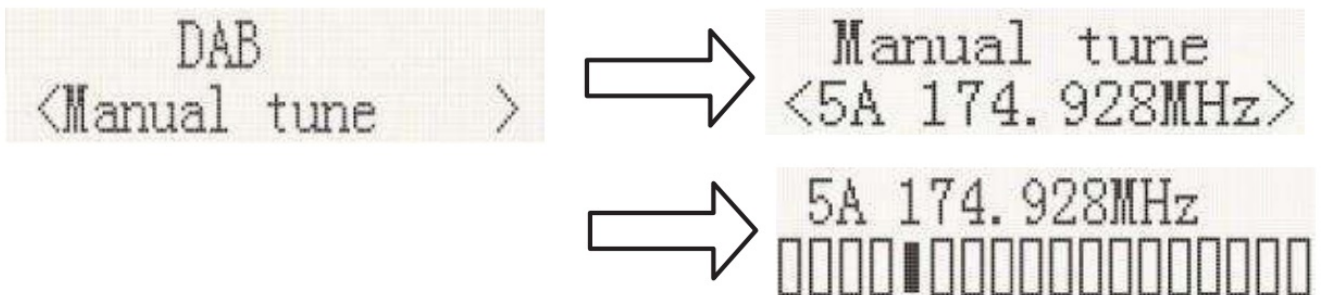 
Manual Scan

1. Press the MENU key on the main unit to enter the menu.

2. Press the  or  button to select "Manual tune", and press the [ENTER] button to the submenu.

3. Press the  or  button to enter to tune in to the desired channel. A graph will indicate the signal strength if you press [ENTER]

 

4. Press [MENU] or [] to exit the scan.



5. If no stations are found, please ensure the aerial is extended and test the reception by doing another auto scan in a different location.

DRC (Dynamic Range Control)

Dynamic Range Control (also known as DRC) is a technology used to help make quieter sounds easier to hear in a noisy environment.


1. In the DAB menu, press the  or  button to select "DRC", and press the [ENTER] button to display "*" to the top right.
2. DRC OFF – DRC is switched off and broadcast DRC will be ignored. DRC LOW – The DRC level is set to 1/2 of

what is sent by the broadcaster. DRC HIGH – DRC level is used as sent by the broadcaster.

Press MENU to confirm the setting. The display will return to normal.

Prune (To Remove Stations That are Listed But Unavailable)

 In DAB mode, press ◀ or ▶ to display the “Prune” submenu, and press the [ENTER] button to select the Prune option “Yes” or “No”.

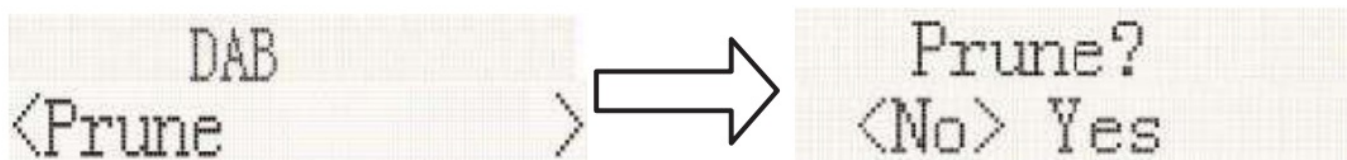


System (DAB)

In the DAB menu, press ◀ or ▶ to show the “SYSTEM” submenu, and press the [ENTER] button to go to the system settings.


Language

Press [ENTER] to go to language selection; the default source language is English, and the selected language will have “*” displayed at the top right. Users may choose between English, French, or Italian. Deutsch, Polish, Nederlands, Espanol

 Factory Reset

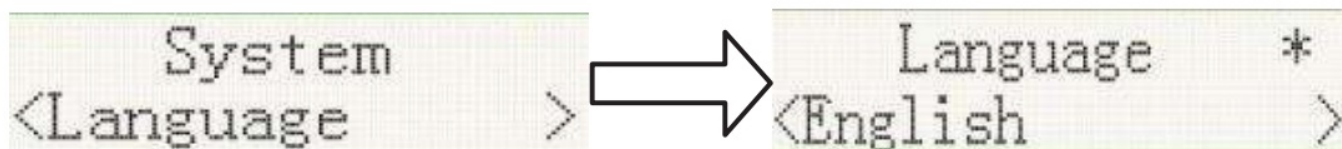


 Press [ENTER] to perform a factory reset. If you wish to perform the reset operation, push ◀ or ▶ until “YES” is highlighted on the display and press [ENTER]. A full reset of your radio will be performed. All presets and station lists will be erased.

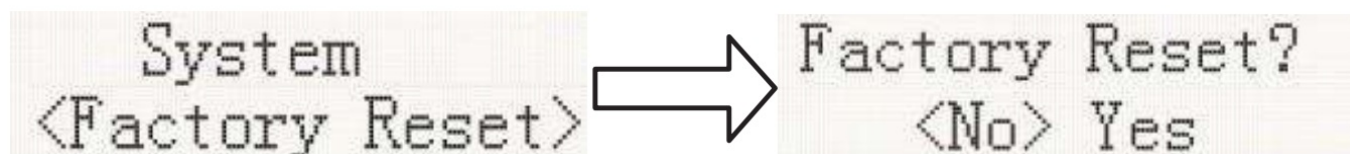


SW Version

 
Press [ENTER] to view the software version. Press Menu to stop displaying the software version.

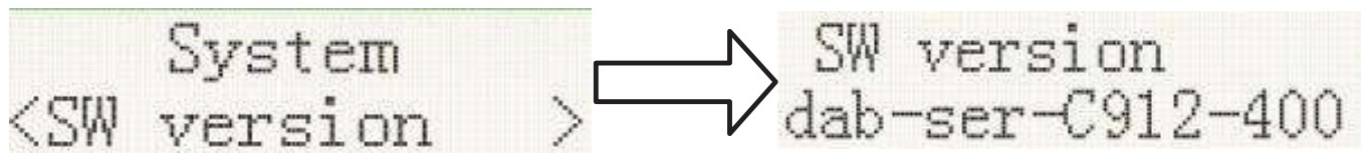


If there are no operations after 30 seconds, the display will return to normal.

  Preset




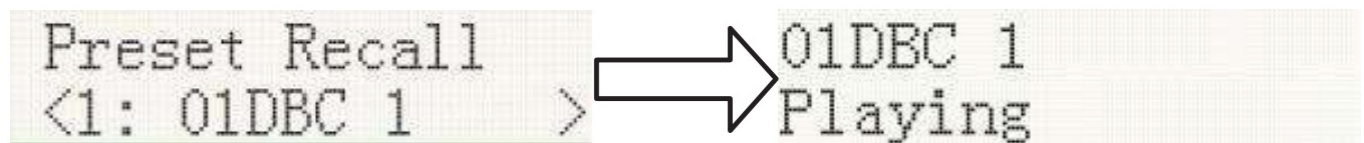

Preset Recall In DAB menu, press  to select "Preset Recall", then press [ENTER] and look for the station (preset) you want to play by pressing, and when found, press [ENTER]. Note: Note: you have not previously stored a preset station and the preset button is pressed, "Empty preset" will be displayed.




 Preset Store

You may store your preferred DAB stations to the preset station memories. There are 50 memory presets on your radio. Presets are remembered by your radio in the event of a power failure.



 Select a DAB radio station and press [MENU], then select [Preset store] with  then press [ENTER]. Press  to select a storage space, then press [ENTER] to confirm the desired preset number under which you will store the station you are currently playing. Press [ENTER] to confirm.

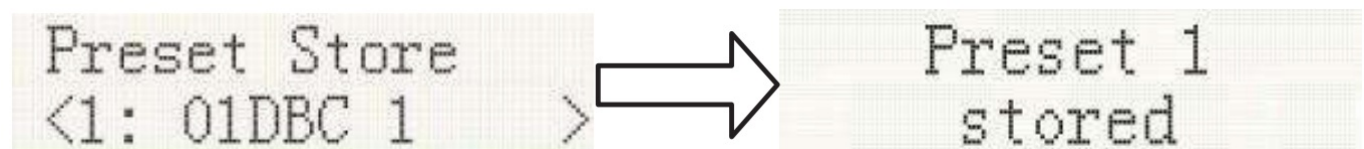

IMPORTANT INFORMATION REGARDING DAB+ RECEPTION

DAB+ radio reception is different from FM radio reception.

- In FM, you can often still receive a weak station, but probably with a rustling or crackling sound.
- DAB + reception works digitally and if there is not enough signal you hear nothing. No hiss or crackle as with FM. This is not due to the radio, but to the fact that there is not enough DAB+ signal at that location.
- DAB + rule is no or weak reception = no sound.

What can you do if you do not have direct DAB+ reception?

- Always point the antenna straight up vertically first.
- Do not place the radio too close to potential sources of interference such as battery chargers, rotating machinery, computers, large metal surfaces, etc.

- Move the radio a few meters.
- Turn on the radio and activate a full scan in the DAB+ menu
- In the display of the radio, you will see the progress of the scan and the number of stations found in the current position of the radio.




Important

 
- With DAB+ reception, there can be a very big difference in reception level between one location and “a few meters away”. In case of a local weak DAB+ signal, move the radio to find a stronger signal.
- If you take the radio to another location, perform a full scan again. This will show you which DAB+ stations can be received there.

FM Radio



Carefully extend the telescopic aerial to its full length.

Auto Scan

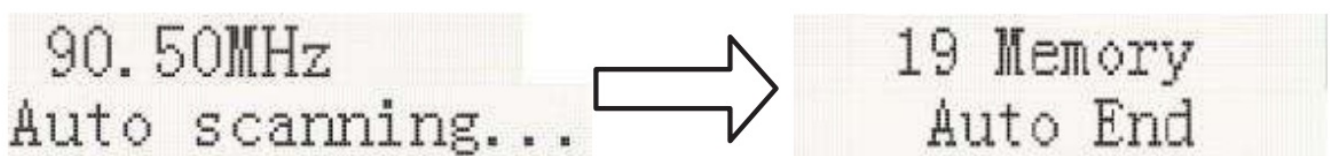1. Press the MODE key to select “FM”.
2. Long Press  the button and your radio will scan and stop automatically when it finds a station of sufficient signal strength.
3. After a few seconds, the display will update. The display will show the station frequency. If the signal is strong enough and the station signal contains RDS data, then the radio will display the station name.
4. To find other stations, press and hold the  button as before.
5. To scan the FM band in the opposite direction (high frequencies to low frequencies), press the button  and hold for 2 seconds.
6. When the waveband end is reached, your radio will recommence tuning from the opposite waveband end.
- 7.

 


Manual Scan

1. Press the MODE key on the main unit to select “FM Mode”.
2. Select FM mode as previously described, if required.
3. Press  or  shortly adjust tuning. Each press of the tuning button will change the frequency up or down by 50 kHz.
4. When the waveband end is reached, the radio will recommence tuning from the opposite waveband end. If no stations are found, please ensure the aerial is extended and test the reception by doing another auto scan in a different location.

Menu

- Scan Setting



- In FM mode, press MENU to enter the FM menu, then press ENTER to select the sensitivity setting:

- **All stations:** 15dB~
- **Strong stations only:** 19dB~

FM
<Scan setting> → Scan setting*
<All station>

FM
<Scan setting> → Scan setting*
<All station>

→ Scan setting*
<Strong station>

Audio Setting

- Stereo allowed

FM
<Audio setting> → Audio setting*
<Stereo allowed>

Forced mono

 
FM
<Audio setting> → Audio setting*
<Stereo allowed>

→ Audio setting*
<Forced mono >

System (FM system), same as DAB system setting.

PRESET:


- Preset Recall (Choose the Station)
- To recall a presseted FM station, press [MENU], select [PRESET RECALL], press [ENTER], then use the < or > button to find the station you want to recall and press [ENTER] to confirm.

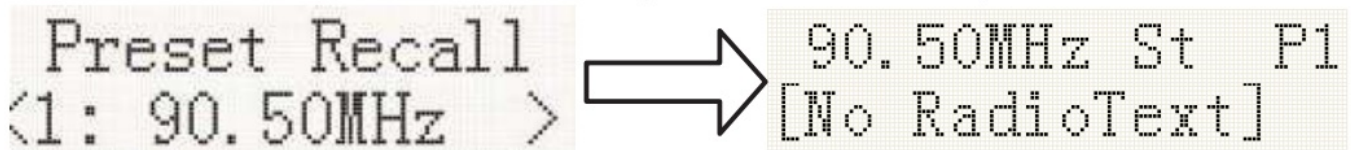

Preset Store (Save a Station):


You may store your preferred FM stations to the preset station memories. There are 50 memory presets on your radio. Presets are remembered by your radio in the event of a power failure.

 The procedure for setting presets and using them to tune stations is the same for DAB modes:



In FM mode, select the desired Frequency. Then press [MENU] and use the navigation arrows to select [Preset store].

 Now Press / to view the stored stations, and then press [ENTER] to select the preset number under which you will store the station. Press [ENTER] to confirm.

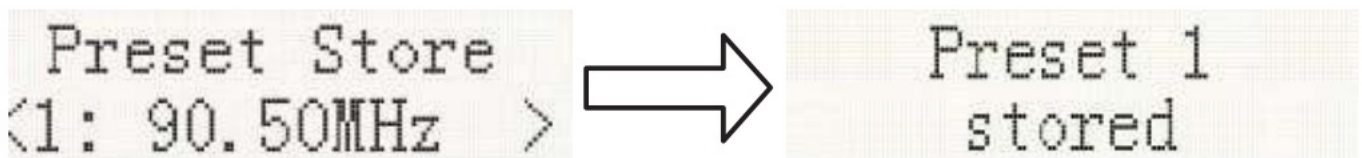

Bluetooth Mode

You must follow several steps to connect your mobile phone:

1. Activate Bluetooth from your mobile phone (please refer to your phone's user manual)
2. Press the POWER button to turn on the unit, then press the MODE button repeatedly until the "Bluetooth searching..." indicator appears on the LCD display. It will be ready to pair automatically.
3. Use your mobile phone to search for the Bluetooth device named "Lenco DAR-051/Lenco DAR-251".
4. Select "Lenco DAR-051/Lenco DAR-251" on your phone and it presents the option to connect or not. Please connect to it using the password "0000" (if any). When you are successfully connected, the Bluetooth indicator "Bluetooth connected" appears on the LCD.

Automatically Connecting with Your Phone

Pairing is only needed the first time the unit and phone are used together. When the unit and phone have been paired once, they will automatically connect when the unit is on and Bluetooth is activated on the phone. The next time you power on, the unit will automatically connect to the most recently connected mobile phone.





Play from Bluetooth Device

After a successful Bluetooth connection, press the button to play. Press the or or button to skip the tracks backward or forward. To pause or resume play, press the button again. Press and hold the





button to disconnect all paired Bluetooth devices.

Playing a compact disc (CD)

NOTE: Never touch the laser lens inside the CD compartment. Clean the laser lens using a CD cleaner disc if it becomes dirty.

1. Press the POWER button to turn on the unit.
2. Press the MODE button repeatedly to select the CD function.
3. Press the  button to open the CD door and insert a CD into the tray (with the printed label side facing up).
4. Press the  button again to close the CD DOOR and the disc will rotate for a few seconds, then play the 1st track automatically.
5. To temporarily stop playback, press the  button, and to resume playback, press it again.
6. Press  the button to STOP play.

REVERSE/FORWARD

1. The Buttons are used to jump to a different track number hold to scan disc tracks at high speed.
2. Press the button once to skip to the beginning of the current track. Press it two or more times to hear previous tracks on the disc.
3. Press the  button to start playing the next tracks on the disc.
4. During playback, press and hold  or  buttons to find a specific passage within the track and release it at the point you want to listen to.
5. Press and hold the  button, and the current track will be sped up towards the next track(s). When the desired track section is found, release the selected button and normal playback will resume.

REPEAT FUNCTION

The REPEAT button may be used to repeat a single track or repeat all tracks on a compact disc.


1. Press the REPEAT button once during playback, the "REPEAT ONE" symbol will appear on the LCD for about 2 seconds. The same track will be repeated over and over.
2. Press the REPEAT button a second time to repeat all tracks. The "REPEAT ALL" sign will appear on the LCD for about 2 seconds.
3. To cancel REPEAT PLAY, press the REPEAT button repeatedly until "REPEAT OFF" appears on the LCD for about 2 seconds.

PROGRAM FUNCTION





The Program feature may be used to program up to 20 tracks to play in a selected order.

1. While in the stop mode only (the CD is not playing), press and hold the PROG button for 2 seconds, and the

LCD will show the wording "P 01" and "T 01" starts to flash.

2. Press the buttons to allocate the desired track.
3. Press the PROG button to select and store the track in memory.
4. Repeat steps 2 to 3 to select up to 20 tracks.
5. To play the selected tracks (in the program mode), press the button.
6. Press the button to hear the previous program track or press the button to hear the next program track.
 - **Note:** After all programmed tracks have been played, the CD player will return to the stop mode.
7. To clear the programmed tracks from memory, press  the button twice.

MP3 DISC SECTION

1. Press the POWER button to turn on the unit.
2. Press the MODE button repeatedly to select CD Mode.
3. Close the CD Door and the disc will rotate for a few seconds and then play the 1st track automatically.
4. Press the  or  buttons to choose a track.
5. To temporarily stop playback, press the  button; to resume, press the button again.
6. Press the  button to stop the play.
 - **Note:** Because MP3 discs have stored more songs, disc access times are a little longer.

Repeat Playing Function



- Single Track Repeat
- Press the REPEAT button once to repeat a single track. The display appears as "Repeat one".



Whole Disc Repeat

- In Play mode, press the REPEAT button 2 times to repeatedly play all tracks on the disc. The display will show Repeat All".
- To cancel repeat play, press the REPEAT button repeatedly until the "Repeat off" sign appears.

PROGRAM PLAY

- The tracks on the disc can be programmed to play in any order (up to 20 can be programmed).
- **Note:** this can only be done while in Stop mode

1. Press the PROG button while in Stop mode. "P01" and "F01" will appear on the display and "T001" will flash.
2. Press the  or  button to select the desired tracks in the album, then press the PROG button to store them in the memory.
3. The first track number is now stored in memory, and the program number changes to "P02", waiting for your next selection.
4. Repeat Steps 1 – 3 to program additional tracks.

- After programming is finished, press the  button, and the programmed play begins from the first programmed track.
- The player stops automatically after all programmed tracks have been played. (Press the  button twice to cancel the memory of the programmed track).

Playing Music via USB







- This device has been developed using the latest technical advances in the USB field. However, given the wide range of USB storage device types that are currently on the market, we unfortunately cannot guarantee full compatibility with all USB storage devices.
 - For this reason, in rare cases, there may be problems in playing back files from USB storage devices. This is not due to device malfunction.
1. Press the POWER button to turn on the unit.
 2. Press the MODE button repeatedly until 'USB' appears on the display.
 3. Connect a USB storage device directly to the PLAYER USB port. The display briefly shows the number of folders and then the total number of tracks. The playback will automatically start.
 4. The operation of the control buttons is the same as for MP3 CD playback. Please refer to MP3 DISC SECTION operations as described previously.

NOTES:

- Always directly connect a USB storage medium to the USB port to prevent any malfunctions.
- The PLAYER USB port is not designed for charging external devices.
- **Important:** Switch the device to a different operating mode before you remove the USB storage device.

Equalizer Function

With your unit switched on (not in Standby mode):

1. Press the EQ button to enter the menu options.
2. Use the  or  button to scroll to set the Equalizer function (e.g. Normal, Classic, Jazz, Pop, Rock) according to your individual preferences.
3. Press the EQ button twice, and use the  or  button to scroll the Bass setting.
4. Press the EQ button three times, and use the  or  button to scroll the Treble setting.

Wireless Charger Function

- Simply place your Qi charging device on the wireless charger area indicated on the top surface and charging will begin on contact.
- Output power is 9V—1.1A for iOS, 5V—2.1A for Android.
- USB Charging (5V Out)

- The USB port is designed for charging external devices, such as smartphones.
- Output power is 5V—1A

AUX Input Jack

1. Press the POWER button to turn on the unit.
2. Press the MODE button repeatedly to select the Aux-In mode. 'Aux-In' will appear on the LCD.
3. Connect the AUX connect wire from the line-out jack of your player (e.g. portable MP3 player/TV) to the AUX input jack.
4. Start playback from your player.

Line Input Jack

1. Press the POWER button to turn on the unit.
2. Press the MODE button repeatedly to select the Line-In mode. 'Line-in' will appear on the LCD
3. Connect the 3.5mm connect wire from the line-out jack of your player (e.g. portable MP3 player) to the Line input jack.
4. Start playback from your player.

Phones Jack

1. Rotate the Volume counter-clockwise to set a low volume, to prevent hearing damage.
2. Inset headphones to the Phone jack.




Note the following information: Only use the power supply listed below.

Technical Specifications

- **Input** AC 100-240V ~ 50/60Hz
- **Output power** 2 x 10 W RMS
- **Speaker Driver** 4Ω, 15W
- **Battery in remote control** 2X1.5V AAA / UM4 /LR03
- **DAB Frequency range** 174.928 – 239.200 MHz
- **FM Frequency range** 87.5 – 108 MHz
- **Bluetooth Frequency range:** 2402 – 2480MHz
- **Bluetooth Version:** V5.0
- **EIRP/RF output power:** <3.56dBm
- **Power consumption** Max 28W
- **Power consumption (standby)** < 1W
- **Operating Temperature** 0°C-35°C
- **Operating position** Horizontal
- **Dim. unit** 430 x 215 x 145mm
- **Weight** 3.5KG
- **Remark:** The maximum connection distance is around 10 meters.

- Please place your Bluetooth device as close as possible to this device to avoid the connection getting disturbed.
- **WARNING!** Risk of hearing impairment
- Set a low volume on the playback device before connecting the headphones.
- Avoid excessive volume, particularly over extended periods or frequent use.
- Excessive volume can result in permanent hearing impairment.

About the disks

	<p>Handling</p> <p>Do not touch the underside of disks.</p> <p>Hold disks by the edges to avoid leaving fingerprints on the surface. Any dust, fingerprints or scratches may cause a malfunction.</p> <p>Never affix a label or sticky tape to the disk.</p>
	<p>Storage</p> <p>Put disks back in their case after use.</p> <p>Never expose disks to direct sunlight or heat sources. Never leave disks inside a car parked in full sunlight.</p>
	<p>Cleaning</p> <p>Use a clean, soft, lint-free cloth to clean the disk, working from the center outwards in a straight line. Do not use solvents such as petrol, thinners, commercially available cleaners or antistatic sprays for vinyl disks.</p>

1. Guarantee

- Lenco offers service and warranty under European law, which means that in case of repairs (both during and after the warranty period) you should contact your local dealer.
- **Important note:** It is not possible to send products that need repairs to Lenco directly.
- **Important note:** If this unit is opened or accessed by a non-official service center in any way, the warranty expires.
- This device is not suitable for professional use. In case of professional use, all warranty obligations of the manufacturer will be voided.

2. Disclaimer

- Updates to Firmware and/or hardware components are made regularly. Therefore some of the instructions, specifications, and pictures in this documentation may differ slightly from your particular situation.
- All items described in this guide are for illustration purposes only and may not apply to particular situations. No legal right or entitlements may be obtained from the description made in this manual.

3. Disposal of the Old Device

- This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe.
- To ensure the correct waste treatment of the product and battery, please dispose of them under any applicable local laws of requirement for disposal of electrical equipment or batteries.
- In so doing, you will help to conserve natural resources and improve standards of environmental

protection in the treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).

4. DECLARATION OF CONFORMITY


- Hereby, Commaxx declares that the radio equipment type [Lenco DAR-051/DAR251] complies with directive 2014/53/EU. The full text of the EU declaration
- of conformity is available at the following internet address: https://commaxx-certificates.com/doc/dar-051_doc.pdf https://commaxx-certificates.com/doc/dar-251_doc.pdf

Type RF	Frequency range (MHz)	Power (dBm)
Bluetooth	2402-2480	<6
DAB	174-240	—
FM	87.5-108	—

Service

For more information and helpdesk support, please visit www.lenco.com

Documents / Resources

	<p>Lenco DAR-051 DAB Plus FM Radio with CD Player [pdf] Instruction Manual DAR-051, DAR-051 DAB Plus FM Radio with CD Player, DAB Plus FM Radio with CD Player, F M Radio with CD Player, Radio with CD Player, CD Player, Player</p>
---	---

References

- Lenco.com | Officiële Lenco Webshop
- Lenco.com | Officiële Lenco Webshop
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.